



# ALBIN PUMP ALH

*Hose Pumps / Instruction Manual*





# ALH

## Table of Contents

|                                                                                 |    |
|---------------------------------------------------------------------------------|----|
| 1   HOW TO USE THIS MAINTENANCE MANUAL .....                                    | 4  |
| 2   PUMP USE AND TRAINING .....                                                 | 4  |
| 2.1 - Use of the pump .....                                                     | 4  |
| 2.2 - Responsibility .....                                                      | 4  |
| 2.3 - Training and instructions .....                                           | 4  |
| 3   DESCRIPTION .....                                                           | 5  |
| 3.1 - Product identification .....                                              | 5  |
| 3.2 - Operation principle .....                                                 | 5  |
| 3.3 - Pump construction .....                                                   | 6  |
| 3.3.1 - Pumps ALH05 to ALH20 .....                                              | 6  |
| 3.3.2 - Pumps ALH25 to ALH65 .....                                              | 7  |
| 3.3.3 - Pumps ALH80 to ALH125 .....                                             | 8  |
| 3.4 - Pump hose .....                                                           | 9  |
| 3.5 - Pump gearbox .....                                                        | 9  |
| 3.6 - Electrical Motor .....                                                    | 9  |
| 3.7 - Available Options .....                                                   | 9  |
| 4   INSTALLATION .....                                                          | 10 |
| 4.1 - Unpacking and control .....                                               | 10 |
| 4.2 - Conditions of installation .....                                          | 10 |
| 4.3 - Setup .....                                                               | 10 |
| 4.4 - Piping .....                                                              | 10 |
| 4.5 - Pump lifting .....                                                        | 11 |
| 5   PUMP START-UP .....                                                         | 11 |
| 5.1 - Preparations .....                                                        | 11 |
| 5.2 - Pump start-up .....                                                       | 11 |
| 6   MAINTENANCE .....                                                           | 11 |
| 6.1 - Emptying and filling of the lubricant .....                               | 11 |
| 6.2 - Hose cleaning .....                                                       | 13 |
| 6.3 - Hose replacement .....                                                    | 13 |
| 6.3.1 - Removing the hose .....                                                 | 13 |
| 6.3.2 - Cleaning of the pump casing .....                                       | 15 |
| 6.3.3 - Reassembly of the hose .....                                            | 15 |
| 6.4 - Replacement of spare parts .....                                          | 17 |
| 6.4.1 - Replacement of pump shoes (except ALH05, ALH10, ALH15, ALH20) .....     | 17 |
| 6.4.2 - Replacement of the seal ring (REF 27) and the shaft seal (REF 26) ..... | 18 |
| 6.5 - Shoe shimming .....                                                       | 21 |
| 6.6 - Maintenance and periodical controls .....                                 | 22 |
| 6.7 - ALHS series complementary information .....                               | 23 |
| 6.7.1 - Set up .....                                                            | 23 |
| 6.7.2 - Pump starting .....                                                     | 23 |
| 6.7.3 - Bearing case dismantling and lip seal (REF 26) replacement .....        | 23 |
| 6.7.4 - Maintenance and periodical controls .....                               | 23 |



# ALH

## Table of Contents

|                                                                    |    |
|--------------------------------------------------------------------|----|
| 7   STORAGE .....                                                  | 23 |
| 7.1 - Pump storage .....                                           | 23 |
| 7.2 - Hose storage .....                                           | 24 |
| 8   TROUBLESHOOTING .....                                          | 24 |
| 9   CHARACTERISTICS AND TECHNICAL SPECIFICATIONS .....             | 26 |
| 9.1 - Performances curves .....                                    | 26 |
| 9.2 - Overall dimensions .....                                     | 29 |
| 9.3 - Nomenclature .....                                           | 33 |
| 9.4 - ALH Spare parts list .....                                   | 43 |
| 9.5 - ALHS Bearing case parts list .....                           | 46 |
| 9.6 - Hose rupture and vacuum system parts list .....              | 46 |
| 9.7 - Lubrication table .....                                      | 47 |
| 9.8 - Shoe shimming table .....                                    | 47 |
| 9.9 - Generated noise and temperature .....                        | 48 |
| 9.10 - Expansible hub assembly and disassembly: generalities ..... | 49 |
| 9.11 - Torque .....                                                | 50 |
| 9.12 - Weight .....                                                | 51 |
| 10   COMPLEMENTARY INSTRUCTIONS FOR ATEX CERTIFIED MATERIAL .....  | 52 |
| 11   SECURITY FORM .....                                           | 60 |
| 12   STATEMENT OF CE COMPLIANCE .....                              | 61 |



# ALH

## Manual Usage / Security and Guarantees

### 1 | HOW TO USE THIS MAINTENANCE MANUAL

This manual is specific to ALBIN PUMP SAS (ALBIN PUMP) ALH series peristaltic pumps. It allows the users to install, to start and to carry out maintenance on these pumps. All persons, fitters and users must read this maintenance manual in its entirety. Documents concerning the gearbox, the electrical motors, as well as all other options (hose rupture detector, etc.) are provided in annex. Refer to the applicable section in this document to understand specific details regarding that component.

Your local ALBIN distributor can be contacted regarding information not contained in this manual. For a quicker reply, please provide the following information:

- Type of pump
- Pump serial number
- Reference of order

You can also visit our website [albinpump.com](http://albinpump.com) for further information.

### 2 | PUMP USE AND TRAINING

#### 2.1 - USE OF THE PUMP

The pump was defined for a specific application. Any other use which does not comply with envisaged use is not guaranteed. ALBIN PUMP cannot be held responsible for damage or possible wounds / injuries produced during the use of the pump. The pump was designed in accordance with EU norms and applicable directives. Use the pump for applications that have been approved by the appropriate ALBIN personnel or distributors. If you want to change your application, first contact your ALBIN PUMP distributor.

#### 2.2 - RESPONSIBILITY

ALBIN PUMP is not responsible for damage or wounds / injuries caused by mishandling of products, disregard of security directives and maintenance instructions contained in this manual, or by negligence during the installation, use, service, or repair of ALBIN hose pumps. Moreover, additional directives of security can be necessary according to working conditions or according process. Contact your ALBIN PUMP distributor if you notice a potential danger during the use of the pump.

#### 2.3 - TRAINING OF THE USER AND INSTRUCTIONS

Every person who installs, uses or performs any operations of maintenance on the pump must be qualified and must have previously read this technical manual. Any temporary personnel must be supervised by skilled users.

The order of execution of operations defined in this manual must be absolutely respected. Store this manual next to the pump so that it can be consulted at any time.



# ALH


## Description

### 3 | DESCRIPTION

#### 3.1 - IDENTIFICATION OF THE PUMP


ALBIN PUMPS are identifiable by the pump plate located on the frame. The plate includes the pump type and serial number of the pump. This serial number leads to all information concerning building materials, nature of the hose, characteristics of the gearbox and characteristics of the motor. The gearbox and motor have their own descriptive plate that states the reduction ratio, power, and electrical voltage.

#### 3.2 - OPERATION PRINCIPLE

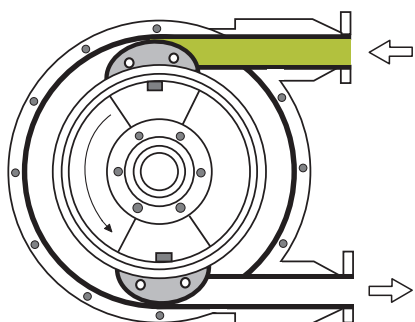


##### ○ PHASE 1

The pump hose is compressed successively by two pressing shoes assembled on a rotating wheel. The first shoe, by pressing the walls of the hose, will create a vacuum and attract the pumped liquid into the hose.

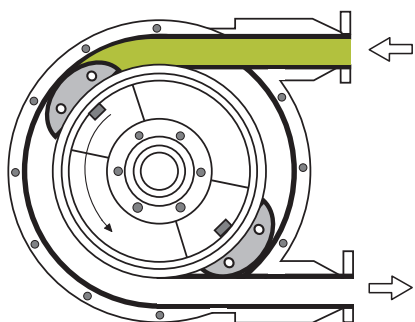

##### ○ PHASE 2

The pumped liquid has now entered the hose. The second shoe will compress the hose and push the liquid towards the pump outlet.

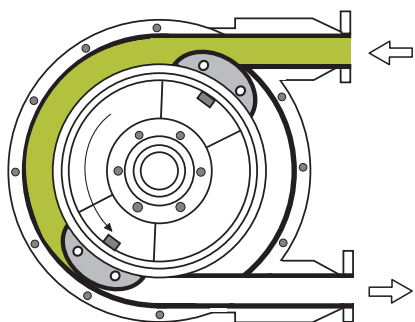

##### ○ PHASE 3

As soon as, at the discharge side, the shoe is detached from the hose, the other shoe diametrically opposite is already in compression thus avoiding an internal product leakage. The product is then successively sucked and pushed due to the wheel rotation.




# ALH


## Description

### 3.3 - PUMP CONSTRUCTION

#### 3.3.1 - PUMPS ALH05 TO ALH20

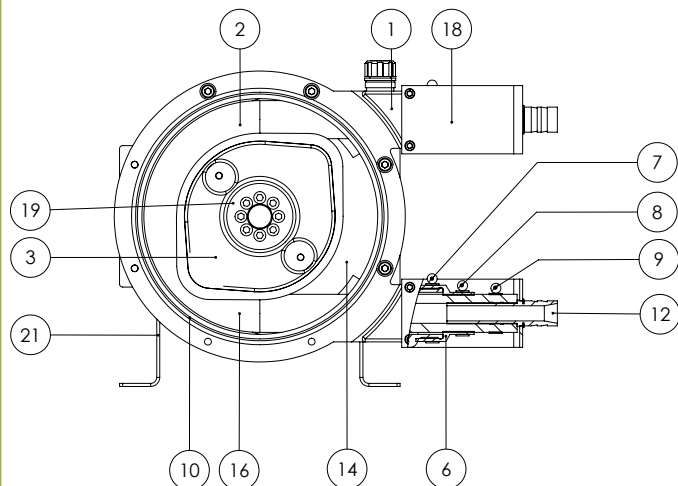

**PUMP ALH15 - ALH20**

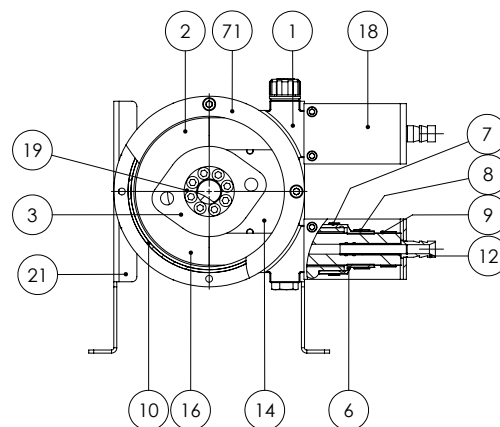

**PUMP ALH05 - ALH10**


| Part No | DESIGNATION         | ALH05 - 10                                               | ALH15-20                                                 |
|---------|---------------------|----------------------------------------------------------|----------------------------------------------------------|
| 1       | CASING              | CAST IRON                                                | CAST IRON                                                |
| 2       | COVER               | POLYCARBONATE                                            | POLYCARBONATE                                            |
| 3       | WHEEL               | CAST IRON                                                | CAST IRON                                                |
| 6       | SLEEVE              | EPDM                                                     | EPDM                                                     |
| 7       | CLAMP ON CASING     | STAINLESS STEEL                                          | STAINLESS STEEL                                          |
| 8       | CLAMP SLEEVE / HOSE | BICHROMATED STEEL                                        | BICHROMATED STEEL                                        |
| 9       | CLAMP ON HOSE       | BICHROMATED STEEL                                        | BICHROMATED STEEL                                        |
| 10      | SEAL COVER          | NITRILE                                                  | NITRILE                                                  |
| 12      | INSERT              | STAINLESS STEEL / PPH / PVDF                             | STAINLESS STEEL / PPH / PVDF                             |
| 14      | LUBRICANT           | GLYCERIN BLEND                                           | GLYCERIN BLEND                                           |
| 16      | HOSE                | NR / NBR / EPDM / NBR FOOD / VITON® / HYPALON® / NR-FOOD | NR / NBR / EPDM / NBR FOOD / VITON® / HYPALON® / NR-FOOD |
| 18      | BRACKET             | ELECTROPLATED STEEL                                      | ELECTROPLATED STEEL                                      |
| 19      | HUB                 | STEEL                                                    | STEEL                                                    |
| 21      | FRAME               | ELECTROPLATED STEEL                                      | ELECTROPLATED STEEL                                      |
| 71      | COVER FLANGE        | ELECTROPLATED STEEL                                      | WITHOUT FLANGE                                           |



# ALH

## Description

### 3.3.2 - PUMPS ALH25 TO ALH65

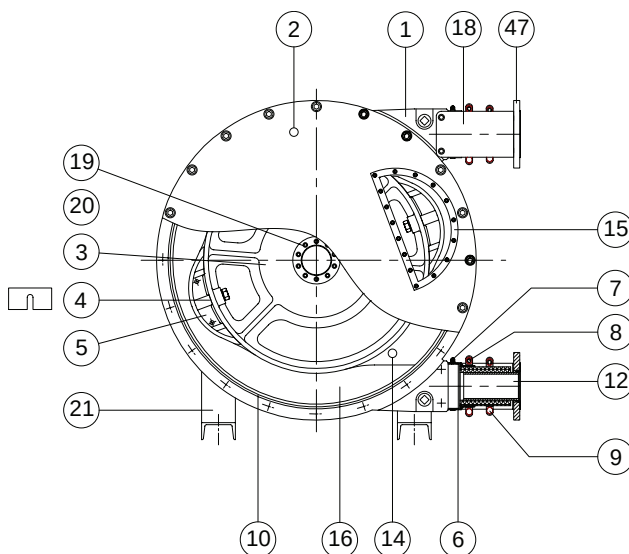


| Part No | DESIGNATION         | ALH25 - 32 - 40                                          | ALHX40 - ALH50 - 65 - ALHX65                             |
|---------|---------------------|----------------------------------------------------------|----------------------------------------------------------|
| 1       | CASING              | DUCTILE CAST IRON                                        | DUCTILE CAST IRON                                        |
| 2       | COVER               | ELECTROPLATED STEEL                                      | STEEL                                                    |
| 3       | WHEEL               | DUCTILE CAST IRON                                        | DUCTILE CAST IRON                                        |
| 4       | SHIM                | GALVANIZED STEEL                                         | GALVANIZED STEEL                                         |
| 5       | SHOE                | CAST IRON                                                | CAST IRON                                                |
| 6       | SLEEVE              | EPDM                                                     | EPDM                                                     |
| 7       | CLAMP ON CASING     | STAINLESS STEEL                                          | STAINLESS STEEL                                          |
| 8       | CLAMP SLEEVE / HOSE | STAINLESS STEEL                                          | STAINLESS STEEL                                          |
| 9       | CLAMP ON HOSE       | STAINLESS STEEL                                          | BICHROMATE STEEL                                         |
| 10      | SEAL COVER          | NITRILE                                                  | NITRILE                                                  |
| 12      | INSERT              | STAINLESS STEEL / PPH / PVDF                             | STAINLESS STEEL / PPH / PVDF                             |
| 14      | LUBRICANT           | GLYCERIN BLEND                                           | GLYCERIN BLEND                                           |
| 15      | SIGHT GLASS SEAL    | POLYCARBONATE                                            | POLYCARBONATE                                            |
| 16      | HOSE                | NR / NBR / EPDM / NBR FOOD / VITON® / HYPALON® / NR-FOOD | NR / NBR / EPDM / NBR FOOD / VITON® / HYPALON® / NR-FOOD |
| 18      | BRACKET             | ELECTROPLATED STEEL                                      | ELECTROPLATED STEEL                                      |
| 19      | HUB                 | STEEL                                                    | STEEL                                                    |
| 21      | FRAME               | STEEL                                                    | STEEL                                                    |
| 46      | SIGHT GLASS SEAL    | NITRILE                                                  | NITRILE                                                  |
| 47      | INLET/OUTLET FLANGE | STAINLESS STEEL                                          | STAINLESS STEEL                                          |



# ALH

## Description

### 3.3.3 - PUMPS ALHX80 TO ALH125

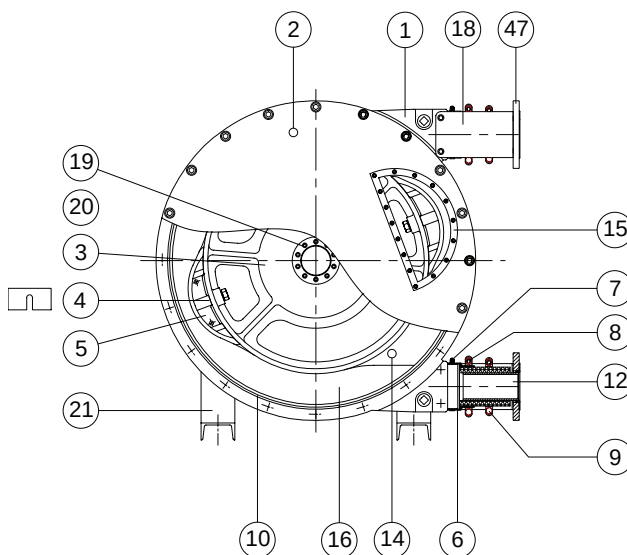

| Part No | DESIGNATION         | ALHX80 - ALH80                                           | ALH100 - ALH125                                          |
|---------|---------------------|----------------------------------------------------------|----------------------------------------------------------|
| 1       | CASING              | DUCTILE CAST IRON                                        | DUCTILE CAST IRON                                        |
| 2       | COVER               | STEEL                                                    | STEEL                                                    |
| 3       | WHEEL               | DUCTILE CAST IRON                                        | DUCTILE CAST IRON                                        |
| 4       | SHIM                | GALVANIZED STEEL                                         | GALVANIZED STEEL                                         |
| 5       | SHOE                | DUCTILE CAST IRON                                        | DUCTILE CAST IRON                                        |
| 6       | SLEEVE              | EPDM                                                     | EPDM                                                     |
| 7       | CLAMP ON CASING     | STAINLESS STEEL                                          | STAINLESS STEEL                                          |
| 8       | CLAMP SLEEVE / HOSE | STAINLESS STEEL                                          | STAINLESS STEEL                                          |
| 9       | CLAMP ON HOSE       | BICHROMATE STEEL                                         | BICHROMATE STEEL                                         |
| 10      | SEAL COVER          | NITRILE                                                  | NITRILE                                                  |
| 12      | INSERT              | STAINLESS STEEL / PPH / PVDF                             | STAINLESS STEEL / PPH / PVDF                             |
| 14      | LUBRICANT           | GLYCERIN BLEND                                           | GLYCERIN BLEND                                           |
| 15      | SIGHT GLASS         | POLYCARBONATE                                            | POLYCARBONATE                                            |
| 16      | HOSE                | NR / NBR / EPDM / NBR FOOD / VITON® / HYPALON® / NR-Food | NR / NBR / EPDM / NBR FOOD / VITON® / HYPALON® / NR-Food |
| 18      | BRACKET             | ELECTROPLATED STEEL                                      | ELECTROPLATED STEEL                                      |
| 19      | HUB                 | STEEL                                                    |                                                          |
| 20      | BOLT ON PLATE       | DUCTILE CAST IRON                                        |                                                          |
| 21      | FRAME               | STEEL                                                    | STEEL                                                    |
| 46      | SIGHT GLASS SEAL    | NITRILE                                                  | NITRILE                                                  |
| 47      | INLET/OUTLET FLANGE | STAINLESS STEEL                                          | STAINLESS STEEL                                          |





# ALH

## Description

### 3.4 - HOSE

The ALBIN hoses are manufactured according to very strict specifications to acquire the best performances of the pump and to assure an optimum hose life. They are available in six materials: Natural Rubber (NR), perbunan (NBR), EPDM, NBR food, Viton®, and Hypalon®. The material of the hose must be compatible with the pumped liquid. Consult an ALBIN PUMP distributor to define the best hose for your process or consult the chemical resistance table on our website [albinpump.com](http://albinpump.com).

### HOSE DIMENSIONS

mm (Inch)

| PUMP   | Ø INSIDE  | THICKNESS   | LENGTH       |
|--------|-----------|-------------|--------------|
| ALH05  | 5 (0.2)   | 13.5 (0.5)  | 570 (22.4)   |
| ALH10  | 10 (0.4)  | 11 (0.4)    | 570 (22.4)   |
| ALH15  | 15 (0.6)  | 11 (0.4)    | 830 (32.7)   |
| ALH20  | 20 (0.8)  | 9 (0.3)     | 830 (32.7)   |
| ALH25  | 25 (1)    | 14.5 (0.6)  | 1090 (42.9)  |
| ALH32  | 32 (1.2)  | 15.5 (0.6)  | 1300 (51.2)  |
| ALH40  | 38 (1.5)  | 13.5 (0.5)  | 1300 (51.2)  |
| ALHX40 | 40 (1.6)  | 13.5 (0.5)  | 1500 (59.1)  |
| ALH50  | 51 (2)    | 15 (0.6)    | 1820 (71.7)  |
| ALH65  | 60 (2.4)  | 13.5 (0.5)  | 1850 (72.8)  |
| ALHX65 | 65 (2.5)  | 17.5 (0.7)  | 2075 (81.6)  |
| ALHX80 | 80 (3.1)  | 17.5 (0.7)  | 2400 (94.5)  |
| ALH80  | 80 (3.1)  | 21.5 (0.8)  | 2910 (114.5) |
| ALH100 | 100 (3.9) | 22 (0.9)    | 3410 (134.2) |
| ALH125 | 125 (4.9) | 21.25 (0.8) | 4000 (157.4) |

### 3.5 - GEAR BOX

Our standard gearboxes are coaxial gearboxes for pumps ALH05 to ALHX40 and planetary for pumps ALH50 to ALH100. ALH125 can be equipped with both. They have been sized according to the important radial loads of the pump. Consult the gearbox maintenance manual provided with the pump to know the quantity of lubricant requested as well as the periodicity of oil change.

### 3.6 - ELECTRICAL MOTORS

The standard motors provided on our pumps are squirrel-cage motors and have a 230/400 V and 400/690 V 50/60 Hz three-phase voltage. Voltage is dependent on the selected power supply. If the pump has to work in a potentially explosive environment, please refer to the complementary information on ATEX compliances and contact your ALBIN PUMP distributor.

### 3.7 - AVAILABLE OPTIONS

ALBIN PUMP offers several options for their pumps:

- Hose rupture detector.
- Revolution-counter.
- Pulsation dampener.
- Air vacuum assistance (for highly viscous liquids).
- Variable speed drive.
- Mechanical variator.

Please contact your ALBIN PUMP distributor for any information about these different options.



# ALH Installation

## 4 | INSTALLATION

### 4.1 - UNPACKING AND CONTROL

During the receipt of the pump, please follow the instructions printed on the packing. Make a visual inspection to insure that no damage occurred during shipment. If this is the case, please contact your ALBIN PUMP distributor as soon as possible.

### 4.2 - CONDITIONS OF USE

ALH pumps can work in atmospheres where the temperature is situated between -20°C (-4°F) and 45°C (113°F). Pumps are coated with a 150μ paint which will protect them against certain aggressive environments. They are designed for indoor and outdoor setup.

### 4.3 - SET UP

Before installing the pump, check the following points:

- The pump is delivered with a frame provided with four anchoring holes. It must be fixed on a solid base with a slope which does not exceed 5mm for 1m and must be firmly fastened to this one.
- Require enough space around the pump to carry out maintenance. If such was not possible, consider the moving of the pump to a space provided for this purpose.
- Make sure that the room is adequately ventilated to relieve the heat generated by the pump. Leave a space behind the motor ventilator hood so as not to obstruct air intake.

### 4.4 - PIPING

Suction line piping:

- The internal diameter of the piping must be equal to or greater than that of the pump hose,.
- It must be the shortest and most direct possible to avoid suction loss.
- Suction pressures at higher operating pressures may cause the pump to rotate when the pump is disengaged. Above 1 bar, consider adding a suction line valve to prevent this occurrence.
- Limit the presence of bends and make sure that they are as large as possible.
- Make sure that piping can support the service pressure of the pump.

Discharge line piping:


- The internal diameter of piping must be equal to or greater than to that of the pump hose, see §3.4.
- It must be the shortest and most direct possible to avoid discharge pressure loss.
- Limit the presence of bends and make sure that they are as large as possible.
- Provide a space for a pulsation dampener (see picture below).
- If there is a valve on the discharge line, install a pressure relief valve or an over pressure protection gauge to avoid any possible damage to the pump and to the installation.
- It is recommended to install a flexible line to help absorb pulsation.

During the pump ground study, provide enough space for the hose change as well as the possible installation of a pulsation dampener. Distance (L) is the required length for hose removal.

## DIMENSIONS mm (Inch)

| PUMP   | L           |
|--------|-------------|
| ALH05  | 400 (15.7)  |
| ALH10  | 400 (15.7)  |
| ALH15  | 500 (19.7)  |
| ALH20  | 500 (19.7)  |
| ALH25  | 800 (31.5)  |
| ALH32  | 1000 (39.4) |
| ALH40  | 1000 (39.4) |
| ALHX40 | 1200 (47.2) |

| PUMP   | L            |
|--------|--------------|
| ALH50  | 1400 (55.1)  |
| ALH65  | 1400 (55.1)  |
| ALHX65 | 1500 (59.0)  |
| ALHX80 | 1600 (63.0)  |
| ALH80  | 2000 (78.7)  |
| ALH100 | 2800 (110.2) |
| ALH125 | 3000 (118.1) |

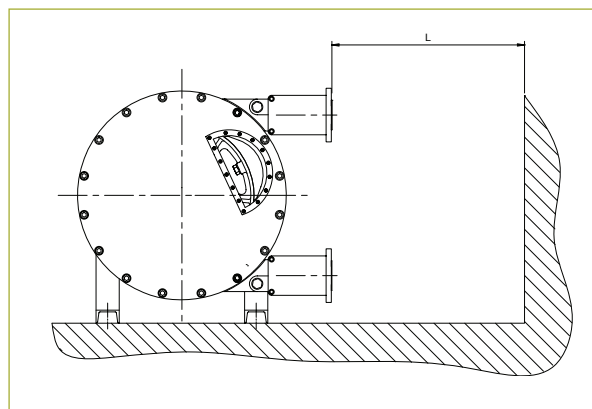



# ALH

## Installation / Pump Start-up / Maintenance

### 4.5 - LIFTING THE PUMP

Pumps are provided with two lift holes (eyebolts) placed on the upper part of the frame. While lifting the pump, respect the following points:

- Lift the complete hose pump using the lifting rings plus additional support on the gearbox and the motor using suitably rated straps or slings.
- Never exceed the upper limits of lift and control the motorized pump weights in the table below.
- The motorized pump, given its centre of gravity, will tend to overbalance on the pump head side. Make sure that the persons are at a secure distance from the pump to avoid any risk of wound.
- Never raise the pump otherwise than by the pump's lifting rings.
- Never raise the pump by its orifices nor by its brackets.

### WEIGHT

kg (lbs)

| PUMP           | ALH05-10  | ALH15     | ALH20     | ALH25      | ALH32       | ALH40       | ALHX40    |
|----------------|-----------|-----------|-----------|------------|-------------|-------------|-----------|
| Approx. Weight | 25 (55.1) | 35 (77.2) | 35 (77.2) | 80 (176.4) | 130 (286.6) | 145 (319.7) | 210 (463) |

| PUMP           | ALH50       | ALH65       | ALHX65       | ALHX80     | ALH80        | ALH100        | ALH125        |
|----------------|-------------|-------------|--------------|------------|--------------|---------------|---------------|
| Approx. Weight | 315 (694.5) | 335 (738.5) | 484 (1067.0) | 700 (1543) | 930 (2050.3) | 1250 (2755.8) | 1750 (3858.1) |

## 5 | PUMP START-UP

### 5.1 - PREPARATIONS

- a. Connect the electrical motor in accordance with the local rules and regulations. Perform this work by qualified personnel.
- b. Make sure that the lubricant level arrives at the level of the sight glass (see §9.7 for lubricant table and §6.1 for an image). Add lubricant if required by the breather or by the sight glass, see §6.1 for instructions on emptying and filling the lubricant.
- c. Make sure the shimming of the pump is according to the pump process, see §6.5 shoe shimming. Refer to §9.8 for shoe shimming tables.
- d. Check the direction of rotation of the pump. It is recommended to install a rotation inverter on the motor for the hose change.

### 5.2 - START-UP


- a. Install piping at the inlet and outlet of the pump.
- b. Make sure that valves at the inlet and outlet are opened.
- c. Start the pump by checking its direction of rotation by the sight glass.

## 6 | MAINTENANCE

### 6.1 - EMPTYING AND FILLING OF THE LUBRICANT

Refer to §6.6 to know the periodicity of lubricant change.

- 1 - Stop the pump.
- 2 - Place a tray underneath the drain plug (REF 23).

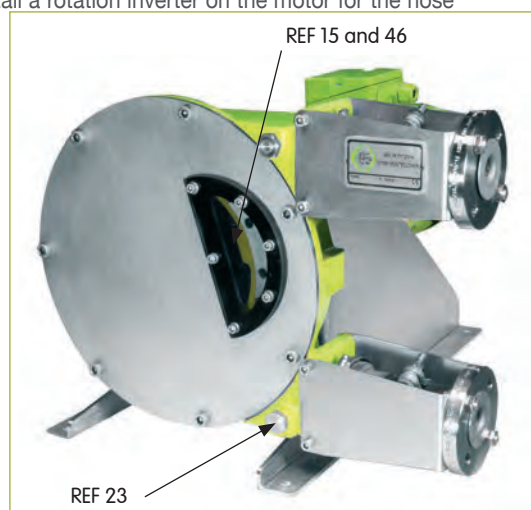




# ALH

## Maintenance

- 3 - If necessary, install a tap and a drain circuit instead of the drain plug (REF 23).
- 4 - Make sure that this tray can contain the quantity of lubricant during the drainage process, see lubricant volume table §9.7.
- 5 - Unscrew the plug (REF 23) and undertake emptying.
- 6 - Position and tighten the plug (REF 23) by applying PTFE band or waterproof paste or close the drain tap.

*NOTE : If the pump is mounted with the inlet/outlet positioned upwards, lubricant drainage is obtained by unscrewing cover screws in the lower part.*

- 7 - Remove the sight glass (REF 15) as well as its seal (REF 46) and fill the casing with the ALBIN lubricant, see lubricant table §9.7. You can also fill the casing by the breather cap (REF 52) situated at the back of the pump casing. The required lubricant level is underneath the bottom edge of the sight glass (see photo beneath).
- 8 - Check the state of the seal (REF 46) and reassemble the sight glass (REF 15) or tighten the breather cap (REF 52).

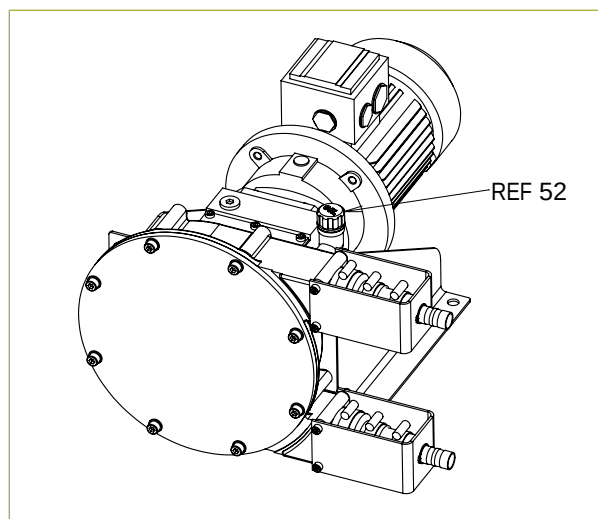

### FOR MODELS ALH05, ALH10, ALH15 and ALH20:

Unscrew higher breather plug (REF 52) of the pump. Place a funnel inside the plug hole and fill the casing with the ALBIN lubricant (see lubricant table §9.7). The necessary volume of lubricant is just underneath the shaft line.



# ALH

## Maintenance

### 6.2 - HOSE CLEANING

The hose cleaning can be done without removing the hose. It can be done with water or with a cleaning liquid (check compatibility with hose material). With numerous products, it is necessary to clean the hose after every pumping session in order to avoid the hardening of the product inside this one.

**CAUTION!** Make sure that the cleaning liquid temperature is adapted to the hose material.

### 6.3 - HOSE REPLACEMENT

**CAUTION!** Before any hose change, check the following points:

- This service has to be performed by skilled personnel that is acquainted with this manual.
- Isolate the pump from the power supply. Inlet and outlet valves have to be closed to minimize product loss. The pump will need to be re-connected power to expel and load in the hose in subsequent steps.
- Always carry clothes and necessary protection according to the pumped product.
- Respect all security and environmental rules necessary for the manipulation of the pumped product.

#### 6.3.1 - HOSE REMOVAL

1 - Disconnect and remove the suction and discharge piping.

2 - Drain the lubricant as explained in §6.1.

3 - At the suction end, loosen clamps (REF 8 and 9) (photo 1).

Extract the insert (REF 12) and remove the flange (REF 47) (photo 2). The flange may require an additional tool (e.g. prybar) to be removed, carefully, as to not damage the insert/flange. Remove the brackets REF 18 (photograph 3).

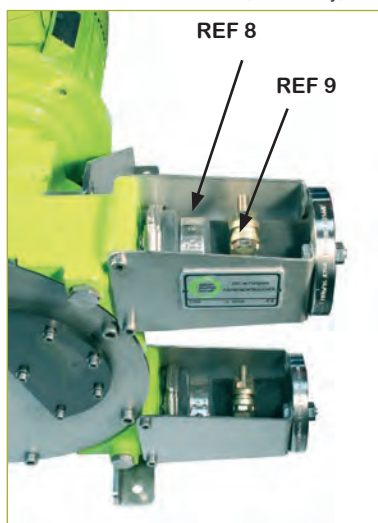


PHOTO 1

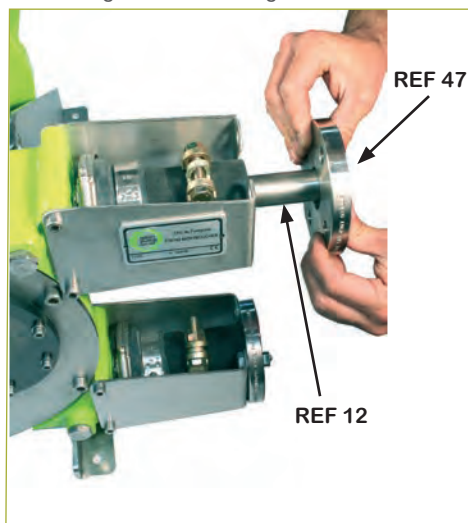


PHOTO 2

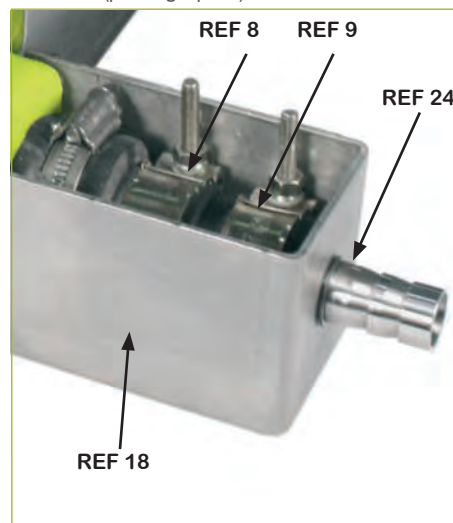


PHOTO 3

#### FOR MODELS ALH05, ALH10, ALH15 and ALH20:

Remove circlips using circlips pliers (REF 24) and dismantle bracket (REF 18). Extract insert (REF 12). Carefully perform these actions to avoid damaging the ribbed fittings.



# ALH

## Maintenance

4 - At the discharge end, loosen clamps (REF 8 and 9). Extract the insert (REF 12) and remove the flange (REF 47) as well as the brackets (REF 18) (photograph 7). Remove clamps (REF 8 and 9) (photograph 7).

5 - Jog run the motor to deliver the hose from the pump casing at the outlet side.

**WARNING!** The hose can come out of the pump casing very fast and cause harm.  
Check that nobody is in front of the pump's orifices while removing the hose.

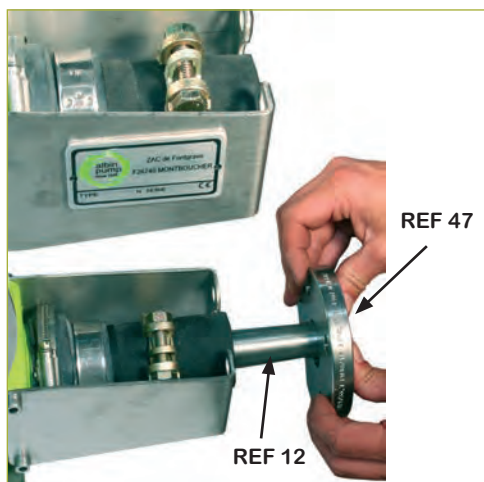


PHOTO 4



PHOTO 5

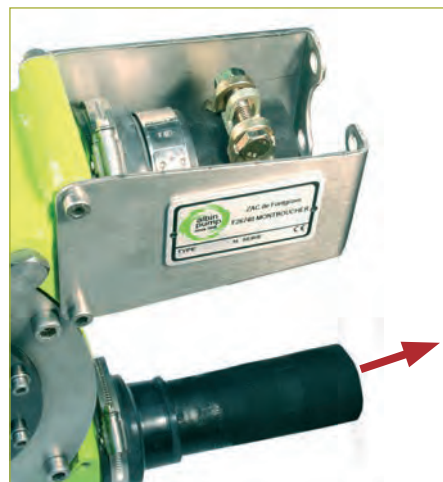


PHOTO 6

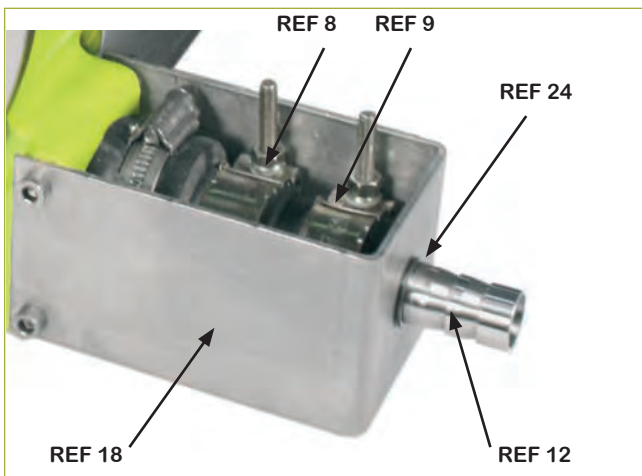


PHOTO 7

### FOR MODELS ALH05, ALH10, ALH15 and ALH20:

At the pump outlet, loosen clamps (REF 8) and (REF 9). Remove circlips (REF 24) and dismantle bracket REF 18. Extract insert (REF 12). Remove clamps (REF 8) and (REF 9). Carefully perform these actions to avoid damaging the ribbed fittings.





# ALH

## Maintenance

### 6.3.2 - PUMP CASING CLEANING

This operation is necessary when a hose has burst and when the product has contaminated the inside of the pump casing. Perform these steps with caution. If hazardous chemicals were being pumped, use caution when removing the lubricant.

- 1 - Unfasten cover screws by leaving two screws partly fastened to the casing. Slightly withdraw the cover from the casing and fix a shackle in one of the cover's highest fastening holes (see picture below). Pumps ALH80, ALH100 and ALH125 are equipped with a lifting ring. Install a lift equipment in this shackle and slightly raise the cover. Unfasten the remaining screws and withdraw the cover. **For cover weight please refer §9.12**
- 2 - Check the state of the cover seal (REF 10) §6.4.1 and replace if necessary.
- 3 - Check the state of wear of the pressing shoes (REF 5) and replace them if necessary, see §6.4 Replacement of spare parts.

**CAUTION!** Worn shoes can contribute to improper compression and premature wearing of the hose.

- 4 - In the case of a hose burst, it is possible that the shaft seal (REF 26) §6.4.2 as well as the seal ring (REF 27) §6.4.2 have been notably damaged when pumping an abrasive liquid. Relate to §6.4 if a replacement of these parts is necessary.
- 5 - Wash the casing with clear water and withdraw any residues.
- 6 - Dry the pump casing entirely.
- 7 - Replace the cover seal in its groove.
- 8 - Reassemble the pump cover.

### 6.3.3 - REASSEMBLY OF THE HOSE

**WARNING!** You should never assemble a new hose without a mounted cover.

For Torque settings (hose clamps and brackets), **refer §9.11**

- 1 - Pre-assemble the flange (REF 47) at the inlet port with two bolts (photo 1).
- 2 - Clean the new ALBIN hose carefully. Slightly coat it with ALBIN lubricant. Lightly lubricate the inside of the sleeve (REF 6).



**FOR MODELS ALH05, ALH10, ALH15 and ALH20**

Temporarily mount the bracket (REF 18) at the inlet port.

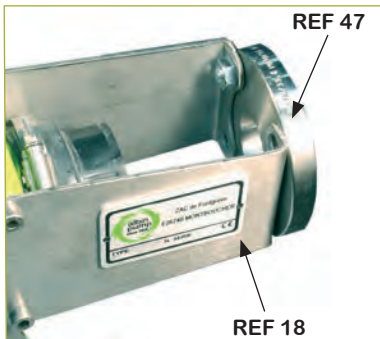


PHOTO 1

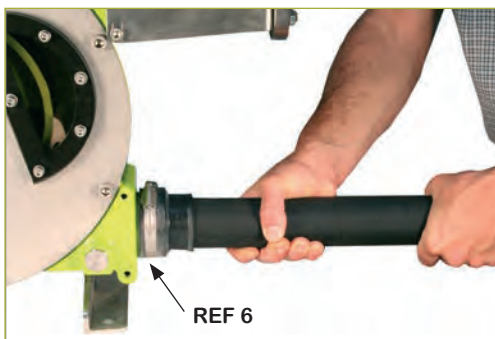


PHOTO 2



# ALH

## Maintenance

- 3 - Insert the hose by the outlet port (REF 6) (Photo 2).
- 4 - Reverse the direction of rotation of the motor.
- 5 - While pushing on the hose, jog run the motor and check the direction of rotation.
- 6 - The shoes mounted on the wheel are going to “swallow” the hose and push it out of the inlet port. Always by giving jolts, a gap is maintained between the hose and flange in order to slide the clamps over the hose and into position. Once the clamps are placed loosely over the hose, jog the pump to get the hose flush with the flange. (REF 47) (photo 3).
- 7 - Assemble the clamps (REF 8 and 9) on the inlet side. Clamp (REF 8) is to be mounted on the sleeve to ensure the sealing. Clamp (REF 9) needs to be installed at an equal distance between the flange and sleeve. Mount the insert (REF 12) into the hose. Tighten clamps (REF 8 and 9).

**If you meet difficulties in introducing inserts into the pump hose, coat them slightly with ALBIN lubricant. Never use another lubricant.**

- 8 - Assemble the brackets (REF 18) and pre-assemble flange (REF 47) on the outlet side with two temporary bolts.

### FOR MODELS ALH05, ALH10, ALH15 and ALH20

Dismantle the bracket (REF 18). Mount clamp (REF 8) and 9 on the hose. Mount the insert (REF 12) into the hose. Fix bracket (REF 18) and block the insert with circlips (REF 24). Tighten the clamp (REF 8) and 9.

### FOR MODELS ALH05, ALH10, ALH15 and ALH20

Assemble the bracket (REF 18) at the outlet side.

- 9 - Reverse the direction of rotation of the motor.
  - 10 - A gap is maintained between the hose and flange in order to slide the clamps over the hose and into position. Once the clamps are placed loosely over the hose, jog the pump to get the hose flush with the flange.
  - 11 - Undertake operation step 7 at discharge side.
  - 12 - Fill the pump with the necessary quantity of ALBIN lubricant see §6.1 and §9.7.
  - 13 - Take away the temporary flange bolts and fix the piping on both suction and discharge sides.
  - 14 - Open the valves at the suction and discharge sides.
  - 15 - Check the direction of rotation of the pump.
- Check for any possible lubricant leakage by the inserts, sleeves or cover.



PHOTO 3





# ALH

## Maintenance



### 6.4 - REPLACEMENT OF SPARE PARTS

#### 6.4.1 - REPLACEMENT OF PUMP SHOES (EXCEPT ALH05, ALH10, ALH15, ALH20)

- 1 - Jog run the motor and position one of the shoes in front of the sight glass.
- 2 - Cut the power supply.
- 3 - Drain the lubricant, see §6.1.
- 4 - Remove the pump cover (REF 2) as well as the cover seal (REF 10).
- 5 - Disassemble the shoe (REF 5) by removing the bolt and washer. The shoe which is not in contact with the hose and put aside the shims if any. Check that the pin (REF 30) is still on the wheel (ALH25 to ALHX80).
- 6 - Mount a new shoe on the wheel (do not to forget the washer REF 29). Slide the shims between the shoe and the wheel before tightening.


**CAUTION!** Be careful of the position of the shoe with the centering (REF 30) (ALH25 to ALHX80).

- 7 - Tighten the shoe onto the wheel For Torque settings please refer to §9.11.
- 8 - Reassemble the cover with 3 temporary bolts disposed at about 120° between each other.
- 9 - Jog run the motor 180° to bring the second shoe in front of the sight glass.
- 10 - Remove the cover once again and undertake operations step 5 to 7.
- 11 - Reposition the cover and tighten all cover screws.

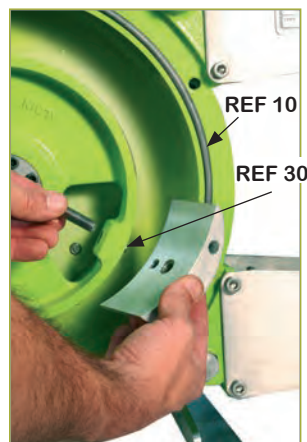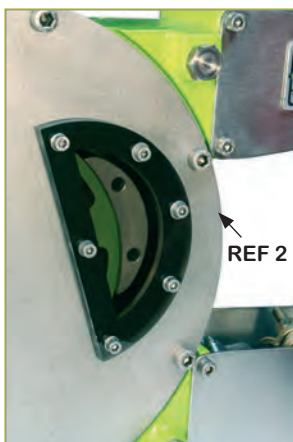

### 6.4.2 - REPLACEMENT OF THE SEAL RING (REF 27) AND THE SHAFT SEAL (REF 26)

ALBIN hose pumps are equipped with a leakage channel (refer below image) that allows to see the wear of the seal ring or the shaft seal. This channel is at the back of the pump casing underneath the gearbox flange. It also protects the gearbox seals by leaving the lubricant or the product to pass freely at the back of the pump casing.


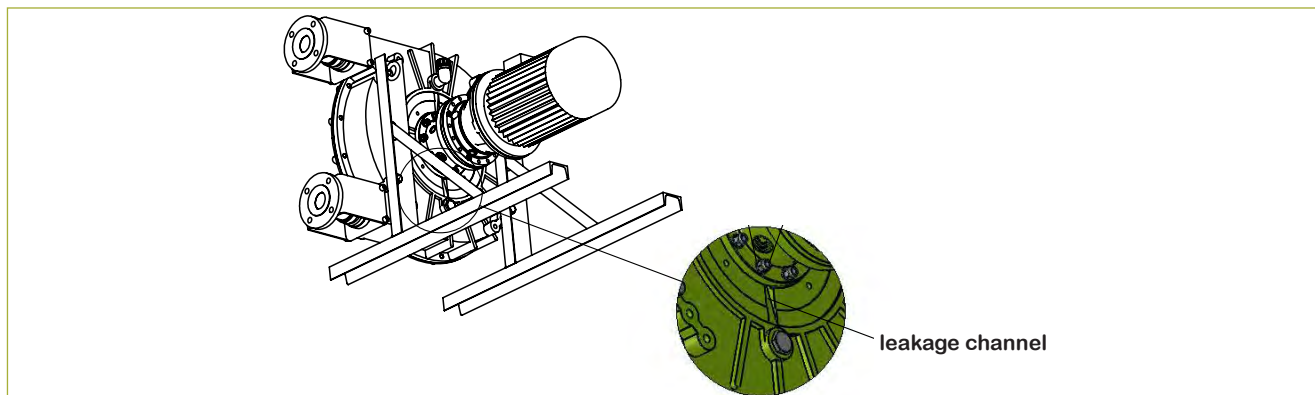


### PUMPS FROM ALH05 TO ALHX65

(Refer to the nomenclature §9.3 for the landmarks of parts).

- 1 - Isolate the pump from the power supply.
- 2 - Empty the lubricant and clean out the pump, see §6.1.
- 3 - Remove the pump hose, see §6.3.1.
- 4 - Disassemble the pump cover and withdraw the cover seal (REF 10).
- 5 - Disassemble the wheel by unscrewing the expansible hub (REF 19). Refer to §9.10 for expansible hub assembly and disassembly.
- 6 - Withdraw the wheel of the pump shaft with a suitable lifting equipment.
- 7 - Support the gear motor with a suitable lifting equipment.
- 8 - Unscrew the nuts (Gearbox Studs) to free the gearbox from the casing (REF 41) and withdraw the gearbox from the pump casing.
- 9 - Extract the damaged seal ring (REF 27).
- 10 - Slip on the spacer ring (REF 73) only for ALH50 and ALH65 HELICAL GEARBOX models Refer to §9.3 exploded view image for location, if necessary and glue to the shaft. Position the new seal ring (REF 27) against the spacer ring or the gearbox shaft's shoulder. Fill the gap between the key-way and the seal ring with silicone mastic to ensure correct.

**For Pumps ALH100 and ALH125 the wheel is automatically positioned by the spacer ring and seal ring. Therefore no adjustment is necessary.**

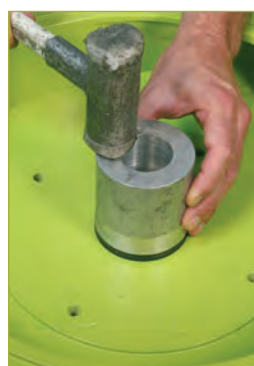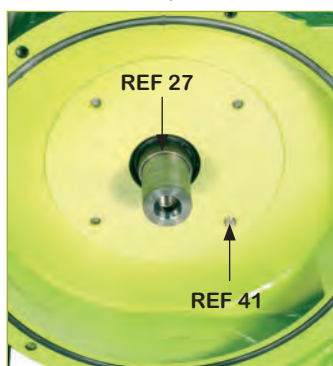





# ALH

## Maintenance

- 11 - Withdraw the shaft seal (REF 26) with a drift punch.
- 12 - Replace a new shaft seal (REF 26) with an appropriate tool (wooden or plastic cylinder). Check the mounting position of the seal (opened side turned to the cover).
- 13 - Mount the gear motor on the casing being careful not to damage the shaft seal. Tighten the nuts (REF 41) with their washers (REF 72).
- 14 - Mount the wheel and hub on the pump shaft by positioning it referring to the table and the drawings below.

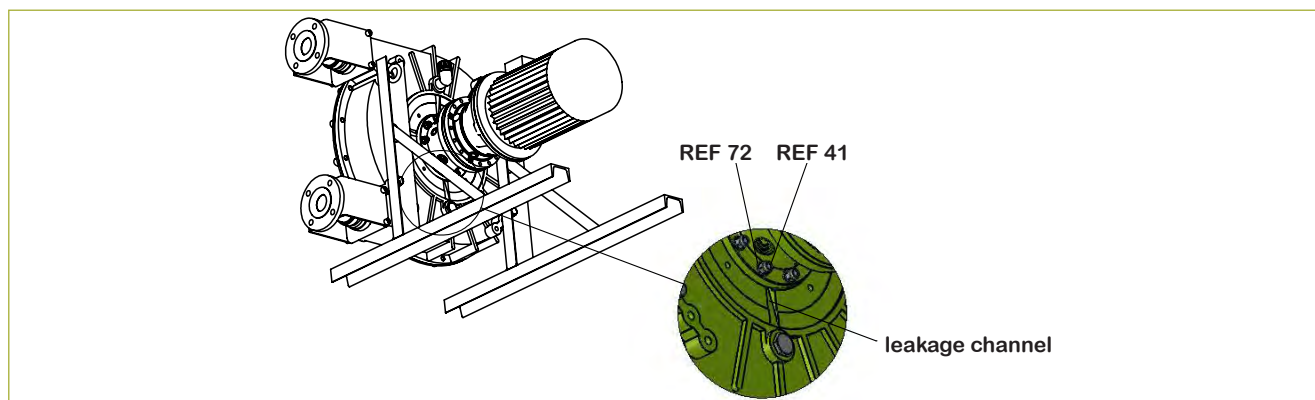

REP 19

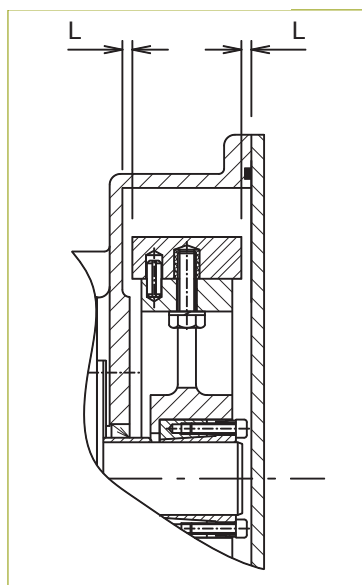

### DIMENSIONS / TOLERANCE

mm (Inch)

| PUMP                       | ALH05 - ALH10 | ALH15 - ALH20 | ALH25       | ALH32       | ALH40       | ALHX40      | ALH50 - ALH65 - ALHX65 | ALHX80      | ALH80       | ALH100      | ALH125      |
|----------------------------|---------------|---------------|-------------|-------------|-------------|-------------|------------------------|-------------|-------------|-------------|-------------|
| Distance casing / shoe (L) | 4 (0.15)      | 2.75 (0.1)    | 5.5 (0.21)  | 6 (0.23)    | 2.5 (0.09)  | 5 (0.19)    | 3 (0.11)               | 6.5 (0.25)  | 8 (0.31)    | 10 (0.39)   | 15 (0.59)   |
| Tolerance + or -           | 0.5 (±0.02)   | 0.5 (±0.02)   | 0.5 (±0.02) | 0.5 (±0.02) | 0.5 (±0.02) | 0.5 (±0.02) | 0.5 (±0.02)            | 0.5 (±0.02) | 0.5 (±0.02) | 0.5 (±0.02) | 0.5 (±0.02) |



# ALH Maintenance

- 15 - Cross tighten the expansible hub with a dynamometric spanner, certified tooling required, to the correct torque figure check the wheel position once again and re-adjust if necessary. Refer to §9.10 for expansible hub assembly and disassembly.
- 16 - Mount the cover seal (REF 10) in its groove and mount the cover.
- 17 - Mount the pump hose as stated in §6.3.3.

## TORQUE

Nm (Ft-lbs)


| PUMP TYPE                  | TORQUE      |
|----------------------------|-------------|
| ALH05, ALH10, ALH15, ALH20 | 15 (11.1)   |
| ALH25, ALH32, ALH40        | 13 (9.6)    |
| ALHX40                     | 34 (25.1)   |
| ALH50, ALH65               | 35 (25.8)   |
| ALHX65                     | 90 (66.3)   |
| ALHX80                     | 110 (81.1)  |
| ALH80 (shaft Ø90)          | 110 (81.1)  |
| ALH80 (shaft Ø100)         | 190 (140.1) |



## PUMPS FROM ALHX80 TO ALH125

(refer to the nomenclature for the landmarks of parts §9.3

- 1 - Undertake the same operation steps 1 to 10 as for pumps ALH05 to ALH65.
- 2 - Disassemble the seal flange (REF 25) and withdraw the damaged shaft seal with a screwdriver or a similar tool.
- 3 - Take the new shaft seal (REF 26) between the thumb and the index and by tightening your fingers, form an "8" figure. The seal can now be inserted into its groove by respecting the mounting position (see drawing).
- 4 - Mount the gear motor on the pump casing (see operation step 13).
- 5 - Replace the O-ring (REF 67) if necessary and reassemble the seal flange.
- 6 -For pumps ALHX80 and ALH80, undertake operation steps 14 to 17 of previous chapter. For pumps ALH100 and ALH125, undertake operation step 14 of previous chapter. Then block the wheel with the washer (REF 60) and the screw (REF 59) and finish with operation steps 16 and 17 of previous section.

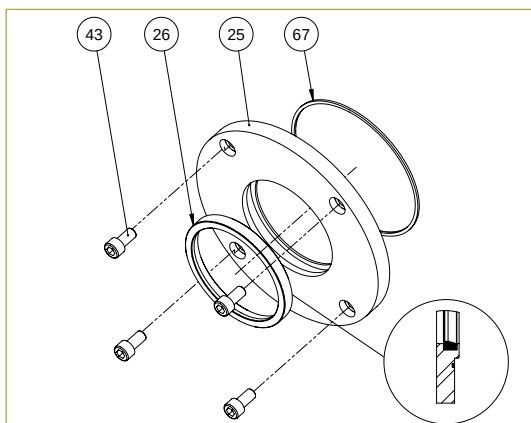



# ALH

## Maintenance

### 6.5 - SHOE SHIMMING

NOTE: this paragraph does not concern pumps ALH05 to ALH20.

**CAUTION!** The shimming of shoes is an operation which consists of adding shims under the shoe to stop any internal leakage. An internal leakage considerably reduces the life time of the hose as well as the flow. As a result, it is essential to adjust the shoe's shimming according to the rotation speed of the pump, the desired discharge pressure and the liquid viscosity.

**WARNING!** Never run the pump without the sight glass.

The shoe shimming can be made without disassembling the hose or the cover. Shims are inserted or withdrawn by the sight glass as pointed out below :

- 1 - Jog run the motor and bring a shoe in front of the sight glass.
- 2 - Cut the power supply of the pump.
- 3 - Unscrew the sight glass bolts and withdraw taking care in not damaging the seal.
- 4 - Slightly unscrew the shoe's fastening bolt(s) and lift the shoe off the wheel with a screwdriver or a similar tool.
- 5 - You can now either slide in or withdraw the necessary number of shims under the shoe.

Consult the shimming table §9.8 to determine the precise number of shims according to the application.

- 6 - Tighten the shoe bolts, reference table in §9.11.
- 7 - Reassemble the sight glass with its seal.
- 8 - Re-connect and jog run the motor to bring the second shoe in front of the sight glass.
- 9 - Cut the power supply of the pump.
- 10 - Repeat operations 3, 4, 5, 6 and 7. Replace the sight glass seal (REF 46) if necessary.





# ALH Maintenance

## 6.6 - MAINTENANCE AND PERIODIC INSPECTIONS ALH AND ALHS SERIES

|    |                                                                                                                    |                                                                                                            |                                                                                                              |
|----|--------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 1  | Pump hose replacement.                                                                                             | Preventative maintenance suggests changing the pump hose after 90% of the life time of the first hose.     | see §6.3                                                                                                     |
| 2  | Lubricant replacement.                                                                                             | At the end of 2 hose changes or 5000 hours run time, unless there is a hose rupture (replace immediately). | see §6.1                                                                                                     |
| 3  | Gearbox oil replacement.                                                                                           | Refer to the gearbox maintenance manual provided with the pump.                                            |                                                                                                              |
| 4  | Replacement of the seal ring (REF 27).                                                                             | In case of presence of lubricant in the leak channel.                                                      | see §6.4.2                                                                                                   |
| 5  | Replacement of the shaft seal (REF 26).                                                                            | In case of presence of lubricant in the leak channel.                                                      | see §6.4.2                                                                                                   |
| 6  | Replacement of the shaft seal (REF 105) and (REF 106) (ALHS series).                                               | In case of presence of oil in the leak channel or at the lip seals.                                        | see §6.4.2 and §6.6                                                                                          |
| 7  | Replacement of the shoes.                                                                                          | The contact surface of a shoe should be flat. Replace if the contact surface is concave.                   | see §6.4.1                                                                                                   |
| 8  | Replacement of the cover seal (REF 10).                                                                            | In the case of a leak around the pump cover.                                                               | see §6.3.2                                                                                                   |
| 8  | Replacement of the sleeves (REF 6).                                                                                | If these are damaged.                                                                                      | Refer to §6.3 Perform operations 1, 2, 3 and 4 of §6.3.1 and change sleeves. Respect directives of security. |
| 9  | Replacement of the bearings (REF 103) and (REF 104) (ALHS series)                                                  | If there are abnormal noises coming from the bearing case.                                                 | see §6.4 and §6.6                                                                                            |
| 9  | Check the lubricant level.                                                                                         | Before starting the pump and periodically during the pump service.                                         | see §6.1                                                                                                     |
| 10 | Check for lubricant leakage at the leakage channel.                                                                | Before starting the pump and periodically during the pump service.                                         | see §6.4                                                                                                     |
| 11 | Check the pump casing to discern possible leakages around the cover, the sight glass, the flanges and the sleeves. | Before starting the pump and periodically during the pump service.                                         |                                                                                                              |
| 12 | Check for wear on the shoe's pressing surface.                                                                     | At every hose change.                                                                                      | see §6.4                                                                                                     |
| 13 | Check the presence of a gearbox oil leakage.                                                                       | Before starting the pump and periodically during the pump service.                                         | see §3.5                                                                                                     |
| 14 | Check for strange noises coming from the pump, gearbox and bearing case or abnormal pump casing temperature.       | Periodically during the pump service.                                                                      |                                                                                                              |





# ALH

## Maintenance / Storage

### 6.7 - ALHS SERIES INFORMATION

#### 6.7.1 - SET UP

Before the setup of the pump, check the following points:

- The ALHS pump is delivered without a frame. Assembly holes are at the back of the pump for assembly on a frame. Dimensions of these assembly holes can be found in § 9.2. The pump with its drive and frame must be fixed to a solid base with a slope which does not exceed 5mm for 1m and must be firmly fastened to this one.
- The pump frame must be built in order to support the stress and deformations delivered by the pump and drive. It should be built by qualified staff with good engineering practice. In no case ALBIN PUMP is responsible for its construction or conception.
- The alignment of pump and drive shafts must be made in accordance with instructions given by the manufacturer of the coupling. Refer to the specific notice of such material. To achieve alignment and coupling, use a perfectly straight ruler to control the misalignment, and a feeler gauge for angular misalignment. Control four points (top, bottom, left, right) at each stage of the installation (after setting on foundations, after fixing pipes and after a first start).
- Make sure there is enough room around the pump to carry out maintenance. If that was not the case, envisage the moving of the pump in a space provided for this purpose.
- Make sure the room is adequately ventilated to relieve the heat generated by the pump. Leave a space behind the motor ventilator hood so as not to obstruct the air intake.

#### 6.7.2 - PUMP STARTING

Follow the steps described in §5. The hose is not mounted on bare shaft pumps when delivered. Therefore, hose mounting operations should be followed before the starting up.

#### 6.7.3 - BEARING CASE DISMANTLING AND LIP SEAL (REF 26) REPLACEMENT

Carry out operations described in §6.4.2 Disassemble the bearing case in the same way as for the gearbox.

- 1 - Remove lip seals (REF 105) and REF 106 from the bearing case.
- 2 - Remove the circlips (REF 107).
- 3 - Remove the shaft with the bearings.
- 4 - Carry out the disassembly of the bearings and replace them together with the shaft (REF 102) if necessary.
- 5 - Remove the shaft and the bearings, circlips and O-rings. Fill up the bearing box with grease through the greaser positioned on the top of the box.

#### 6.7.4 - MAINTENANCE AND PERIODICAL CONTROLS

Regularly check the absence of grease coming from the leakage channel or from the lip seal (REF 106).

## 7 | STORAGE

### 7.1 - STORAGE OF THE PUMP

Store the pump in a sheltered and dry place and ensure that the storage room temperature is between -20°C (-4°F) and 45°C (113°F). Protect the pump if necessary and block the inlet and outlet orifices. If pump remains idle for over 1 month, remove the hose from the pump or remove one of the shoes as well as its centering pin and position the wheel so that the second shoe can be seen through the sight glass. For models ALH05, ALH10, ALH15 and ALH20 position the wheel so that one of the cam lobes remains submerged in the lubricant. If you can neither withdraw the hose or one of the shoes, run the pump 5 minutes a week.





# ALH

## Storage / Troubleshooting

### 7.2 - STORAGE OF THE PUMP HOSES

Hoses must be stored sheltered from light in a cool place. Their life is reduced after two years. The performance of hoses is reduced at the end of this expiration date due to the aging of rubber.

## 8 | TROUBLESHOOTING

| PROBLEM                  | POSSIBLE REASON                                                                      | RESOLUTION                                                                                                                                                                              |
|--------------------------|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The pump does not work   | No power supply.                                                                     | Check that the pump power switch is on position "ON".                                                                                                                                   |
|                          |                                                                                      | Check the connection of the motor.                                                                                                                                                      |
|                          | The wheel of the pump stalls.                                                        | Check the fixing of the hose.                                                                                                                                                           |
|                          |                                                                                      | Check that the discharge pressure is not too high.                                                                                                                                      |
|                          |                                                                                      | Check that the product hasn't sedimentated in the hose.                                                                                                                                 |
|                          | The lubricant level detector has been operated.                                      | Check the reason for which the level detector has been operated.<br>Check the correct functioning of this one. If the pump hose has busted, undertake the replacement of the pump hose. |
| Low capacity or pressure | Not enough shims under shoes.                                                        | Add the sufficient number of shims.                                                                                                                                                     |
|                          | Air leak at the inlet of the pump.                                                   | Check the tightening of the clamps of the pump and the sealing of the inlet piping.                                                                                                     |
|                          | Valve closed or partly closed at inlet.                                              | Fully open the valve.                                                                                                                                                                   |
|                          | Wear of the hose.                                                                    | Replace the hose.                                                                                                                                                                       |
|                          | Product too viscous or the pump speed is too high compared to the product viscosity. | Ask for advice from your Albin distributor.                                                                                                                                             |
|                          | Piping blocked or partly blocked at inlet.                                           | Unblock piping at inlet and verify there is product flow that meets requirements.                                                                                                       |



# ALH

## Troubleshooting

### 8 | TROUBLESHOOTING

| PROBLEM                                                                                     | POSSIBLE REASON                                                                                                              | CORRECTION                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hose life is too short.                                                                     | Incompatibility of the hose with the pumped product.                                                                         | Make sure the compatibility of the hose with your product and contact your Albin distributor.                                                                                                                                                                                                                                                                                                      |
|                                                                                             | Discharge pressure too high.                                                                                                 | <p>Check that the discharge pressure of the pump does not exceed 15 bar (217 psi) or 8 bar (116 psi) for ALH05 to ALH20). Check that the outlet piping is not blocked and that all valves are opened.</p> <p>Make sure that the security valve works correctly.</p> <p>Make sure that the piping friction losses do not exceed the value requested for an appropriate functioning of the pump.</p> |
|                                                                                             | Pump speed too high.                                                                                                         | Reduce the pump speed.                                                                                                                                                                                                                                                                                                                                                                             |
|                                                                                             | Wrong shimming.                                                                                                              | Check the shimming.                                                                                                                                                                                                                                                                                                                                                                                |
|                                                                                             | Too high temperature of the product.                                                                                         | Contact your Albin distributor.                                                                                                                                                                                                                                                                                                                                                                    |
| Lubricant leakage around the cover                                                          | Deficient tightening of cover bolts.<br>Wear of the cover seal.                                                              | Tighten cover bolts.<br>Replace cover seal.                                                                                                                                                                                                                                                                                                                                                        |
| Lubricant leakage visible in the designated leakage channel (underneath the gearbox flange) | Wear of the shaft seal or the seal ring.                                                                                     | Replace these parts.                                                                                                                                                                                                                                                                                                                                                                               |
| Lubricant leakage at the sleeves                                                            | Deficient tightening of clamps or spoilt sleeve(s).                                                                          | Tighten clamps or replace sleeves.                                                                                                                                                                                                                                                                                                                                                                 |
| Pulsations in piping.                                                                       | Deficient fastening of the piping.                                                                                           | Fix piping correctly.                                                                                                                                                                                                                                                                                                                                                                              |
|                                                                                             | Process creating important pulsations due to the product, the speed of the pump, discharge pressure or the sizing of piping. | Contact your Albin distributor.                                                                                                                                                                                                                                                                                                                                                                    |
| Grease leakage (ALHS series).                                                               | Worn lip seals                                                                                                               | Replace the lip seals (REF 105) and (REF 106).<br>See §6.4 and §6.6.                                                                                                                                                                                                                                                                                                                               |
| Abnormal noise coming from the bearing case (ALHS series).                                  | Lack of lubricant in the bearing case.<br>Worn bearings.                                                                     | Refill the bearing case with appropriate grease.<br>Replace bearings. See §6.4 and §6.6.                                                                                                                                                                                                                                                                                                           |





# ALH





## Characteristics / Technical Specifications

### 9 | CHARACTERISTICS AND TECHNICAL SPECIFICATIONS

#### 9.1 - PERFORMANCE CURVES

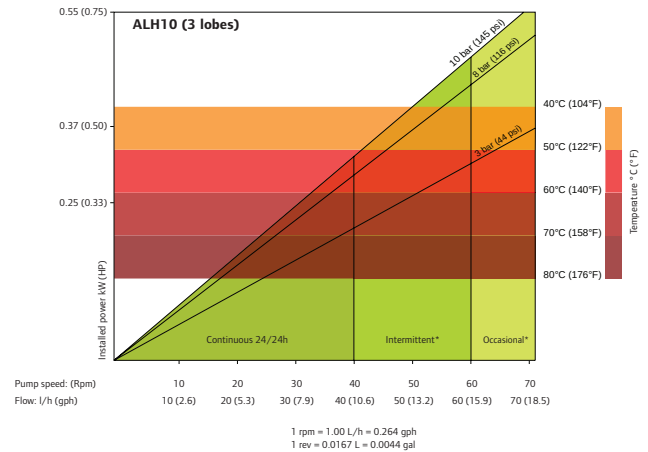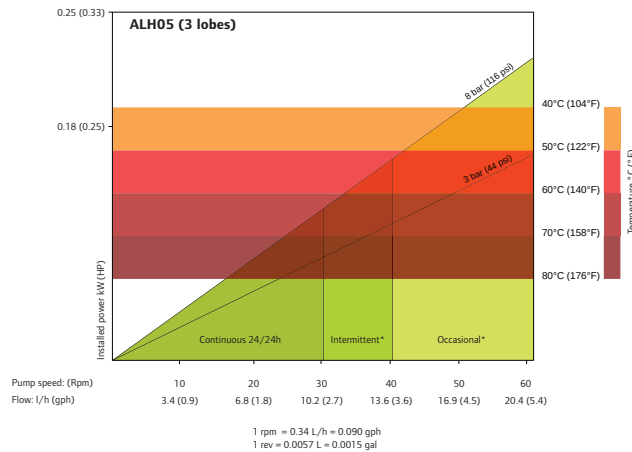

\*Intermittent use : minimum one hour stop after 2 hours run / \*Occasional use : maximum one hour a day

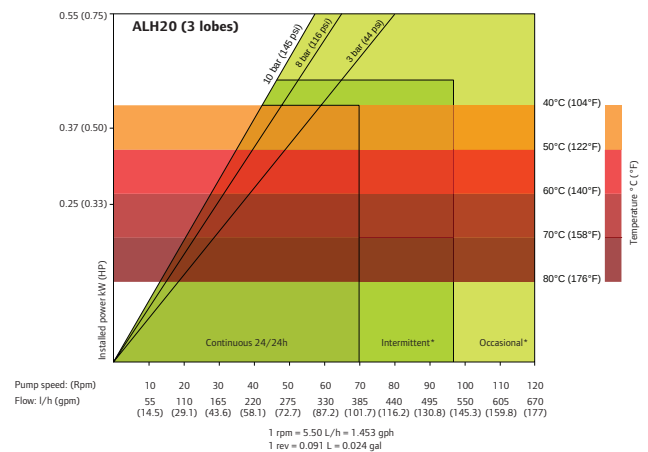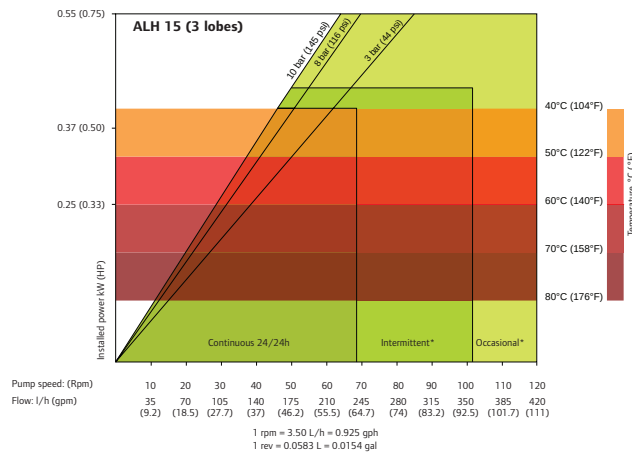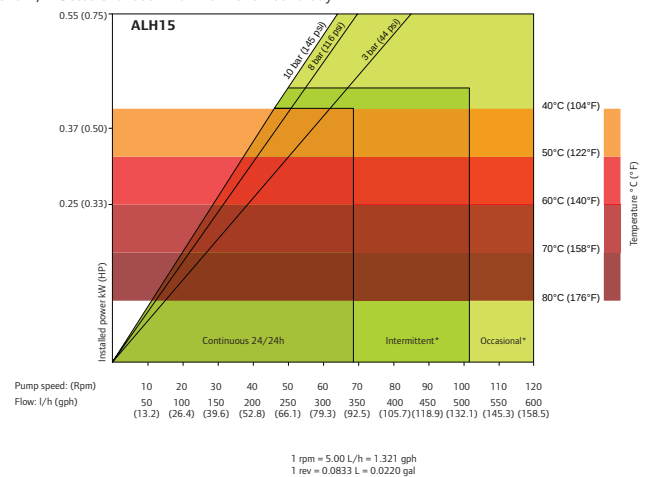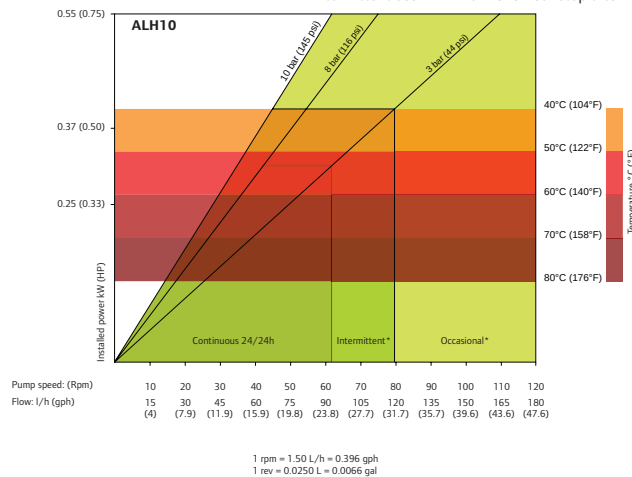

\*Intermittent use : minimum one hour stop after 2 hours run / \*Occasional use : maximum one hour a day









# ALH

## Characteristics / Technical Specifications

### 9 | CHARACTERISTICS AND TECHNICAL SPECIFICATIONS

#### 9.1 - PERFORMANCE CURVES

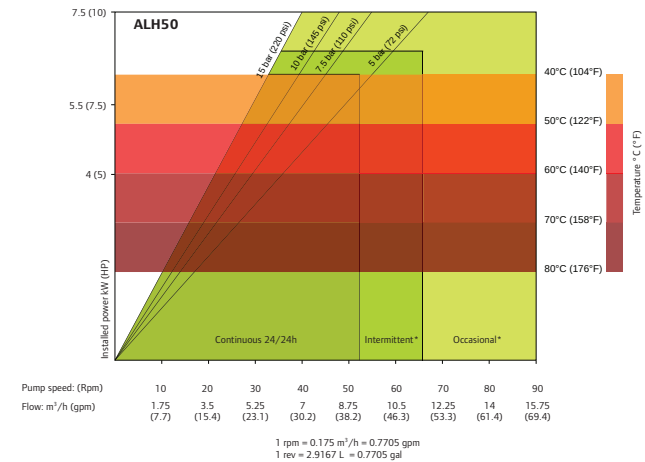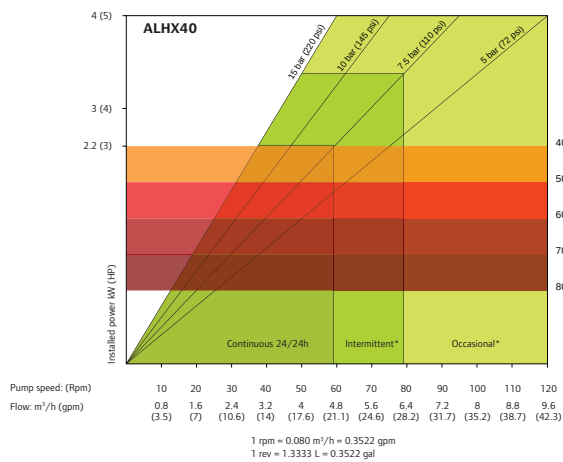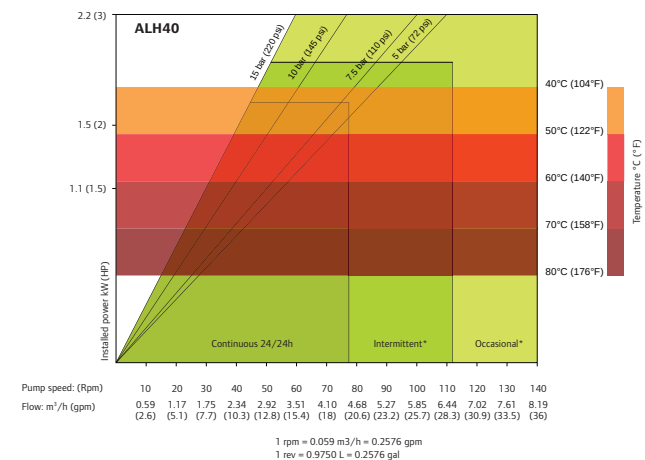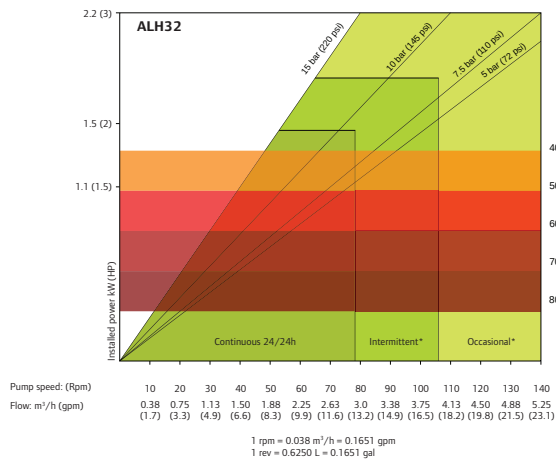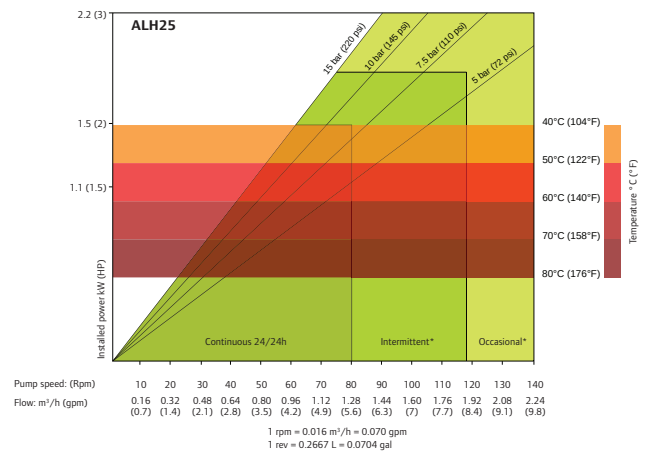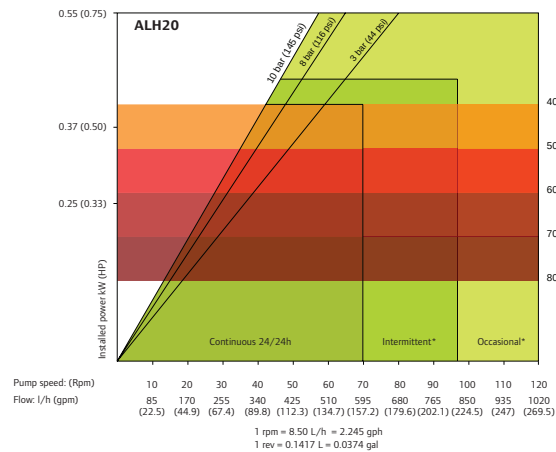

\*Intermittent use : minimum one hour stop after 2 hours run / \* Occasional use : maximum one hour a day









# ALH

## Characteristics / Technical Specifications

### 9 | CHARACTERISTICS AND TECHNICAL SPECIFICATIONS

#### 9.1 - PERFORMANCE CURVES

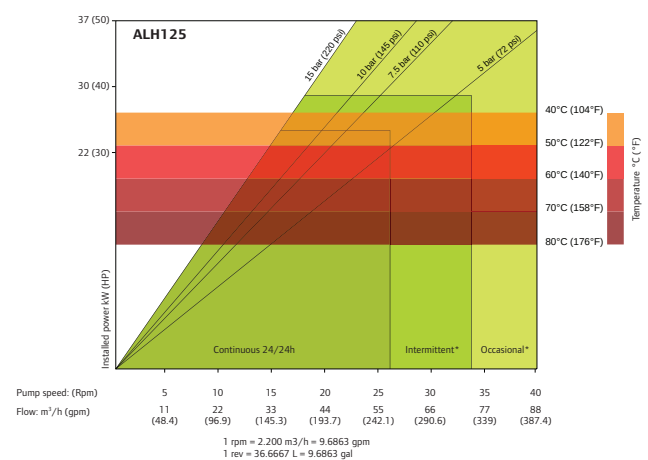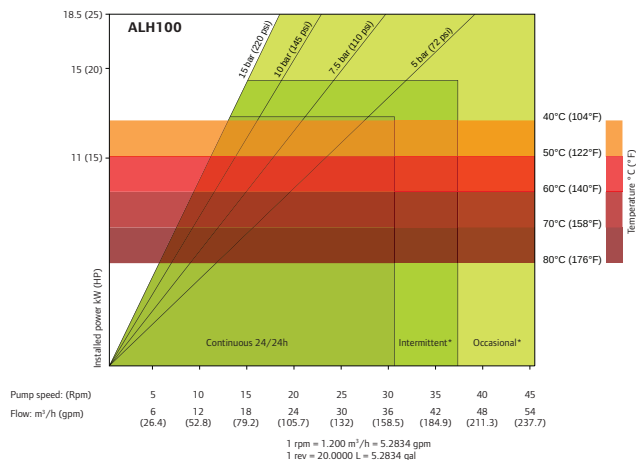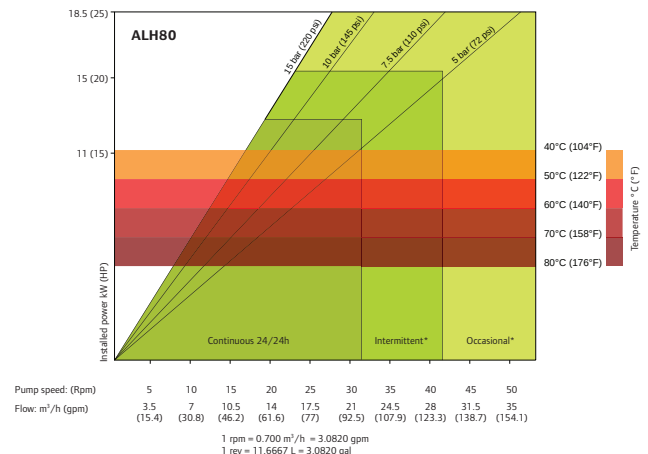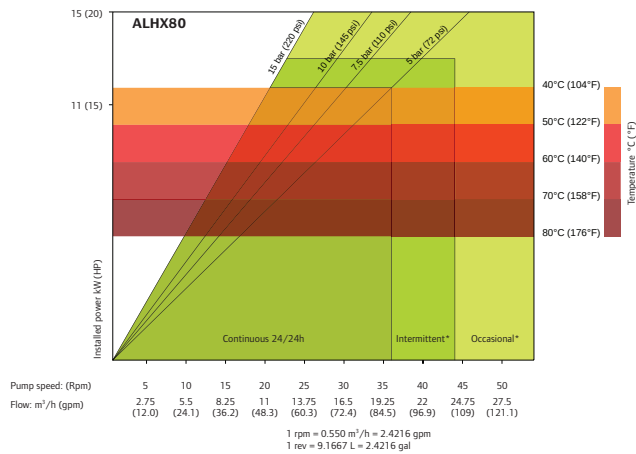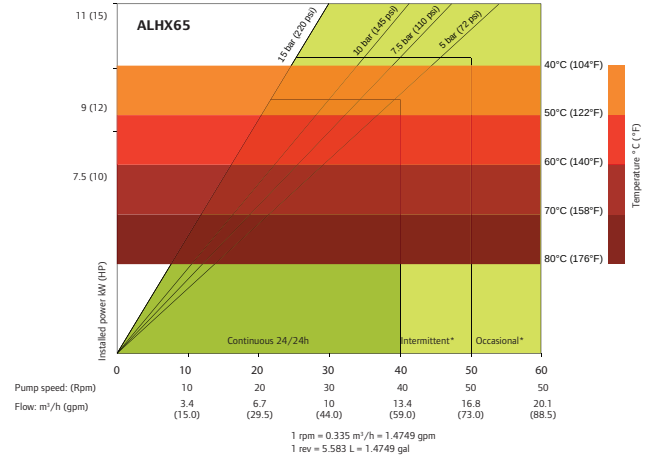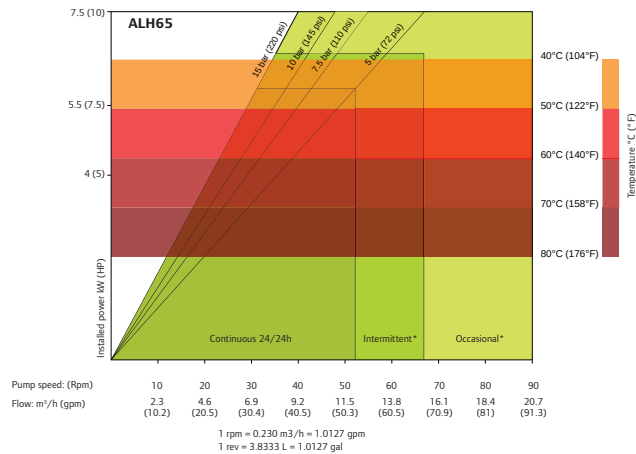


\*Intermittent use : minimum one hour stop after 2 hours run / \*Occasional use : maximum one hour a day



# ALH

## Characteristics / Technical Specifications

### 9.2 - ALBIN PUMP DIMENSIONS ALH05 TO ALH125 FLANGED GEAR MOTOR AND ALHS SERIES

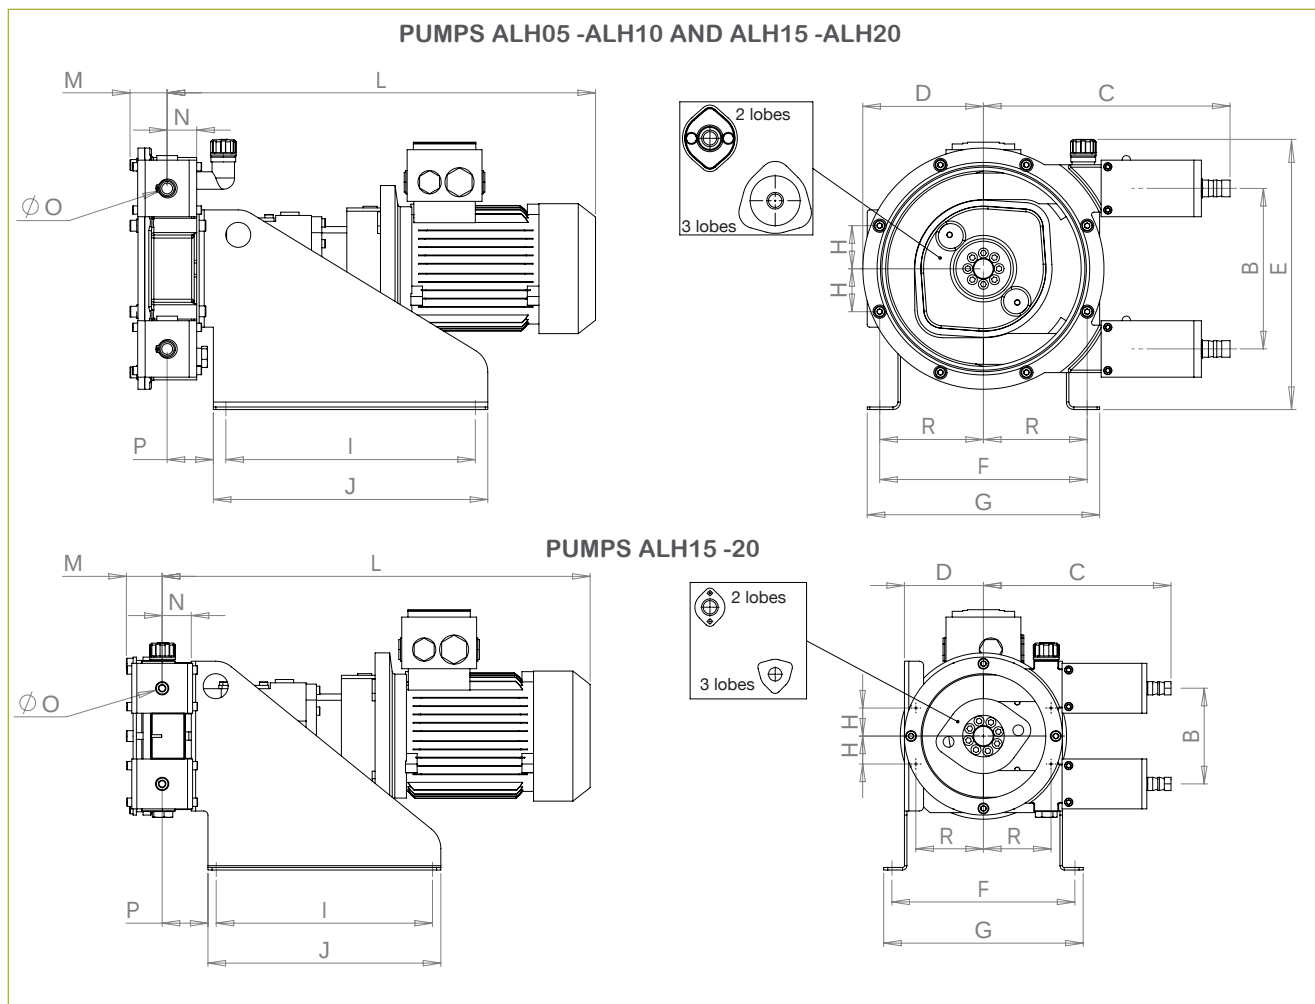

### DIMENSIONS

mm (Inch)

|             | A            | B            | C             | D            | E             | F            | G             | H             | I             | J             |
|-------------|--------------|--------------|---------------|--------------|---------------|--------------|---------------|---------------|---------------|---------------|
| ALH05-ALH10 | 104<br>(4.0) | 115<br>(4.5) | 226<br>(8.9)  | 95<br>(3.7)  | 271<br>(10.7) | 220<br>(8.7) | 240<br>(9.4)  | 33.5<br>(1.3) | 260<br>(10.2) | 280<br>(11.0) |
| ALH15       | 73<br>(2.9)  | 193<br>(7.6) | 297<br>(11.7) | 145<br>(5.7) | 325<br>(12.8) | 249<br>(9.8) | 280<br>(11.0) | 52<br>(2.0)   | 300<br>(11.8) | 330<br>(13.0) |
| ALH20       | 73<br>(2.9)  | 193<br>(7.6) | 297<br>(11.7) | 145<br>(5.7) | 325<br>(12.8) | 249<br>(9.8) | 280<br>(11.0) | 52<br>(2.0)   | 300<br>(11.8) | 330<br>(13.0) |


|             | K                 | L | M             | N             | ØO           | P             | R              |
|-------------|-------------------|---|---------------|---------------|--------------|---------------|----------------|
| ALH05-ALH10 | 4xø9<br>(4xø0.35) | - | 42.5<br>(1.7) | 36.5<br>(1.4) | 16*<br>(0.6) | 66<br>(2.6)   | 81.3<br>(3.2)  |
| ALH15       | 4xø13<br>(4xø0.5) | - | 46<br>(1.8)   | 35.5<br>(1.4) | 2*<br>(0.7)  | 70.5<br>(2.8) | 124.8<br>(4.9) |
| ALH20       | 4xø13<br>(4xø0.5) | - | 46<br>(1.8)   | 35.5<br>(1.4) | 25*<br>(1.0) | 70.5<br>(2.8) | 124.8<br>(4.9) |



# ALH

## Characteristics / Technical Specifications

PUMPS ALH25 TO ALH125

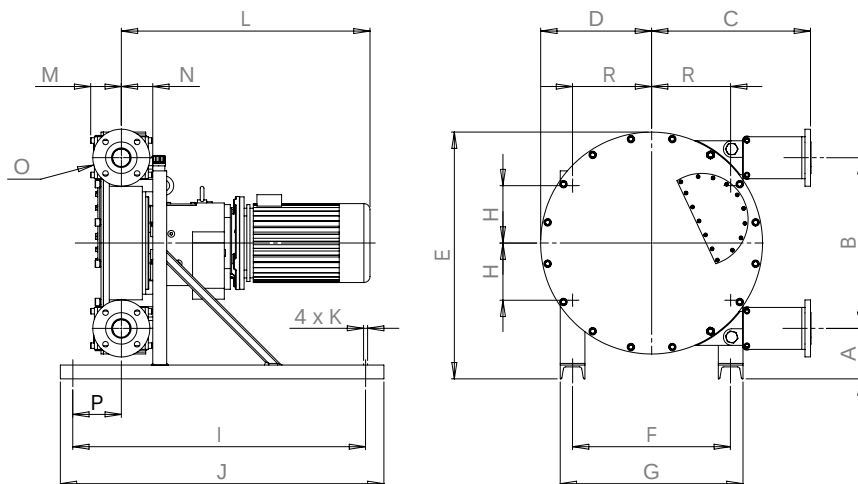

### DIMENSIONS

mm (Inch)

|        | A            | B           | C           | D          | E           | F           | G           | H           | I           | J           |
|--------|--------------|-------------|-------------|------------|-------------|-------------|-------------|-------------|-------------|-------------|
| ALH25  | 95 (3.7)     | 262 (10.3)  | 356 (14.0)  | 134 (5.3)  | 430 (17)    | 307 (12.0)  | 347 (13.7)  | 110 (4.3)   | 520 (20.5)  | 550 (21.6)  |
| ALH32  | 121 (4.8)    | 330 (13.0)  | 438 (17.2)  | 237 (9.3)  | 524 (20.6)  | 424 (16.7)  | 474 (18.7)  | 158 (6.2)   | 770 (30.3)  | 800 (31.5)  |
| ALH40  | 121 (4.8)    | 330 (13.0)  | 438 (17.2)  | 237 (9.3)  | 524 (20.6)  | 424 (16.7)  | 474 (18.7)  | 158 (6.2)   | 770 (30.3)  | 800 (31.5)  |
| ALHX40 | 110 (4.3)    | 430 (16.9)  | 414 (16.3)  | 294 (11.6) | 619 (24.4)  | 340 (13.4)  | 420 (16.5)  | 159.4 (6.3) | 850 (33.5)  | 950 (37.4)  |
| ALH50  | 164 (6.4)    | 554 (21.8)  | 522 (20.5)  | 360 (14.2) | 801 (31.5)  | 513 (20.2)  | 593 (23.3)  | 257 (10.1)  | 950 (37.4)  | 1050 (41.3) |
| ALHX65 | 143 (5.6)    | 597 (23.5)  | 598 (23.5)  | 390 (15.3) | 831 (32.7)  | 513 (20.1)  | 593 (23.3)  | 186 (7.3)   | 950 (37.4)  | 1050 (41.3) |
| ALH65  | 164 (6.4)    | 554 (21.8)  | 522 (20.5)  | 360 (14.2) | 801 (31.5)  | 513 (20.2)  | 593 (23.3)  | 257 (10.1)  | 950 (37.4)  | 1050 (41.3) |
| ALHX80 | 158 (6.2)    | 746 (29.4)  | 609 (24)    | 473 (18.6) | 1004 (39.5) | 580 (22.8)  | 680 (26.8)  | 290 (11.4)  | 1150 (45.2) | 1250 (49.2) |
| ALH80  | 266 (10.5)   | 876 (34.5)  | 803 (31.6)  | 561 (22.0) | 1265 (49.8) | 690 (27.2)  | 830 (32.3)  | 345 (13.6)  | 1300 (51.2) | 1400 (55.1) |
| ALH100 | 300 (11.8)   | 1040 (40.9) | 911 (35.9)  | 698 (27.5) | 1516 (59.7) | 820 (32.3)  | 960 (37.8)  | 387 (15.2)  | 1900 (74.8) | 2000 (78.7) |
| ALH125 | 258.5 (10.2) | 1273 (50.1) | 1037 (40.8) | 818 (32.2) | 1715 (67.5) | 1000 (39.4) | 1160 (45.7) | 500 (19.7)  | 1900 (74.8) | 2000 (78.7) |

|        | K              | L | M           | N           | O ANSI FLANGE / ISO FLANGE      | P            | R           |
|--------|----------------|---|-------------|-------------|---------------------------------|--------------|-------------|
| ALH25  | 4xø13 (4xø0.5) | - | 62 (2.4)    | 62 (2.4)    | ANSI 1 in / 150# (DN25 PN16)    | 71 (2.8)     | 110 (4.3)   |
| ALH32  | 4xø13 (4xø0.5) | - | 85 (3.3)    | 75 (2.9)    | ANSI 1.25 in / 150# (DN32 PN16) | 91.5 (3.6)   | 158 (6.2)   |
| ALH40  | 4xø13 (4xø0.5) | - | 85 (3.3)    | 75 (2.9)    | ANSI 1.5 in / 150# (DN40 PN16)  | 91.5 (3.6)   | 158 (6.2)   |
| ALHX40 | 4xø19 (4xø0.7) | - | 74 (2.9)    | 64 (2.5)    | ANSI 1.5 in / 150# (DN40 PN16)  | 87 (3.4)     | 159.4 (6.3) |
| ALH50  | 4xø19 (4xø0.7) | - | 99.5 (3.91) | 87.6 (3.4)  | ANSI 2 in / 150# (DN50 PN16)    | 148 (5.8)    | 186.5 (7.3) |
| ALHX65 | 4xø19 (4xø0.7) | - | 113 (4.4)   | 113 (4.4)   | ANSI 2.5 in / 150# (DN65 PN16)  | 136 (5.3)    | 256 (10.0)  |
| ALH65  | 4xø19 (4xø0.7) | - | 99.5 (3.91) | 87.6 (3.4)  | ANSI 2.5 in / 150# (DN65 PN16)  | 148 (5.8)    | 186.5 (7.3) |
| ALHX80 | 4xø19 (4xø0.7) | - | 108 (4.2)   | 108 (4.2)   | ANSI 3 in / 150# (DN80 PN16)    | 167 (6.6)    | 290 (11.4)  |
| ALH80  | 4xø27 (4xø1.0) | - | 125 (4.9)   | 108.5 (4.3) | ANSI 3 in / 150# (DN80 PN16)    | 202 (7.8)    | 345 (13.6)  |
| ALH100 | 4xø27 (4xø1.0) | - | 147 (5.8)   | 131 (5.1)   | ANSI 4 in / 150# (DN100 PN16)   | 361 (14.2)   | 387 (15.2)  |
| ALH125 | 4xø27 (4xø1.0) | - | 160.5 (6.3) | 144.5 (5.7) | ANSI 5 in / 150# (DN125 PN16)   | 363.5 (14.3) | 500 (19.7)  |









# ALH

## Characteristics / Technical Specifications

### PUMPS ALHS05 TO ALHS20

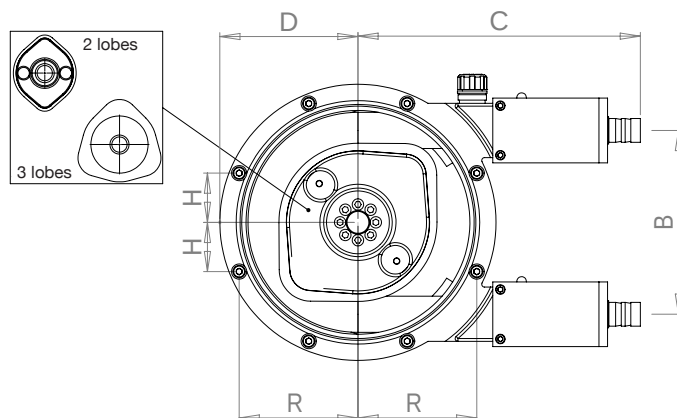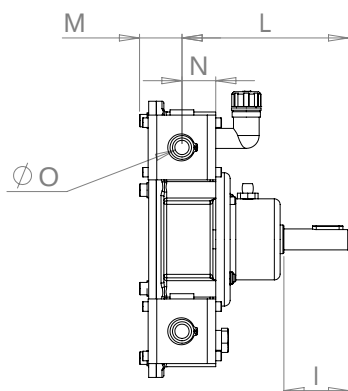

### PUMPS ALHS15-20

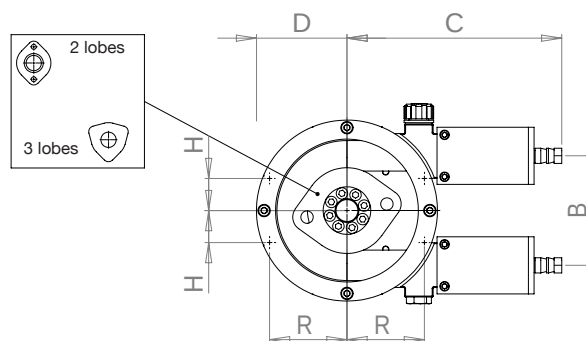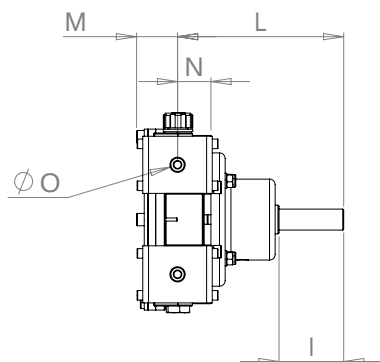

## DIMENSIONS

mm (Inch)


|                  |              |               |              |               |              |               |               | Connections              |                | SHAFT       |          |                  |
|------------------|--------------|---------------|--------------|---------------|--------------|---------------|---------------|--------------------------|----------------|-------------|----------|------------------|
|                  | B            | C             | D            | H             | L            | M             | N             | øO                       | R              | I           | DIAMETER | FRAME FASTENINGS |
| ALHS05<br>ALHS10 | 115<br>(4.5) | 226<br>(8.9)  | 95<br>(3.7)  | 33.5<br>(1.3) | 146<br>(5.7) | 42.5<br>(1.7) | 36.5<br>(1.4) | ø16 (ø0.6)               | 81.3<br>(3.2)  | 43<br>(1.7) | 18k6     | 4xM8             |
| ALHS15<br>ALHS20 | 193<br>(7.6) | 297<br>(11.7) | 145<br>(5.7) | 52<br>(2.0)   | 175<br>(6.9) | 46<br>(1.8)   | 35.5<br>(1.4) | ø20 (ø0.8)<br>ø25 (ø1.0) | 124.8<br>(4.9) | 72<br>(2.8) | 22k6     | 4xM8             |



# ALH

## Characteristics / Technical Specifications

PUMPS ALHS25 TO ALH125

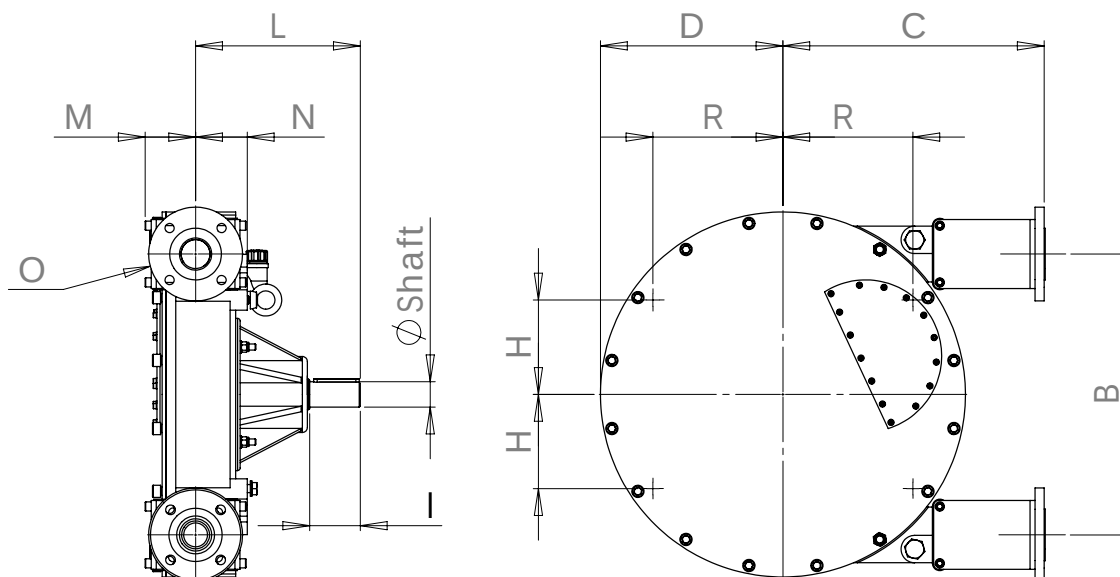

### DIMENSIONS

mm (Inch)

|                  | B              | C              | D             | H              | L               | M              | N              | Connections                                                       | R              | SHAFT          |          | FRAME FASTENINGS |
|------------------|----------------|----------------|---------------|----------------|-----------------|----------------|----------------|-------------------------------------------------------------------|----------------|----------------|----------|------------------|
|                  |                |                |               |                |                 |                |                | O ISO FLANGES                                                     |                | I              | DIAMETER |                  |
| ALHS25           | 262<br>(10.3)  | 356<br>(14.0)  | 134<br>(5.3)  | 110<br>(4.3)   | 192<br>(7.5)    | 62<br>(2.4)    | 62<br>(2.4)    | ANSI 1 in / 150# (DN25 PN16)                                      | 110<br>(4.3)   | 63<br>(2.5)    | 30k6     | 4xM10            |
| ALHS32<br>ALHS40 | 330<br>(13.0)  | 438<br>(17.2)  | 237<br>(9.3)  | 158<br>(6.2)   | 263<br>(10.3)   | 85<br>(3.3)    | 75<br>(2.9)    | ANSI 1.25 in / 150# (DN32 PN16)<br>ANSI 1.5 in / 150# (DN40 PN16) | 158<br>(6.2)   | 92<br>(3.6)    | 40k6     | 4xM12            |
| ALHSX40          | 430<br>(16.9)  | 414<br>(16.3)  | 294<br>(11.6) | 159.4<br>(6.3) | 260<br>(10.2)   | 74<br>(2.9)    | 64<br>(2.5)    | ANSI 1.5 in / 150# (DN40 PN16)                                    | 159.4<br>(6.3) | 102.5<br>(4.0) | 40k6     | 4xM12            |
| ALHS50<br>ALHS65 | 554<br>(21.8)  | 522<br>(20.5)  | 360<br>(14.1) | 257<br>(10.1)  | 325<br>(12.8)   | 99.5<br>(3.9)  | 87.6<br>(3.4)  | ANSI 2 in / 150# (DN50 PN16)<br>ANSI 2.5 in / 150# (DN65 PN16)    | 186.5<br>(7.3) | 104.5<br>(4.1) | 50k6     | 4xM16            |
| ALHSX65          | N/A            | N/A            | N/A           | N/A            | N/A             | N/A            | N/A            | N/A                                                               | N/A            | N/A            | N/A      | N/A              |
| ALHSX80          | 746<br>(29.3)  | 609<br>(24.0)  | 473<br>(18.6) | 290<br>(11.4)  | 395.4<br>(15.6) | 108<br>(4.2)   | 108<br>(4.2)   | ANSI 3 in / 150# (DN80 PN16)                                      | 167<br>(6.6)   | 131.4<br>(5.2) | 70k6     | 4xM20            |
| ALHS80           | 876<br>(34.5)  | 803<br>(31.6)  | 561<br>(22.0) | 345<br>(13.6)  | 387.4<br>(15.2) | 125<br>(4.9)   | 108.5<br>(4.3) | ANSI 3 in / 150# (DN80 PN16)                                      | 345<br>(13.6)  | 131.4<br>(5.3) | 80k6     | 4xM20            |
| ALHS100          | 1040<br>(40.9) | 911<br>(35.6)  | 698<br>(27.5) | 387<br>(15.2)  | 530<br>(20.9)   | 147<br>(5.8)   | 131<br>(5.1)   | ANSI 4 in / 150# (DN100 PN16)                                     | 387<br>(15.2)  | 153<br>(6.0)   | 100k6    | 4xM20            |
| ALHS125          | 1273<br>(50.1) | 1037<br>(40.8) | 818<br>(32.2) | 500<br>(19.7)  | 606<br>(23.8)   | 160.5<br>(6.3) | 144.5<br>(5.7) | ANSI 5 in / 150# (DN125 PN16)                                     | 500<br>(19.7)  | 216<br>(8.5)   | 120k6    | 4xM24            |



# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

Exploded view ALH05 - ALH10

Wheel #3  
3 lobe version

REFER TO ALH PUMP PARTS LIST FOR PART DESIGNATION

Ce document est la propriété de Albin Pump AB. Toute reproduction interdite sans autorisation expresse de Albin Pump AB.

|             |                                           |             |                        |                |
|-------------|-------------------------------------------|-------------|------------------------|----------------|
| MATERIAL:   | WEIGHT:                                   | CUSTOMER:   | PUMP TYPE:<br>ALH05-10 | Code Outil:    |
| BRUT:       | Gravé:                                    | PROJECT N°: | PART NUMBER            | Serial number: |
| DWG:        | Chiffre:                                  | +/-         | REP                    |                |
| TITLE:      |                                           |             |                        |                |
| SCALE<br>1: | DWG N°:<br>EXPLODE ALH05-10 IND01 10/2011 | SIZE: A3    |                        |                |
|             |                                           | REV: 1      |                        |                |


ALBIN PUMP AB  
Åkersgatan 1  
431 50 Mölndal SWEDEN



# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

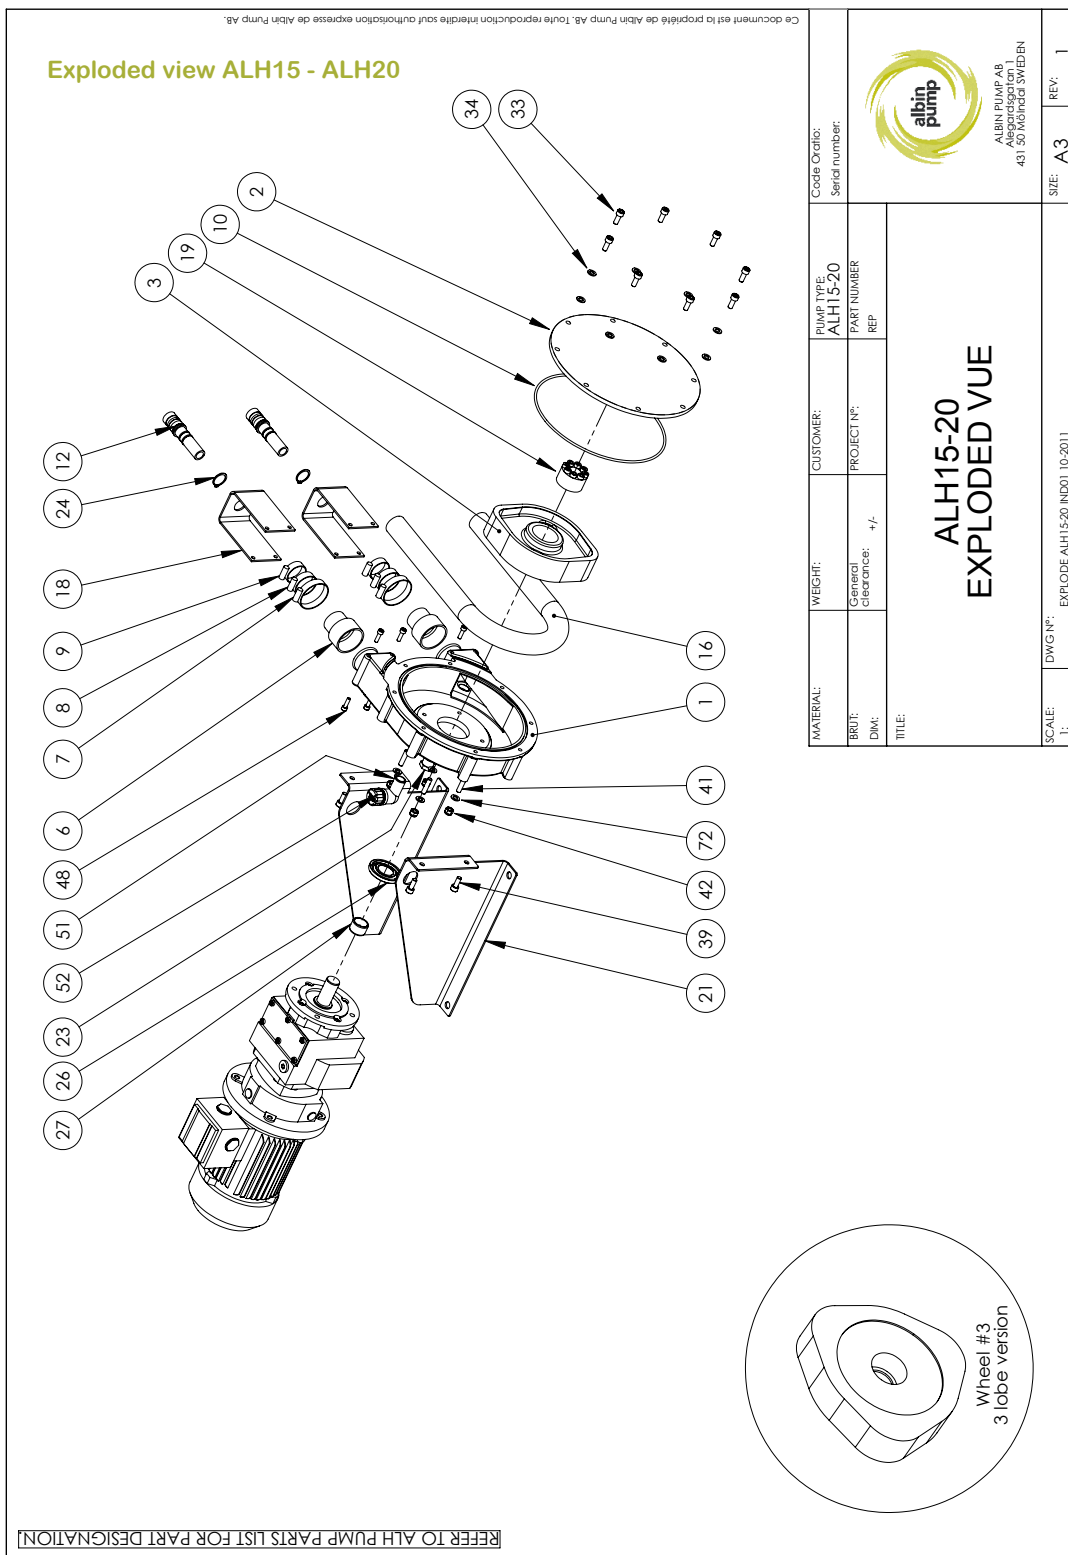




# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

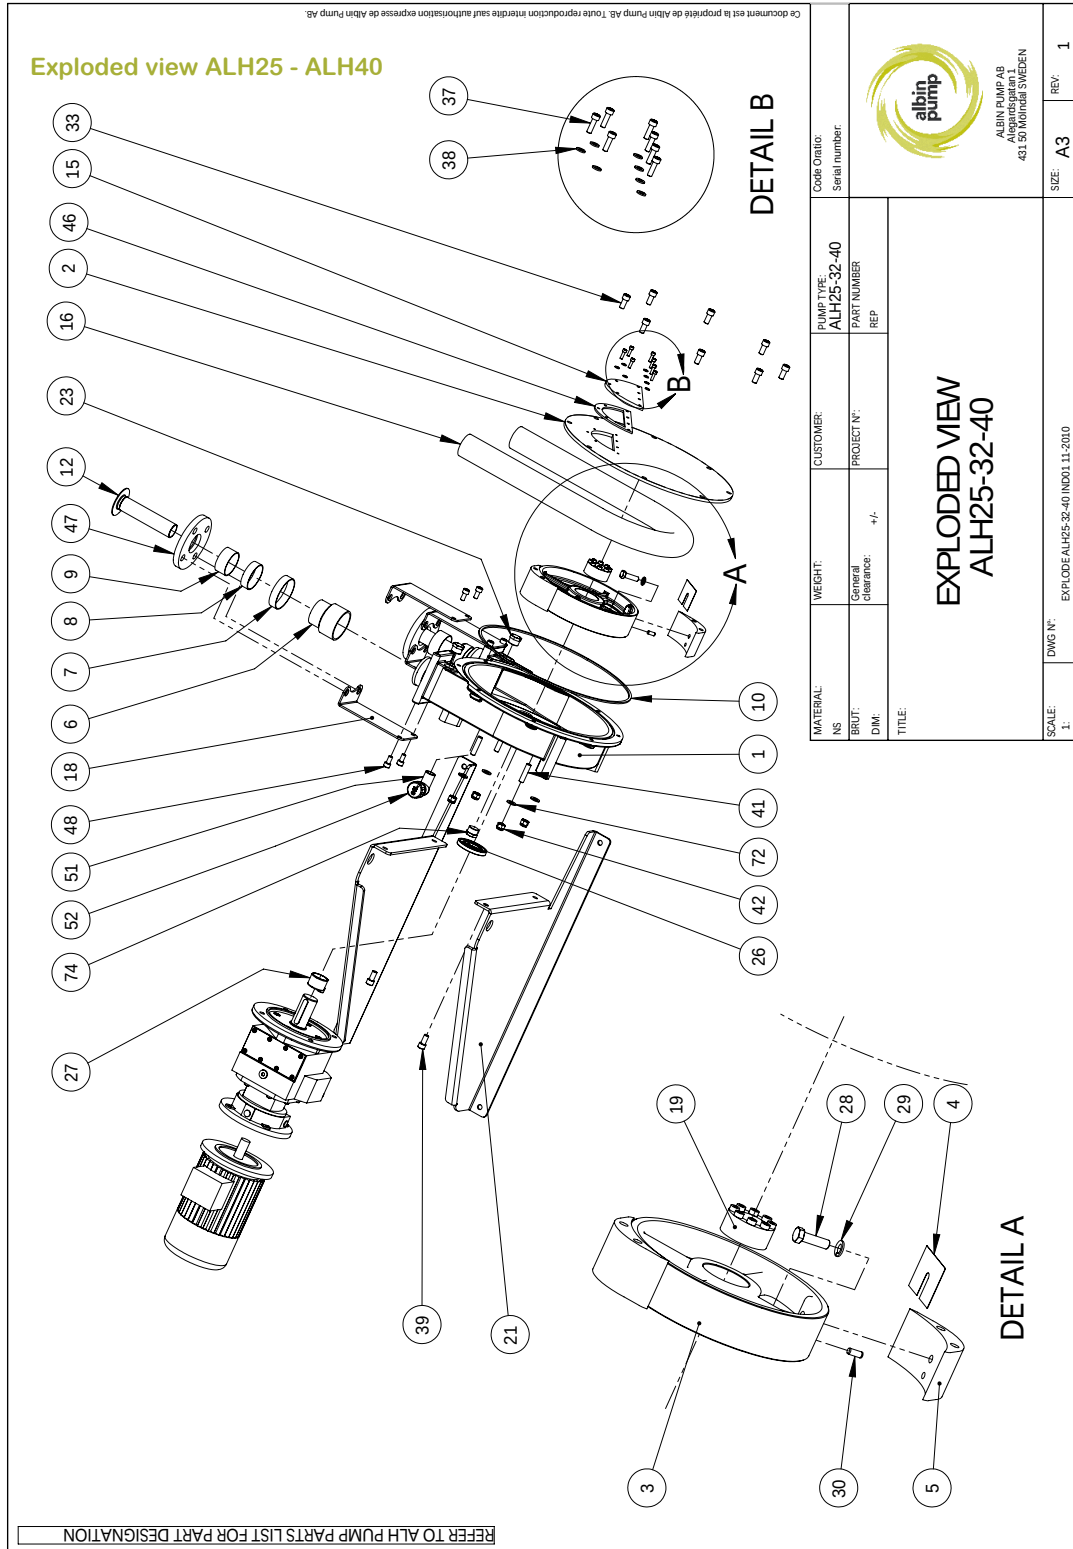



# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

**Exploded view ALHX40 - ALH65**

HELICAL GEARBOX  
ALHX40: seal ring#27 only.  
ALH50-65: spacer ring#73 and seal ring#27.

PLANETARY GEARBOX (ALH50-65)  
seal ring#27 only.

**DETAIL B**

**DETAIL A**

**DETAIL B**

REFER TO ALH PUMP PARTS LIST FOR PART DESIGNATION.

|                                       |                                   |                                               |                                   |                                |
|---------------------------------------|-----------------------------------|-----------------------------------------------|-----------------------------------|--------------------------------|
|                                       |                                   | <b>ALHX40-50-65<br/>EXPLODED VIEW</b>         |                                   | CODE ORIGIN:<br>SERIAL NUMBER: |
| MATERIAL:<br>NS/Material: <non space> | WEIGHT:<br>General clearance: +/- | CUSTOMER:<br>PROJECT N°:                      | PUMP TYPE:<br><b>ALHX40-50-65</b> | PART NUMBER:                   |
| BRUT:                                 |                                   | DIM:                                          |                                   | TITLE:                         |
| SCALE:<br>1                           |                                   | DWG N°:<br>EXPLODE ALHX40-50-65 INQ01.11.2010 |                                   | SIZE: A3<br>REV: 1             |



## 9.3 - NOMENCLATURE

Exploded view ALHX65

REFER TO ALH PUMP PARTS LIST FOR PART DESIGNATION

Code Oratio:  
Serial number:

PUMP TYPE:  
ALHX65

CUSTOMER:  
PROJECT N°:

MATERIAL:  
NSMatériau <non spécifié>

BRUT:  
DIM: +/-

TITLE:  
ALHX65  
EXPLODED VIEW

EXPLODE ALHX65 IND01 6-2021

SCALE:  
1:

DWG N°:

SIZE: A3

REV: 1

albin pump  
ALBIN PUMP AB  
Kungälvsvägen 1  
431 50 MÖLNDAL SWEDEN






# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

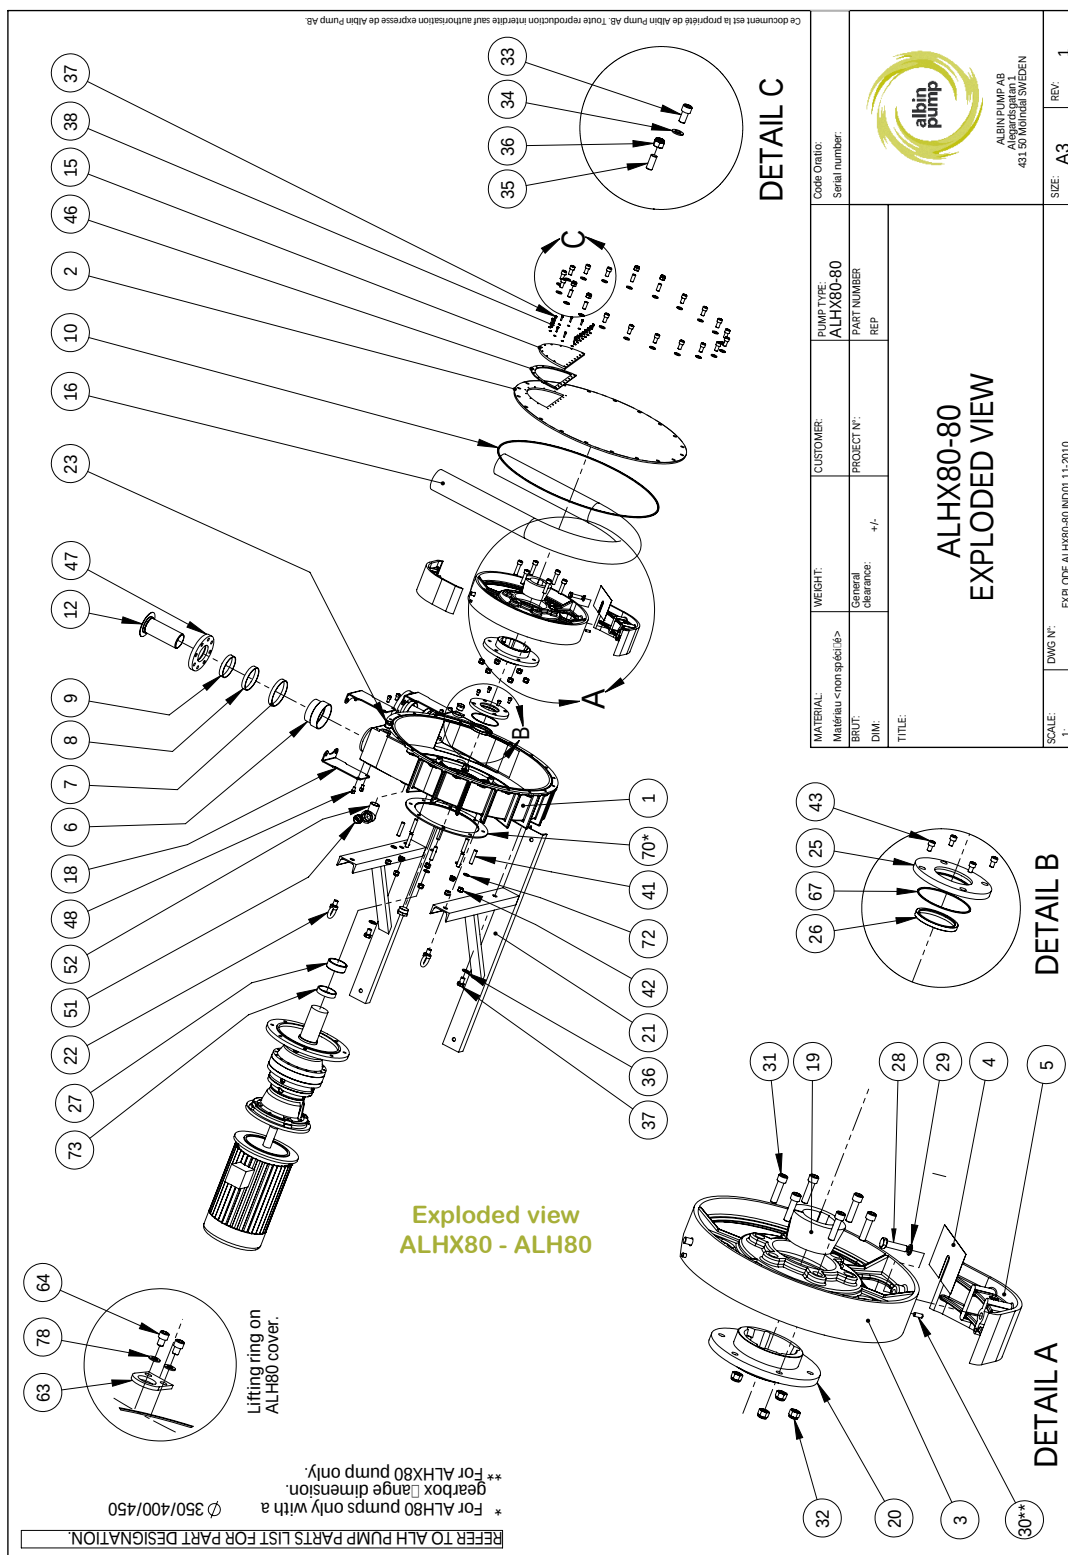




# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

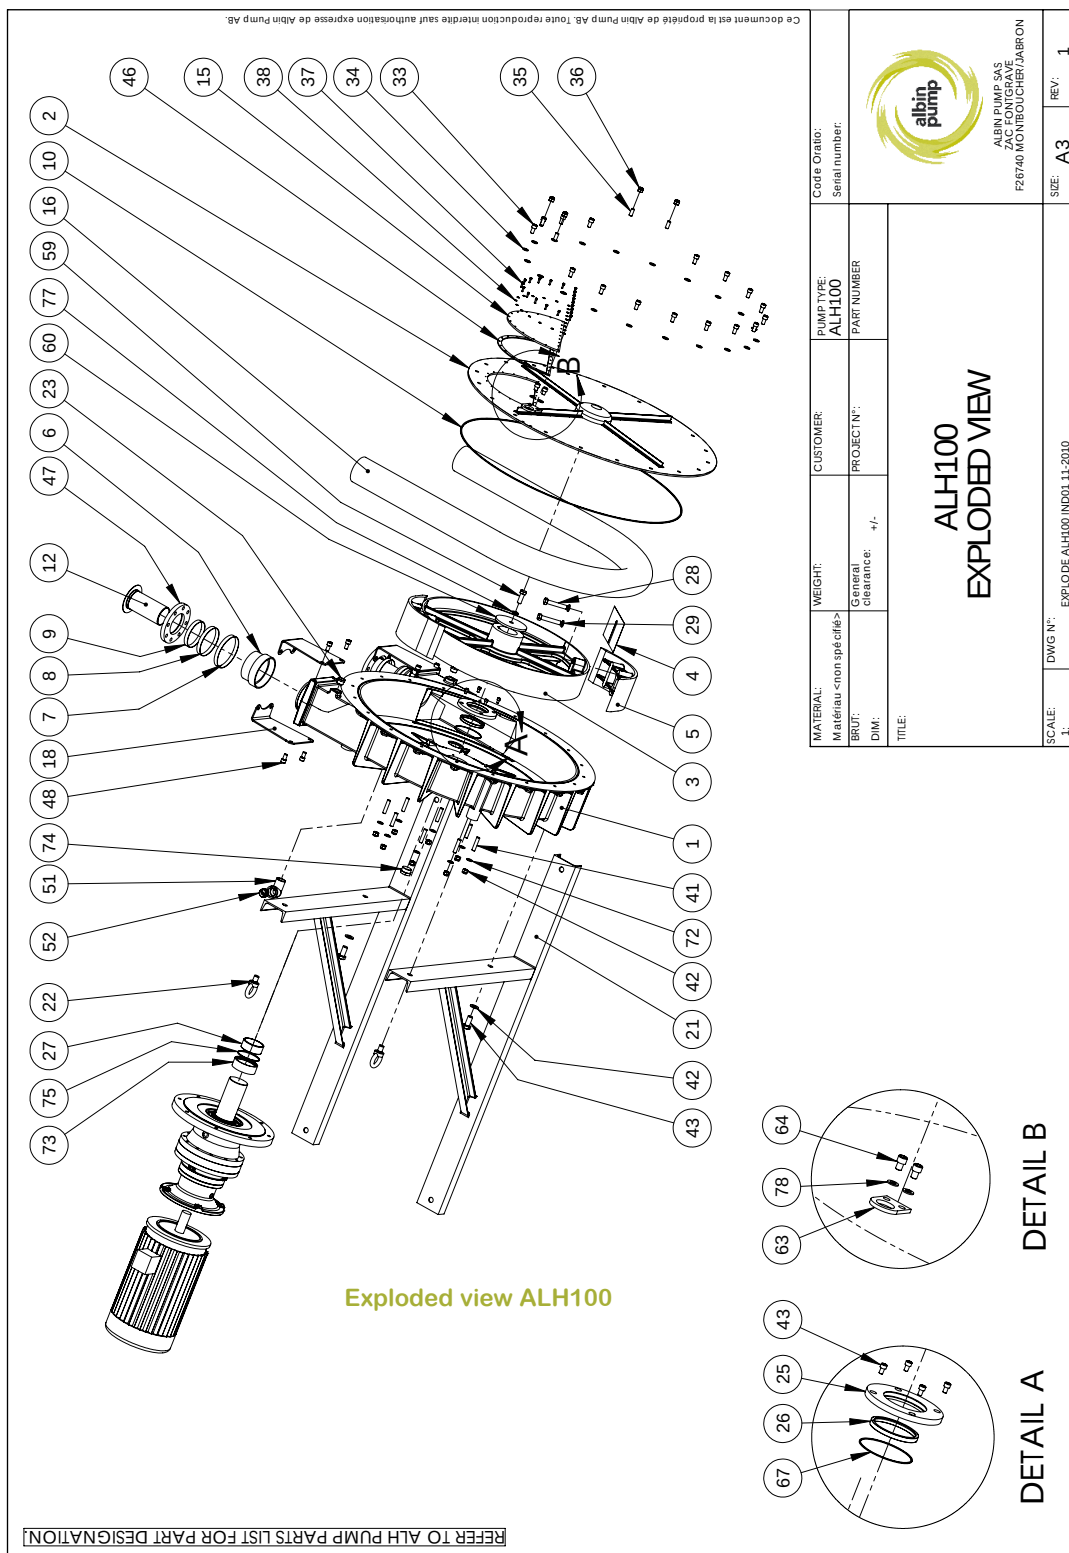




# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

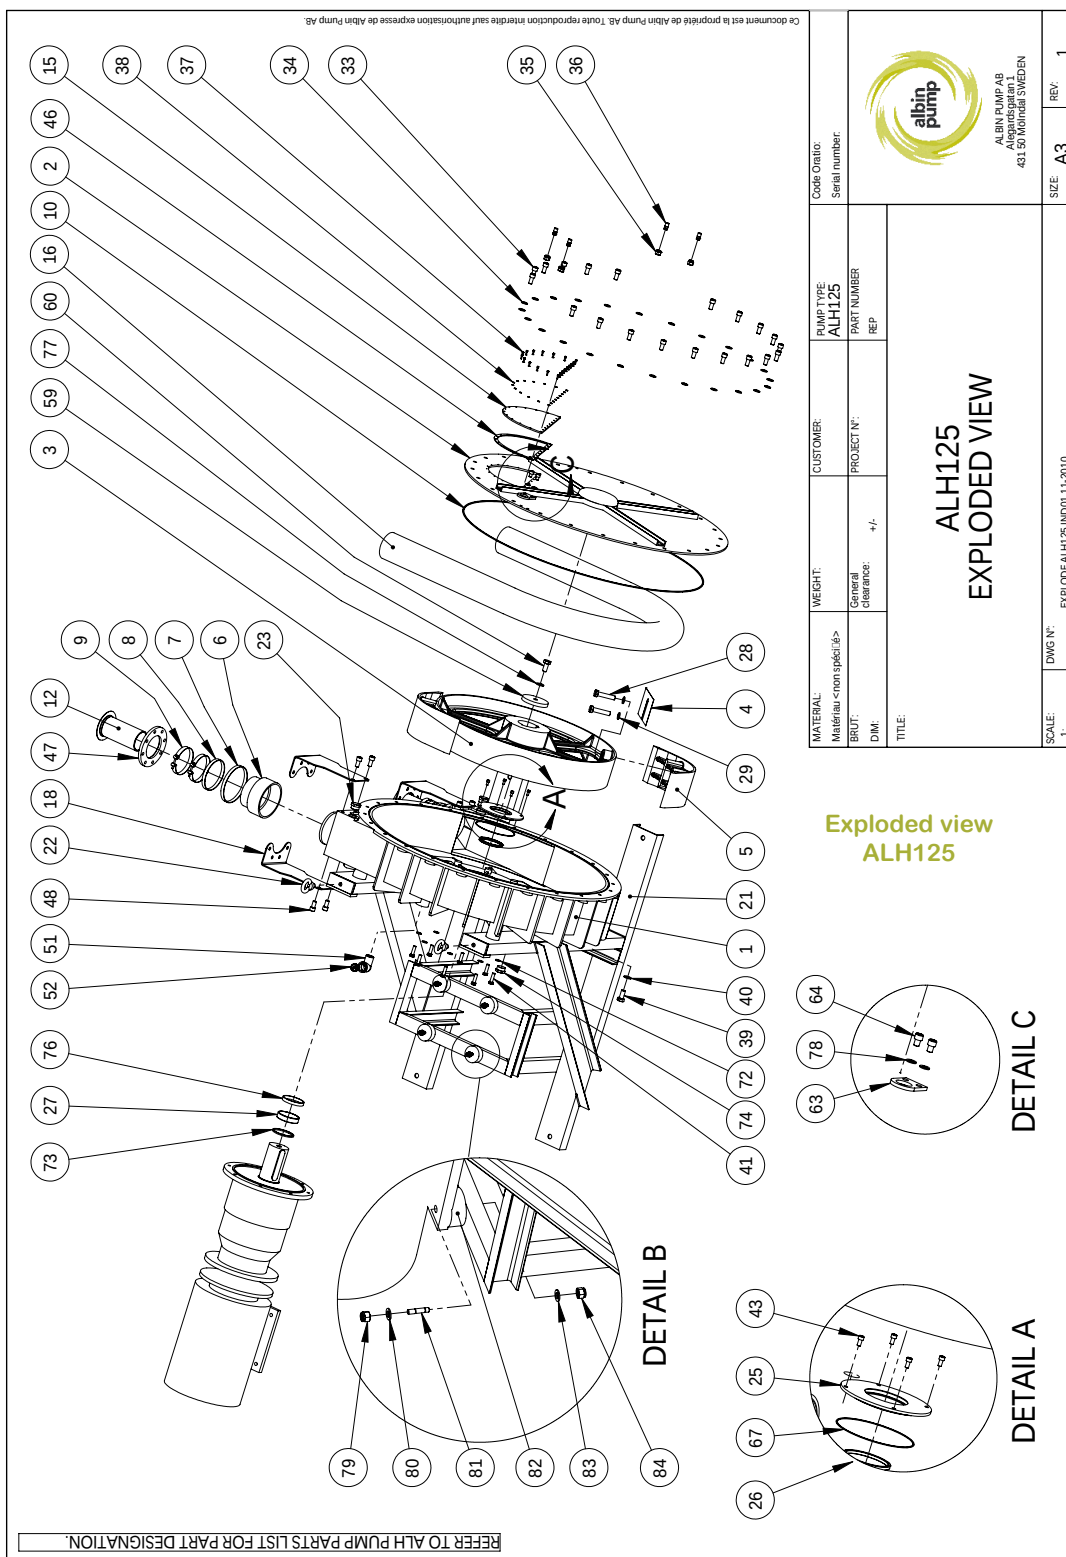




# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

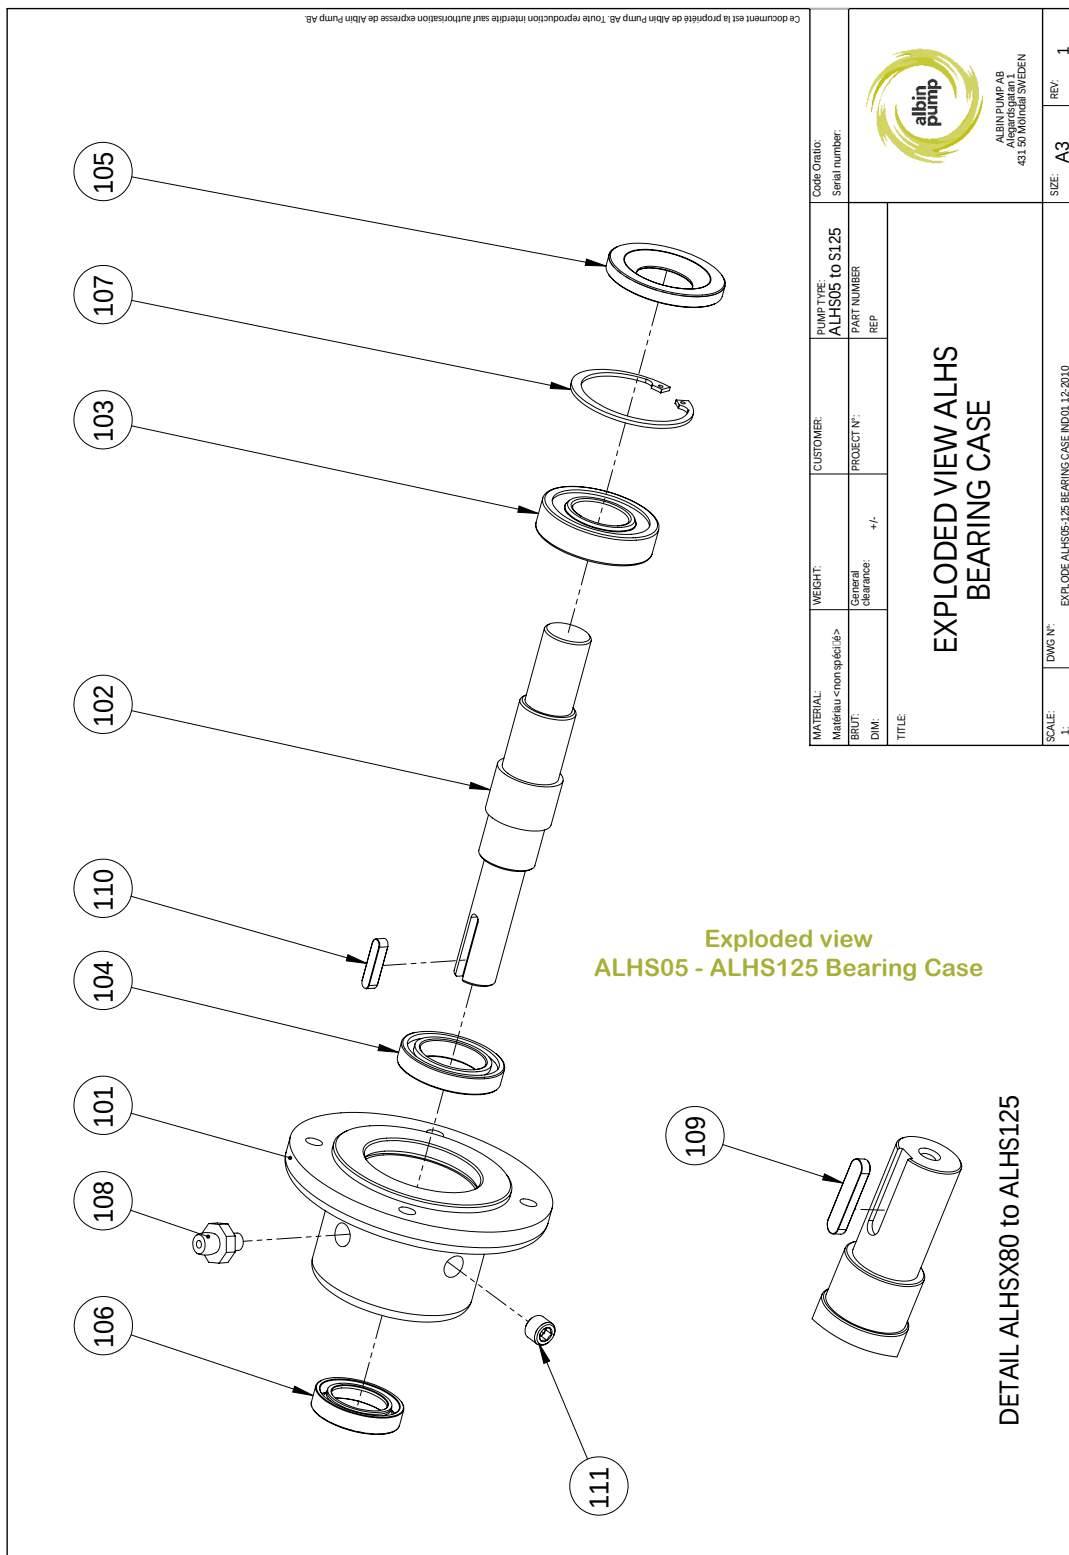




# ALH

## Characteristics / Technical Specifications

### 9.3 - NOMENCLATURE

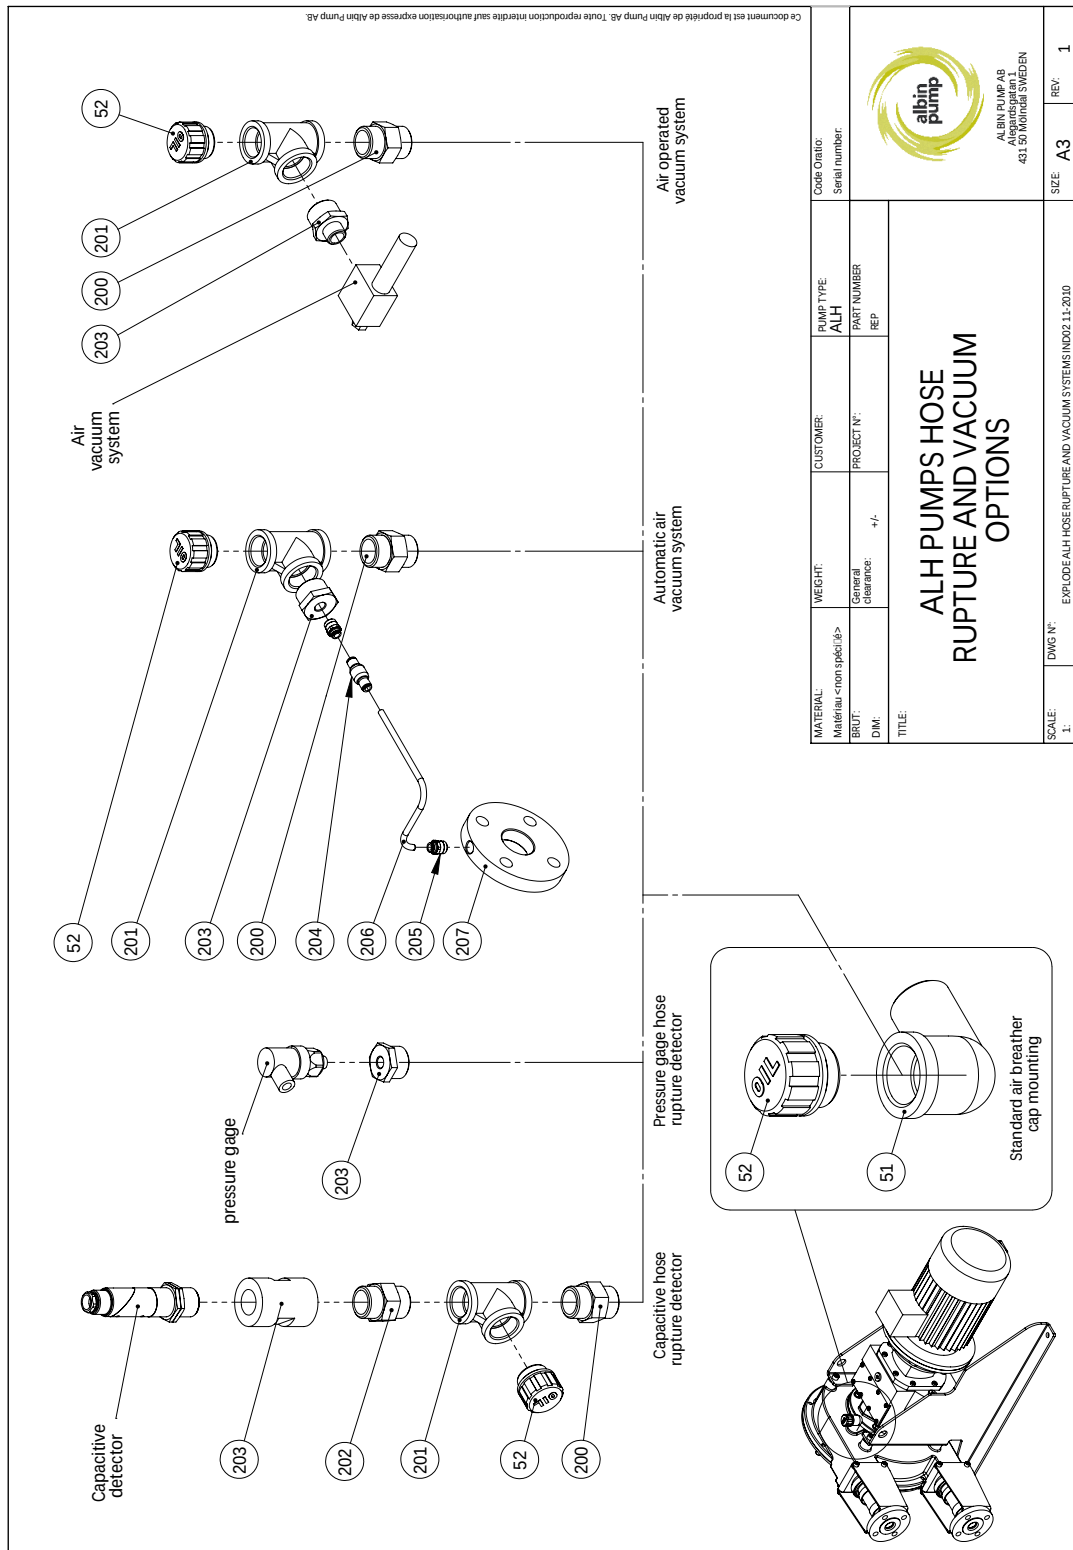



# ALH

## Characteristics / Technical Specifications

### 9.4 - ALH PUMP PARTS LIST (see specific exploded view)

| REF. | DESIGNATION               | ALH 05<br>(3 LOBES)    | ALH10                  | ALH10<br>(3 LOBES)     | ALH15                  | ALH15<br>(3 LOBES)     | ALH20                  | ALH20<br>(3 LOBES)     | ALH25                  | ALH32                  | ALH40                  |
|------|---------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|
| 1    | CASING                    | ALH100110              | ALH100110              | ALH100110              | ALH150110              | ALH150110              | ALH150110              | ALH150110              | ALH250110              | ALH320110              | ALH320110              |
| 2    | COVER                     | ALH100200              | ALH100200              | ALH100200              | ALH150201              | ALH150201              | ALH150201              | ALH150201              | ALH250200              | ALH320200              | ALH320200              |
| 3    | WHEEL                     | ALH050310              | ALH100310              | ALH100303              | ALH150310              | ALH150330              | ALH200310              | ALH200340              | ALH250310              | ALH320310              | ALH320310              |
| 4    | SHIM                      |                        |                        |                        |                        |                        |                        |                        | ALH250400              | ALH320400              | ALH320400              |
| 5    | SHOE CAST IRON            |                        |                        |                        |                        |                        |                        |                        | ALH250530              | ALH320530              | ALH400530              |
| 6    | SHOE PPH                  |                        |                        |                        |                        |                        |                        |                        | ALH250540              | ALH320550              | ALH400550              |
| 6    | SLEEVE                    | ALH100600              | ALH100600              | ALH100600              | ALH150600              | ALH150600              | ALH150600              | ALH150600              | ALH250600              | ALH320600              | ALH320600              |
| 7    | CLAMP SLEEVE              | ALHCL3250              | ALHCL3250              | ALHCL3250              | ALHCL5070              | ALHCL5070              | ALHCL5070              | ALHCL5070              | ALHCL7090              | ALHCL7090              | ALHCL7090              |
| 8    | CLAMP ON SLEEVE / HOSE    | ALHCL3639              | ALHCL3639              | ALHCL3639              | ALHCL4043              | ALHCL4043              | ALHCL4043              | ALHCL4043              | ALHCL6063              | ALHCL6873              | ALHCL6873              |
| 9    | CLAMP ON HOSE             | ALHCL3235              | ALHCL3235              | ALHCL3235              | ALHCL3639              | ALHCL3639              | ALHCL3639              | ALHCL3639              | ALHSL602N              | ALHSL602N              | ALHSL602N              |
| 10   | COVER SEAL                | ALHCO03485             | ALHCO03485             | ALHCO03485             | ALHCO3.5780            | ALHCO3.5780            | ALHCO3.5780            | ALHCO3.5780            | ALHCO61050             | ALHCO61335             | ALHCO61335             |
| 12   | INSERT SS                 | ALH051203-00-16        | ALH101203-00-16        | ALH101203-00-16        | ALH151203-00-20        | ALH151203-00-20        | ALH201203-00-25        | ALH201203-00-25        | ALH251200              | ALH321200              | ALH401200              |
| 12   | INSERT PPH                | ALH051204-00-16        | ALH101204-00-16        | ALH101204-00-16        | ALH151204-00-20        | ALH151204-00-20        | ALH201204-00-25        | ALH201204-00-25        | ALH251210              | ALH321210              | ALH401210              |
| 12   | INSERT PVDF               | ALH051218-00-16        | ALH101218-00-16        | ALH101218-00-16        | ALH151218-00-20        | ALH151218-00-20        | ALH201218-00-25        | ALH201218-00-25        | ALH251220              | ALH321220              | ALH401220              |
| 14   | LUBRICANT                 | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  |
| 15   | SIGHT GLASS               |                        |                        |                        |                        |                        |                        |                        | ALH251500              | ALH321500              | ALH321500              |
| 16   | HOSE                      | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL |
| 18   | BRACKET GALV CS           | ALH101801              | ALH101801              | ALH101801              | ALH151801              | ALH151801              | ALH201801              | ALH201801              |                        |                        |                        |
| 18   | BRACKET SS                | ALH101800              | ALH101800              | ALH101800              | ALH151800              | ALH151800              | ALH201800              | ALH201800              |                        |                        |                        |
| 18   | ANSI/DIN BRACKET GALV CS  |                        |                        |                        |                        |                        |                        |                        | ALH251801-00-LG        | ALH321801-00-LG        | ALH401801-00-LG        |
| 18   | ANSI/DIN BRACKET SS 304   |                        |                        |                        |                        |                        |                        |                        | ALH251802-00-LG        | ALH321802-00-LG        | ALH401802-00-LG        |
| 18   | ANSI/DIN BRACKET SS 316   | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              |                        |                        |                        |
| 19   | HUB                       | ALHHU2550              | ALHHU2550              | ALHHU2550              | ALHHU2550              | ALHHU2550              | ALHHU2550              | ALHHU2550              | ALHHU4065              | ALHHU4065              | ALHHU4065              |
| 20   | BOLT ON PLATE             |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 21   | FRAME CS L                | ALH102101L             | ALH102101L             | ALH102101L             | ALH152101L             | ALH152101L             | ALH152101L             | ALH152101L             | ALH252100L             | ALH322100L             | ALH322100L             |
| 21   | FRAME CS R                | ALH102101R             | ALH102101R             | ALH102101R             | ALH152101R             | ALH152101R             | ALH152101R             | ALH152101R             | ALH252100R             | ALH322100R             | ALH322100R             |
| 21   | FRAME SS L                | ALH102100L             | ALH102100L             | ALH102100L             | ALH152100L             | ALH152100L             | ALH152100L             | ALH152100L             | ALH252100L             | ALH322100L             | ALH322100L             |
| 21   | FRAME SS R                | ALH102100R             | ALH102100R             | ALH102100R             | ALH152100R             | ALH152100R             | ALH152100R             | ALH152100R             | ALH252100R             | ALH322100R             | ALH322100R             |
| 21   | COMPLETE FRAME            |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 22   | LIFT RING                 |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 23   | OIL PLUG                  | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             | ALHPL12GSS             |
| 24   | CIRCLIPS                  | ALH102400              | ALH102400              | ALH102400              | ALH152400              | ALH152400              | ALH202400              | ALH202400              |                        |                        |                        |
| 25   | SEAL FLANGE               |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 26   | SHAFT SEAL                | ALHSH3062              | ALHSH3062              | ALHSH3062              | ALHSH3062              | ALHSH3062              | ALHSH3062              | ALHSH3062              | ALHSH4560              | ALHSH4580              | ALHSH4580              |
| 27   | SEAL RING                 | ALHSE2530              | ALHSE2530              | ALHSE2530              | ALHSE2530              | ALHSE2530              | ALHSE2530              | ALHSE2530              | ALHSE4045              | ALHSE4045              | ALHSE4045              |
| 28   | SHOE BOLT                 |                        |                        |                        |                        |                        |                        |                        | SC1030HSS              | SC1235HSS              | SC1235HSS              |
| 29   | SHOE BOLT WASHER          |                        |                        |                        |                        |                        |                        |                        | WAMW102N               | WAMW122N               | WAMW122N               |
| 30   | SHOE CENTERING PIN        |                        |                        |                        |                        |                        |                        |                        | ALHST0820              | ALHST0820              | ALHST0820              |
| 31   | BOLT ON PLATE SCREW       |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 32   | NUT FOR REF 31            |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 33   | COVER BOLT                | SC0820CSS              | SC0820CSS              | SC0820CSS              | SC0820CSS              | SC0820CSS              | SC0820CSS              | SC0820CSS              | SC1020CSS              | SC1225CSS              | SC1225CSS              |
| 34   | COVER BOLT WASHER         |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 35   | COVER STUD                |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 36   | NUT FOR REF 35            |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 37   | SIGHT GLASS BOLT          |                        |                        |                        |                        |                        |                        |                        | SC0620CSS              | SC0620CSS              | SC0620CSS              |
| 38   | WASHER FOR REF 37         |                        |                        |                        |                        |                        |                        |                        | WAM06ZSS               | WAM06ZSS               | WAM06ZSS               |
| 39   | FRAME BOLT                | SC0816CSS              | SC0816CSS              | SC0816CSS              | SC0816CSS              | SC0816CSS              | SC0816CSS              | SC0816CSS              | SC1020CSS              | SC1220CSS              | SC1220CSS              |
| 40   | WASHER FOR REF 39         |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 41   | GEARBOX STUD              | GUD939M0825            | GUD939M0825            | GUD939M0825            | GUD939M0825            | GUD939M0825            | GUD939M0825            | GUD939M0825            | GUD939M1030            | GUD939M1235-304        | GUD939M1235-304        |
| 42   | NUT FOR REF 41            | NU08NYZN               | NU08NYZN               | NU08NYZN               | NU08NYZN               | NU08NYZN               | NU08NYZN               | NU08NYZN               | NU10NYZN               | NU12NYSS               | NU12NYSS               |
| 43   | SEAL FLANGE BOLT          |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 46   | SIGHT GLASS SEAL          |                        |                        |                        |                        |                        |                        |                        | ALH254600              | ALH324600              | ALH324600              |
| 47   | INLET & OULET FLANGE DIN  | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ALH254700              | ALH324700              | ALH404700              |
| 47   | INLET & OULET FLANGE ANSI | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ON DEMAND              | ALH254720              | ALH324720              | ALH404720              |
| 48   | BRACKET BOLT              | SC0612CSS              | SC0612CSS              | SC0612CSS              | SC0612CSS              | SC0612CSS              | SC0612CSS              | SC0612CSS              | SC0816CSS              | SC1016CSS              | SC1016CSS              |
| 49   | BRACKET BOLT WASHER       |                        |                        |                        |                        |                        |                        |                        |                        |                        |                        |
| 51   | 90° BEND                  |                        |                        |                        | ALHBEFM12SS            | ALHBEFM12SS            | ALHBEFM12SS            | ALHBEFM12SS            | ALHBEFM12SS            | ALHBEFM34SS            | ALHBEFM34SS            |



# ALH

## Characteristics / Technical Specifications

### 9.4 - ALH PUMP PARTS LIST (see specific exploded view)

| REF. | DESIGNATION               | ALH 05<br>(3 LOBES) | ALH10     | ALH10<br>(3 LOBES) | ALH15     | ALH15<br>(3 LOBES) | ALH20     | ALH20<br>(3 LOBES) | ALH25      | ALH32      | ALH40      |
|------|---------------------------|---------------------|-----------|--------------------|-----------|--------------------|-----------|--------------------|------------|------------|------------|
| 52   | BREATHING PLUG            | ALHPV12             | ALHPV12   | ALHPV12            | ALHPV12   | ALHPV12            | ALHPV12   | ALHPV12            | ALHPV12    | ALHPV34    | ALHPV34    |
| 59   | WHEEL BOLT WASHER         |                     |           |                    |           |                    |           |                    |            |            |            |
| 60   | WHEEL BOLT                |                     |           |                    |           |                    |           |                    |            |            |            |
| 63   | LIFT RING ON COVER        |                     |           |                    |           |                    |           |                    |            |            |            |
| 64   | BOLT for REF 63           |                     |           |                    |           |                    |           |                    |            |            |            |
| 67   | O RING FOR SEAL FLANGE    |                     |           |                    |           |                    |           |                    |            |            |            |
| 70   | GEARBOX CENTRING FLANGE   |                     |           |                    |           |                    |           |                    |            |            |            |
| 71   | COVER FLANGE              | ALH107101           | ALH107101 | ALH107101          | ALH157103 | ALH157103          | ALH157103 | ALH157103          |            |            |            |
| 72   | WASHER for REF 41         | WAM08ZSS            | WAM08ZSS  | WAM08ZSS           | WAM08ZSS  | WAM08ZSS           | WAM08ZSS  | WAM08ZSS           | WAM10ZSS   | WAM12ZSS   | WAM12ZSS   |
| 73   | SPACER RING               |                     |           |                    |           |                    |           |                    |            |            |            |
| 74   | PLUG                      |                     |           |                    |           |                    |           |                    | ALHPL12GSS | ALHPL34GSS | ALHPL34GSS |
| 75   | O-RING FOR 73             |                     |           |                    |           |                    |           |                    |            |            |            |
| 76   | SPACER RING (ALH125 ONLY) |                     |           |                    |           |                    |           |                    |            |            |            |
| 77   | WASHER FOR 59             |                     |           |                    |           |                    |           |                    |            |            |            |
| 78   | WASHER FOR LIFT RING 63   |                     |           |                    |           |                    |           |                    |            |            |            |
| 79   | NUT                       |                     |           |                    |           |                    |           |                    |            |            |            |
| 80   | WASHER                    |                     |           |                    |           |                    |           |                    |            |            |            |
| 81   | GUDGEON                   |                     |           |                    |           |                    |           |                    |            |            |            |
| 82   | SILENT BLOC               |                     |           |                    |           |                    |           |                    |            |            |            |
| 83   | WASHER                    |                     |           |                    |           |                    |           |                    |            |            |            |
| 84   | NUT                       |                     |           |                    |           |                    |           |                    |            |            |            |

| REF. | DESIGNATION              | ALHX40                 | ALH50                  | ALH65                  | ALHX65                 | ALHX80                 | ALH80                  | ALH100                 | ALH125                 |
|------|--------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|
| 1    | CASING                   | ALHX400117-00-00       | ALH650117-00-STD       | ALH650117-00-STD       | ALHX650117-00-STD      | ALHX800111             | ALH800110              | ALH1000110             | ALH1250110             |
| 2    | COVER                    | ALHX400211             | ALH650211              | ALH650211              | ALHX650201-00-00       | ALHX800200             | ALH800210              | ALH1000211             | ALH1250210             |
| 3    | WHEEL                    | ALHX400310             | ALH650310              | ALH650310              | ALHX650317-00-00       | ALHX800311             | ALH800310              | ALH1000310             | ALH1250310             |
| 4    | SHIM                     | ALHX400400             | ALH650400              | ALH650400              | ALHX650402-00-00       | ALHX800400             | ALH800400              | ALH1000400             | ALH1250400             |
| 5    | SHOE CAST IRON           | ALHX400530             | ALH500530              | ALH650530              | ALHX650517-00-00       | ALHX800540             | ALH800530              | ALH1000540             | ALH1250530             |
| 5    | SHOE PPH                 |                        |                        |                        | ALHX650517-00-00       |                        |                        |                        |                        |
| 6    | SLEEVE                   | ALHX400600             | ALH500600              | ALH650600              | ALHX650620-00-00       | ALHX800600             | ALH800600              | ALH1000600             | ALH1250600             |
| 7    | CLAMP SLEEVE             | ALHCL7090              | ALHCL100120            | ALHCL100120            | ALHCL110130            | ALHCL120140            | ALHCL150170            | -                      | -                      |
| 8    | CLAMP ON SLEEVE / HOSE   | ALHCL7479              | ALHCL8691              | ALHCL9297              | 38409                  | ALHCL122130            | ALHCL122130            | ALHCL162174            | ALHCL175187            |
| 9    | CLAMP ON HOSE            | ALHSL72ZN              | ALHSL94ZN              | ALHSL94ZN              | ALHSL400ZN             | ALHSL115ZN             | ALHSL145ZN             | ALHSL145ZN             | ALHSL675ZN             |
| 10   | COVER SEAL               | ALHCO61620             | ALHCO62048             | ALHCO62048             | ALHCO62236             | ALHCO62720             | ALHCO63235             | ALHCO63800             | ALHCO64800             |
| 12   | INSERT SS                | ALHX401200             | ALH501200              | ALH651200              | ALHX651200             | ALH801200              | ALH801200              | ALH1001200             | ALH1251200             |
| 12   | INSERT PPH               | ALHX401210             | ALH501210              | ALH651210              | ALHX651210             | ALH801210              | ALH801210              | ALH1001210             | ALH1251210             |
| 12   | INSERT PVD               | ALHX401220             | ALH501220              | ALH651220              | ALHX651220             | ALH801220              | ALH801220              |                        |                        |
| 14   | LUBRICANT                | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  | REF. TO LUBRICANT QTY  |
| 15   | SIGHT GLASS              | ALHX401500             | ALH651500              | ALH651500              | ALH651500              | ALH801500              | ALH801500              | ALH1001500             | ALH1251500             |
| 16   | HOSE                     | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL | REFER TO HOSE MATERIAL |
| 18   | BRACKET GALV CS          |                        |                        |                        |                        |                        |                        |                        |                        |
| 18   | BRACKET SS               |                        |                        |                        |                        |                        |                        |                        |                        |
| 18   | ANSI/DIN BRACKET GALV CS | ALHX401801-00-LG       | ALH501801-00-LG        | ALH651801-00-LG        |                        | ALHX801801-00-LG       | ALH801801-00-LG        | ALH1001801-00-LG       | ALH1251801-00-LG       |
| 18   | ANSI/DIN BRACKET SS 304  | ALHX401802-00-LG       | ALH501802-00-LG        | ALH651802-00-LG        | ALHX651802-01-LG       | ALHX801802-00-LG       | ALH801802-00-LG        | ALH1001802-00-LG       | ALH1251802-00-LG       |
| 18   | ANSI/DIN BRACKET SS 316  |                        |                        |                        |                        |                        | ALH801820              |                        |                        |
| 19   | HUB                      | ALHHU5080              | ALHHU6090              | ALHHU6090              | ALHHU302060            | ALHHU353590            | ALHHU353590            |                        |                        |
| 20   | BOLT ON PLATE            |                        |                        |                        | ALHBO1960              | ALHBO1990              | ALHBO1990              |                        |                        |
| 21   | FRAME CS L               |                        |                        |                        | ALH652100              |                        |                        |                        |                        |
| 21   | FRAME CS R               |                        |                        |                        | ALH652100              |                        |                        |                        |                        |
| 21   | FRAME SS L               |                        |                        |                        | ALH652100              |                        |                        |                        |                        |
| 21   | FRAME SS R               |                        |                        |                        | ALH652100              |                        |                        |                        |                        |
| 21   | COMPLETE FRAME           | ALHX402100             | ALH652100              | ALH652100              | ALH652100              | ALHX802100             | ALH802100              | ALH1002100             | ALH1252110             |
| 22   | LIFT RING                | ALHEYM12               | ALHEYM16ZN             | ALHEYM16ZN             | ALHEYM16ZN             | ALHEYM20               | ALHEYM20               | ALHEYM24ZN             | ALHEYM24ZN             |
| 23   | OIL PLUG                 | ALHPL13GSS             | ALHPL1GSS              | ALHPL1GSS              | ALHPL1GSS              | ALHPL1GSS              | ALHPL1GSS              | ALHPL1GSS              | ALHPL112GSS            |
| 24   | CIRCLIPS                 |                        |                        |                        |                        |                        |                        |                        |                        |
| 25   | SEAL FLANGE              |                        |                        |                        | ALH802501-00-00        | ALH802501-00-00        | ALH802501-00-00        | ALH802501-00-00        | ALH1252501-BA120       |



# ALH

## Characteristics / Technical Specifications

### 9.4 - ALH PUMP PARTS LIST (see specific exploded view)

| REF. | DESIGNATION                | ALHX40          | ALH50          | ALH65          | ALHX65            | ALHX80           | ALH80            | ALH100           | ALH125           |
|------|----------------------------|-----------------|----------------|----------------|-------------------|------------------|------------------|------------------|------------------|
| 26   | SHAFT SEAL                 | ALHSH6080       | SH-7085-ASP-15 | SH-7085-ASP-15 | SH-7085-ASP-15    | SH-100130-ASP-15 | SH-100130-ASP-15 | SH-110130-ASP-15 | SH-130150-ASP-15 |
| 27   | SEAL RING                  | ALHSE5060       | ALHSE6070      | ALHSE6070      | ALHSE6070         | ALHSE90100       | ALHSE90100       | ALHSE100110      | ALHSE12013030    |
| 28   | SHOE BOLT                  | SC1650HZN       | SC2060HZN      | SC2060HZN      | SC2060HZN         | SC2075HZN        | SC2090HZN        | SC20110HZN       | SC24110HZN       |
| 29   | SHOE BOLT WASHER           | WAMW16ZN        | WAMW20ZN       | WAMW20ZN       | WAMW20ZN          | WAMW20ZN         | WAMW20ZN         | WAMW20ZN         | WAMW24ZN         |
| 30   | SHOE CENTERING PIN         | ALHST0820       | ALHST1025      | ALHST1025      | ALHST1025         | ALHST1025        |                  |                  |                  |
| 31   | BOLT ON PLATE SCREW        |                 |                |                | SC1660CST129      | SC1660CST129     | SC1660CST129     |                  |                  |
| 32   | NUT FOR REF 31             |                 |                |                | NU16NYSS          | NU16NYSS         | NU16NYSS         |                  |                  |
| 33   | COVER BOLT                 | SC1220CSS       | SC1630CSS      | SC1630CSS      | SC1630CSS         | SC1630CSS        | SC1630CSS        | SC1630CSS        | SC2040CSS        |
| 34   | COVER BOLT WASHER          | WAM12ZSS        | WAM16MSS       | WAM16MSS       | WAM16MSS          | WAM16ZSS         | WAM16ZSS         | WAM16ZSS         | WAM20ZSS         |
| 35   | COVER STUD                 | 23500110        | 23500210       | 23500210       | 23500210          | 23500210         | 23500210         | 23500210         | 23500310         |
| 36   | NUT FOR REF 35             | NU12NYSS        | NU16NYSS       | NU16NYSS       | NU16NYSS          | NU16NYSS         | NU16NYSS         | NU16NYSS         | ALHNU20NY        |
| 37   | SIGHT GLASS BOLT           | SC0620CSS       | SC0620CSS      | SC0620CSS      | SC0620CSS         | SC0620CSS        | SC0620CSS        | SC0620CSS        | SC0620CSS        |
| 38   | WASHER FOR REF 37          | WAM06ZSS        | WAM06ZSS       | WAM06ZSS       | WAM06ZSS          | WAM06ZSS         | WAM06ZSS         | WAM06ZSS         | WAM06ZSS         |
| 39   | FRAME BOLT                 | SC1225HSS       | SC1630HSS      | SC1630HSS      | SC1630HSS         | SC2030HSS        | SC2030HSS        | SC2440HSS        | SC2440HSS        |
| 40   | WASHER FOR REF 39          | WAM16ZSS        | WAM16ZSS       | WAM16ZSS       | WAM16ZSS          | WAM20ZSS         | WAM20ZSS         | WAM24ZSS         | WAM24MSS         |
| 41   | GEARBOX STUD               | GUD939M1235-304 | GUD939M1240    | GUD939M1240    | SC1212STHCST      | GUD939M1650      | GUD939M1650      | GUD939M1650      | GUD939M1650      |
| 42   | NUT FOR REF 41             | NU12NYSS        | NU12NYZN       | NU12NYZN       | NU12NYZN          | NU16NYSS         | NU16NYZN         | NU16NYZN         | NU16NYZN         |
| 43   | SEAL FLANGE BOLT           |                 |                |                | SC1016CSS         | SC1016CSS        | SC1016CSS        | SC1016CSS        | SC1016CSS        |
| 46   | SIGHT GLASS SEAL           | ALHX404800      | ALH654800      | ALH654800      | ALH654800         | ALH804800        | ALH804800        | ALH1004800       | ALH1004800       |
| 47   | INLET & OUTLET FLANGE DIN  | ALH404700       | ALH504700      | ALH654700      | ALH654700         | ALH804700        | ALH804700        | ALH1004700       | ALH1254701       |
| 47   | INLET & OUTLET FLANGE ANSI | ALH404720       | ALH504720      | ALH654720      | ALH654720         | ALH804720        | ALH804720        | ALH1004720       | ALH1254720       |
| 48   | BRACKET BOLT               | SC1016CSS       | SC1220CSS      | SC1220CSS      | SC1220CSS         | SC1220CSS        | SC1620CSS        | SC1625CSS        | SC2030CSS        |
| 49   | BRACKET BOLT WASHER        |                 |                |                |                   |                  |                  |                  |                  |
| 51   | 90° BEND                   | ALHBEMF34SS     | ALHBEMF1SS     | ALHBEMF1SS     | ALHBEMF1SS        | ALHBEMF112SS     | ALHBEMF112SS     | ALHBEMF112SS     | ALHBEMF112SS     |
| 52   | BREATHING PLUG             | ALHPV34         | ALHPV1         | ALHPV1         | ALHPV1            | ALHPV112         | ALHPV112         | ALHPV112         | ALHPV112         |
| 59   | WHEEL BOLT WASHER          |                 |                |                |                   |                  |                  | ALH1005900       | ALH1255900       |
| 60   | WHEEL BOLT                 |                 |                |                |                   |                  |                  | SC2470HSS        | SC2450HSS        |
| 63   | LIFT RING ON COVER         |                 |                |                |                   | ALHX806301-00-00 | ALHEYCO1         | ALHEYCO1         | ALHEYCO1         |
| 64   | BOLT FOR REF 63            |                 |                |                |                   | SC1620CSS        | SC1620CSS        | SC1620CSS        | SC1620CSS        |
| 67   | O RING FOR SEAL FLANGE     |                 |                |                | ALHCO03450        |                  | ALHCO03450       | ALHCO03450       | ALHCO03745       |
| 70   | GEARBOX CENTRING FLANGE    |                 |                |                | ALHX657001-00-300 |                  | ALH807000        |                  |                  |
| 71   | COVER FLANGE               |                 |                |                |                   |                  |                  |                  |                  |
| 72   | WASHER for REF 41          | WAM12ZSS        | WAM12ZSS       | WAM12ZSS       | WAM12ZSS          | WAM16ZSS         | WAM16ZSS         | WAM16ZSS         | WAM16ZSS         |
| 73   | SPACER RING                |                 | ALH050R060.06  | ALH050R060.06  | ALH050SR060.06    | ALHX80SR090.13   | ALHX80SR090.13   | ALH100SR100.33   | ALH125SR120.07   |
| 74   | PLUG                       | ALHPL134GSS     | ALHPL1GSS      | ALHPL1GSS      | ALHPL1GSS         | ALHPL112GSS      | ALHPL112GSS      | ALHPL112GSS      | ALHPL112GSS      |
| 75   | O-RING FOR 73              |                 |                |                |                   |                  |                  | ALHCO03370       |                  |
| 76   | SPACER RING (ALH125 ONLY)  |                 |                |                |                   |                  |                  |                  | ALH125SR120.18   |
| 77   | WASHER FOR 59              |                 |                |                |                   |                  |                  | ASK ALBIN        | ASK ALBIN        |
| 78   | WASHER FOR LIFT RING 63    |                 |                |                |                   |                  | ASK ALBIN        | ASK ALBIN        | ASK ALBIN        |
| 79   | NUT                        |                 |                |                |                   |                  |                  |                  | ASK ALBIN        |
| 80   | WASHER                     |                 |                |                |                   |                  |                  |                  | ASK ALBIN        |
| 81   | GUDGEON                    |                 |                |                |                   |                  |                  |                  | ASK ALBIN        |
| 82   | SILENT BLOC                |                 |                |                |                   |                  |                  |                  | ASK ALBIN        |
| 83   | WASHER                     |                 |                |                |                   |                  |                  |                  | ASK ALBIN        |
| 84   | NUT                        |                 |                |                |                   |                  |                  |                  | ASK ALBIN        |





# ALH

## Characteristics / Technical Specifications

### 9.5 - ALH BEARING CASE PARTS LIST (see specific exploded view)

| REF. | DESIGNATION           | ALH 05<br>ALH10 | ALH15<br>ALH20 | ALH25 TO<br>ALH40 | ALHX40<br>TO<br>ALH65 | ALHX65 | ALHX80 | ALH80 | ALH100 | ALH125 |
|------|-----------------------|-----------------|----------------|-------------------|-----------------------|--------|--------|-------|--------|--------|
| 101  | BEARING CASE (ALHS)   | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 102  | SHAFT (ALHS)          | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 103  | ROLLER BEARING (ALHS) | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 104  | BALL BEARING (ALHS)   | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 105  | LIP SEAL (ALHS)       | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 106  | LIP SEAL (ALHS)       | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 107  | CIRCLIPS (ALHS)       | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 108  | GREASEER (ALHS)       | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 109  | SHAFT KEY (ALHS)      | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |
| 110  | SHAFT KEY (ALHS)      |                 |                |                   |                       | N/A    | X      | X     | X      | X      |
| 111  | PLUG (ALHS)           | X               | X              | X                 | X                     | N/A    | X      | X     | X      | X      |

### 9.6 - HOSE RUPTURE AND VACUUM SYSTEM PARTS LIST (see specific exploded view)

| REF. | DESIGNATION            | CAPACITIVE HOSE<br>RUPTURE DETECTOR | PRESSURE GAUGE<br>HOSE RUPTURE<br>DETECTOR | AUTOMATIC AIR<br>VACUUM SYSTEM | AIR OPERATED<br>VACUUM SYSTEM |
|------|------------------------|-------------------------------------|--------------------------------------------|--------------------------------|-------------------------------|
| 51   | 90° BEND               | X                                   | X                                          | X                              | X                             |
| 52   | VENT                   | X                                   |                                            | X                              | X                             |
| 200  | HEXAGON NIPPLE         | X                                   |                                            | X                              | X                             |
| 201  | TEE CONNECTION         | X                                   |                                            | X                              |                               |
| 202  | HEXAGON NIPPLE         | X                                   |                                            | X                              |                               |
| 203  | ADAPTOR                | X                                   | X                                          | X                              | X                             |
| 204  | AIR SUPPLY CHECK VALVE |                                     |                                            | X                              |                               |
| 205  | AIR SUPPLY CONNECTION  |                                     |                                            | X                              |                               |
| 206  | AIR SUPPLY HOSE        |                                     |                                            | X                              |                               |
| 207  | VACUUM FLANGE          |                                     |                                            | X                              |                               |



# ALH

## Characteristics / Technical Specifications

### 9.7 - LUBRICATION TABLE

The table indicates the quantity of lubricant necessary for every pump size. Employ only the ALBIN lubricant for ALBIN hose pumps. refer to §6.2 for lubricant emptying and filling.

#### LUBRICANT

L (gal)

| PUMPS                 | ALH 5-10      | ALH15-20       | ALH25       | ALH32      | ALH40      | ALHX40      | ALH50        | ALHX65      | ALH65        | ALHX80       | ALH80         | ALH100        | ALH125        |
|-----------------------|---------------|----------------|-------------|------------|------------|-------------|--------------|-------------|--------------|--------------|---------------|---------------|---------------|
| QUANTITY OF LUBRICANT | 0.2<br>(0.05) | 0.55<br>(0.14) | 2<br>(0.53) | 3<br>(0.8) | 3<br>(0.8) | 6<br>(1.59) | 13<br>(3.43) | 14<br>(3.7) | 13<br>(3.43) | 27<br>(7.13) | 40<br>(10.57) | 80<br>(21.13) | 120<br>(31.7) |

### 9.8 - SHOE SHIMMING TABLE

Refer to §6.5 to remove or add shims. The table below points out the necessary number of shims under every shoe according to the speed, pressure and the temperature of the product. Respect these indications scrupulously to optimize the hose life and to avoid a possible deterioration of the internal parts. For temperatures exceeds 60°C (140°F), withdraw one shim in comparison with the table below. For viscosities over 3000cP or concentrations exceeding 300g / l, withdraw one shim in comparison with the table below. For a suction lift higher than 4 meters, add one shim to the following figures.

**CAUTION:** Every shoe must include the same number of shims 0.5mm (0.02 inch).

| PUMP TYPE ALH25                              |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 40     | 0               |
|                                              | 40 to 160   | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 40     | 2               |
|                                              | 40 to 125   | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 40     | 3               |
|                                              | 40 to 105   | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 40     | 4               |
|                                              | 40 to 90    | 3               |

| PUMP TYPE ALH32                              |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 45     | 0               |
|                                              | 45 to 140   | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 45     | 2               |
|                                              | 45 to 140   | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 45     | 3               |
|                                              | 45 to 110   | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 45     | 4               |
|                                              | 45 to 80    | 3               |

| PUMP TYPE ALH40                              |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 40     | 0               |
|                                              | 40 to 160   | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 40     | 2               |
|                                              | 40 to 125   | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 40     | 3               |
|                                              | 40 to 105   | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 40     | 4               |
|                                              | 40 to 90    | 3               |

| PUMP TYPE ALHX40                             |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 40     | 0               |
|                                              | 40 to 120   | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 40     | 2               |
|                                              | 40 to 95    | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 40     | 3               |
|                                              | 40 to 75    | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 40     | 4               |
|                                              | 40 to 60    | 3               |



# ALH

## Characteristics / Technical Specifications

| PUMP TYPE ALH50                              |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 30     | 0               |
|                                              | 30 to 100   | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 30     | 2               |
|                                              | 30 to 65    | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 30     | 3               |
|                                              | 30 to 50    | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 30     | 4               |
|                                              | 30 to 42    | 3               |

| PUMP TYPE ALH65                              |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 30     | 0               |
|                                              | 30 to 90    | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 30     | 2               |
|                                              | 30 to 55    | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 30     | 3               |
|                                              | 30 to 47.5  | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 30     | 4               |
|                                              | 30 to 40    | 3               |

| PUMP TYPE ALHX65 AND ALHX80                  |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 25     | 0               |
|                                              | 25 to 65    | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 25     | 2               |
|                                              | 25 to 46    | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 25     | 3               |
|                                              | 25 to 40    | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 25     | 4               |
|                                              | 25 to 31    | 3               |

| PUMP TYPE ALH80                              |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 20     | 0               |
|                                              | 20 to 60    | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 20     | 2               |
|                                              | 20 to 47    | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 20     | 3               |
|                                              | 20 to 37    | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 20     | 4               |
|                                              | 20 to 31    | 3               |

| PUMP TYPE ALH100                             |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 15     | 0               |
|                                              | 15 to 50    | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 15     | 2               |
|                                              | 15 to 32.5  | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 15     | 3               |
|                                              | 15 to 25    | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 15     | 4               |
|                                              | 15 to 20    | 3               |

| PUMP TYPE ALH125                             |             |                 |
|----------------------------------------------|-------------|-----------------|
| Pressure bar (psi)                           | Speed - Rpm | Number of shims |
| $\Delta P \leq 5$ (72.5)                     | 0 to 10     | 0               |
|                                              | 10 to 35    | 0               |
| $5$ (72.5) $\leq \Delta P \leq 7.5$ (108.75) | 0 to 10     | 2               |
|                                              | 10 to 27.5  | 1               |
| $7.5$ (108.75) $\leq \Delta P \leq 10$ (145) | 0 to 10     | 3               |
|                                              | 10 to 25    | 2               |
| $10$ (145) $\leq \Delta P \leq 15$ (217.5)   | 0 to 10     | 4               |
|                                              | 10 to 20    | 3               |

### 9.9 - GENERATED NOISE AND TEMPERATURE

#### NOISE :

The ALBIN PUMPS do not generate more than 60dB during their operation.

#### TEMPERATURE :

The cover and the pump casing can become very hot due to the friction on the hose and liquid temperature. If you need to limit the pump temperature, please contact your ALBIN PUMP distributor.



# ALH

## Characteristics / Technical Specifications

### 9.10 - EXPANSIBLE HUB ASSEMBLY AND DISASSEMBLY: GENERALITIES


#### ASSEMBLY:

Slightly grease contact surfaces, threads, shaft and wheel bore and introduce the hub inside the wheel. Pre-tighten the screws and place this unit on the gearbox shaft and position according to the table §6.4.2 Cross-tighten the screws two or three times and tighten to the according torque §9.11 TORQUE AND FIGURES.


#### DISASSEMBLY:

Untighten the screws on the hub and place them in the unlock holes. Tighten the screws until the two elements of the hub disassemble and withdraw the wheel hub.


Unlock holes

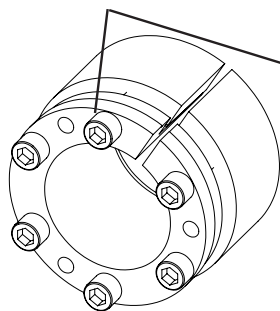

ALH05 to ALHX40  
2 part expansible hub.part

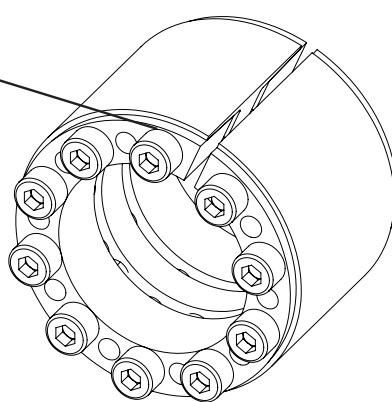

ALH50 and ALH65  
3 part expansible hub.part

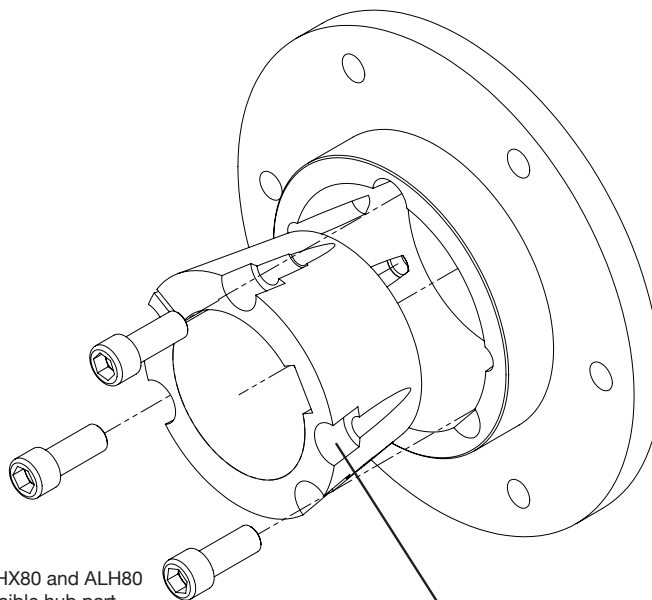

ALHX65, ALHX80 and ALH80  
1 part expansible hub.part


Unlock holes



# ALH

## Characteristics / Technical Specifications

### 9.11 - TORQUE FIGURES

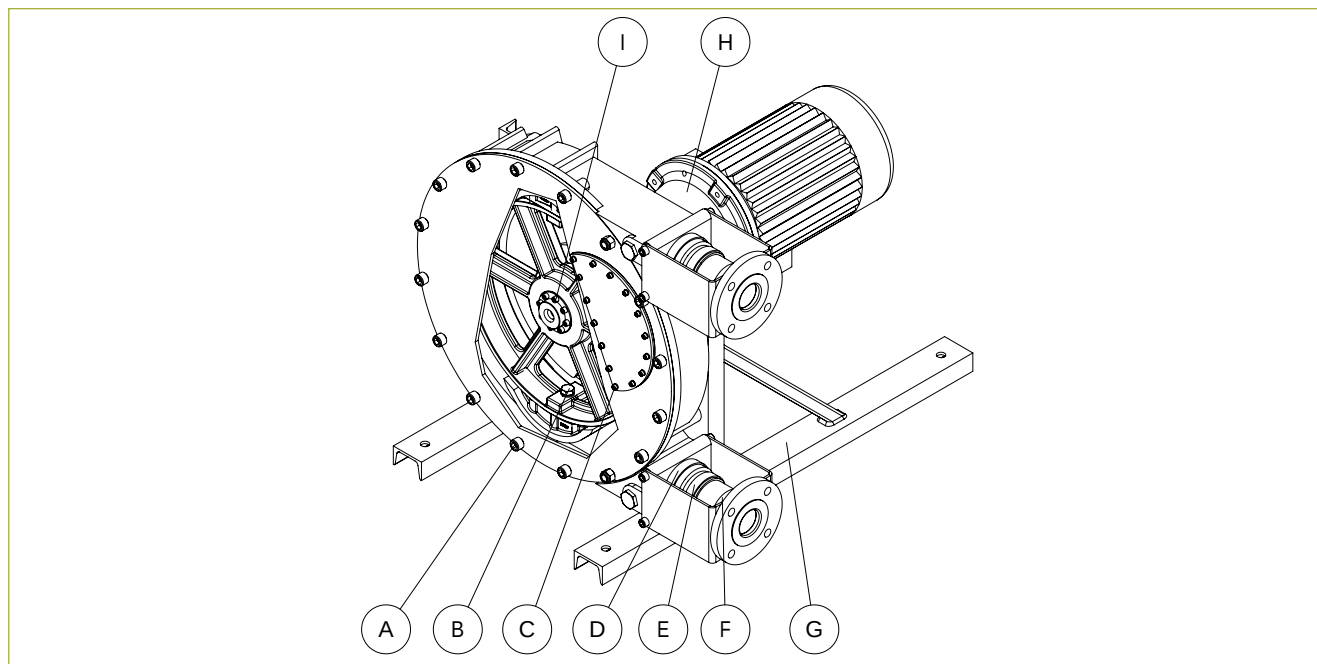

### TORQUE

Nm (Ft-lbs)

| ITEM | DESCRIPTION | MAX TORQUE IN FT-LBS (NM) - CERTIFIED TOOLING REQUIRED |           |                |            |                |             |             |             |             |             |
|------|-------------|--------------------------------------------------------|-----------|----------------|------------|----------------|-------------|-------------|-------------|-------------|-------------|
|      |             | ALH05<br>ALH20                                         | ALH25     | ALH32<br>ALH40 | ALHX40     | ALH50<br>ALH65 | ALHX65      | ALHX80      | ALH80       | ALH100      | ALH125      |
| A    | COVER       | 3.3 (2.4)                                              | 7.8 (5.7) | 27 (19.9)      | 27 (19.9)  | 65 (47.9)      | 65 (47.9)   | 65 (47.9)   | 65 (47.9)   | 127 (93.7)  | 127 (93.7)  |
| B    | SHOE        |                                                        | 46 (33.9) | 79 (58.3)      | 79 (58.3)  | 402 (296.5)    | 402 (296.5) | 402 (296.5) | 402 (296.5) | 691 (509.6) | 691 (509.6) |
| C    | WINDOW      |                                                        | 3.3 (2.4) | 3.3 (2.4)      | 3.3 (2.4)  | 3.3 (2.4)      | 3.3 (2.4)   | 3.3 (2.4)   | 3.3 (2.4)   | 3.3 (2.4)   | 3.3 (2.4)   |
| D    | CLAMP REF 7 | 4 (2.9)                                                | 4 (2.9)   | 4 (2.9)        | 4 (2.9)    | 4 (2.9)        | 4 (2.9)     | 4 (2.9)     | 4 (2.9)     | 4 (2.9)     | 4 (2.9)     |
| E    | CLAMP REF 8 | 12 (8.8)                                               | 16 (11.8) | 30 (22.1)      | 30 (22.1)  | 30 (22.1)      | 30 (22.1)   | 30 (22.1)   | 45 (33.2)   | 45 (33.2)   | 45 (33.2)   |
| F    | CLAMP REF 9 | 12 (8.8)                                               | 50 (36.9) | 50 (36.9)      | 50 (36.9)  | 50 (36.9)      | 50 (36.9)   | 50 (36.9)   | 50 (36.9)   | 50 (36.9)   | 50 (36.9)   |
| G    | FRAME       | 8 (5.9)                                                | 15 (11.0) | 27 (19.9)      | 27 (19.9)  | 65 (47.9)      | 65 (47.9)   | 127 (93.7)  | 127 (93.7)  | 220 (162.2) | 220 (162.2) |
| H    | GEARBOX     | 34 (25.0)                                              | 67 (49.4) | 116 (85.5)     | 116 (85.5) | 116 (85.5)     | 116 (85.5)  | 291 (214.6) | 291 (214.6) | 291 (214.6) | 291 (214.6) |
| I    | HUB         | 12 (8.8)                                               | 13 (9.6)  | 13 (9.6)       | 27 (19.9)  | 35 (25.8)      | 90 (66.3)   | 110 (81.1)  | 110 (81.1)  |             |             |



# ALH

## Characteristics / Technical Specifications

### 9.12 - WEIGHT ALH AND ALHS SERIES

#### WEIGHT kg (lbs)

| WEIGHT |                |                |                |               |                  |                  |                  |                  |
|--------|----------------|----------------|----------------|---------------|------------------|------------------|------------------|------------------|
| PART   | ALH05-10       | ALH15          | ALH20          | ALH25         | ALH32            | ALH40            | ALHX40           | ALH50            |
| CASING | 5 (11)         | 8 (17.6)       | 8 (17.6)       | 16 (35.3)     | 29 (63.9)        | 29 (63.9)        | 43 (94.8)        | 88 (194)         |
| WHEEL  | 1.2 (2.6)      | 3 (6.6)        | 3 (6.6)        | 4.3 (9.5)     | 7.7 (17)         | 7.7 (17)         | 12.9 (28.4)      | 27.5 (60.6)      |
| COVER  | 0.3 (0.7)      | 0.6 (1.3)      | 0.6 (1.3)      | 5 (11)        | 22.7 (50)        | 10.3 (22.7)      | 15.4 (33.9)      | 23.5 (51.8)      |
| FRAME  | 1.3 (2.9) (X2) | 1.7 (3.7) (X2) | 1.7 (3.7) (X2) | 6 (13.2) (X2) | 12.5 (27.6) (X2) | 12.5 (27.6) (X2) | 13.4 (29.5) (X2) | 15.9 (35.1) (X2) |
| SHOE   |                |                |                | 0.56 (1.2)    | 0.86 (1.9)       | 1.26 (2.8)       | 1.5 (3.3)        | 3.43 (7.6)       |
| HOSE   | 0.4 (0.9)      | 0.8 (1.8)      | 1.4 (3.1)      | 2 (4.4)       | 3 (6.6)          | 3 (6.6)          | 4 (8.8)          | 6 (13.2)         |

| WEIGHT |                  |                  |                  |                 |                   |             |
|--------|------------------|------------------|------------------|-----------------|-------------------|-------------|
| PART   | ALH65            | ALHX65           | ALHX80           | ALH80           | ALH100            | ALH125      |
| CASING | 88 (194)         | 111 (245)        | 140 (308.6)      | 240 (529.1)     | 375 (826.9)       | 450 (992.0) |
| WHEEL  | 27.5 (60.6)      | 26Kg (57 lb)     | 37.3 (82.2)      | 62.3 (137.4)    | 89 (196.2)        | 173 (381.5) |
| COVER  | 23.5 (51.8)      | 28Kg (62 lb)     | 41 (90.4)        | 60 (132.3)      | 89 (196.2)        | 203 (447.5) |
| FRAME  | 15.9 (35.1) (X2) | 15.9 (35.1) (X2) | 25.5 (56.2) (X2) | 48 (105.8) (X2) | 62.5 (137.8) (X2) | 274 (604.2) |
| SHOE   | 4.15 (9.1)       | 8Kg (18 lb)      | 10.4 (22.9)      | 10.4 (22.9)     | 9.26 (20.4)       | 30.4 (67.0) |
| HOSE   | 6 (13.2)         | 9Kg (20 lb)      | 15 (33.1)        | 20 (44.1)       | 30 (66.1)         | 45 (99.2)   |



# ALH

## Supplemental Instructions for ATEX Certified Materials

### 10 | SUPPLEMENTAL INSTRUCTIONS FOR ATEX CERTIFIED MATERIALS

Peristaltic hose pump

Complementary instructions for ATEX certified material.

Models: Albin Pump ALH and ALHS

**Pumping and operation in zone 0 is completely banned.**

The pumps are planned for a use in the following gas and dust explosive atmospheres.

II 2G : zone 1 and 2

II 3G : zone 2 only

II 2D : zone 1 and 2

II 3D : zone 2 only

The following instructions must be read jointly with:

- > All ATEX regulations for the country for which the pump is destined.
- > Decrees, laws, directives, application circulars, the standards, the code of practice, and any other document concerning its place of installation.

No responsibility whatsoever is taken for the non-observance of these instructions.

The ATEX form provided by the customer which stipulates all the data concerning his process and application of the pump is the only evidence in case of dispute. The non-observance of this data will disengage the responsibility of ALBIN PUMP.

This information is complementary to our general maintenance manual.

The installation of the material must be carried out by qualified and skilled personnel.

Our equipment is marked EEC with the ATEX 94/9/CE title.

Ensure compatibility between the indications being reproduced on the gauge, the present explosive atmosphere, the zone of use, ambient and surface temperatures.

Until the 30.06.2003, the equipment on the market could be equipped with accessories or (and) components certified according to the rules of CENELEC relating to the electric materials usable in explosive atmospheres of group II. From this date, the accessories or (and) component assembled equipping the motors with our pumps must have an EEC examination certificate.



# ALH

## Supplemental Instructions for ATEX Certified Materials

### SUMMARY

- 1 - Level of pumps certification
- 2 - Protection of the pumping part
- 3 - Protection of the transmission part
- 4 - Particular dispositions when using a frequency inverter
- 5 - Dry running the pumps
- 6 - Replacement of parts
- 7 - Solvents incompatible with pump seals
- 8 - Possible leakage of pumped liquid
- 9 - Checking lubricant level in the pump
- 10 - Drive of the pump
  - 10.1 Alignment of the pump and the drive (only for the ALHS pump)
  - 10.2 Flexible couplings
  - 10.3 Electric installation of the motor or the motor reducer of the pump
  - 10.4 ATEX characteristics of the motor or the motor reducer of the pump
- 11 - ATEX characteristics of the pumping installation
- 12 - Pumping vat of retention
- 13 - Marking of the pump





# ALH

## Supplemental Instructions for ATEX Certified Materials

### 1 - Pump certification levels

All ALBIN peristaltic pumps are certified with II 2G T4, II 3G T4 or II 2D T4 certification.

All ALBIN peristaltic pumps are certified with II 2G T4, II 3G T4 or II 2D T4 certification. The pumps are machines whose surface temperatures are very dependent on the temperature of the product that they pump. Moreover, the peristaltic pumps have “mechanical” heating due to the deformations of the hose, depending on the discharge pressure and speed of rotation of the pump. So, the level of protection II 2G T4, II 3G T4, II 3D T4 and II 3D T4 is obtained with the working limits determined at the reception of the ATEX form (see adjoined form).

Pumps ALH05, ALHS05, ALH10, ALHS10, ALH20 and ALHS20 are limited to a maximum discharge pressure of 7.5 bar (108.8 psi).

Pumps ALH25 to ALH125 and AHS25 to ALHS125 are limited to a maximum discharge pressure of 15 bar.

Going beyond the working limitations specified at the sale is regarded as an abnormal function of the pump. This can generate surface temperatures higher than the safe maximum surface temperatures recommended in the classification of temperature (T) for which the pump was certified. It is the responsibility of the operator to respect these working limits.

In order to use the pump industrially with the required safety levels, safety devices have been provided (see the chapters “Protection of the pumping part” and “Protection of the transmission part”).

### 2 - Protection of the pumping part

The heating of the pumping part is directly related to the functioning temperature (T) of the hose. The lifespan of the hose, which is the heart of any peristaltic pump, is strongly dependent on the working temperature (T) of the hose: it imposes the working limits of the ALBIN peristaltic pumps. Consequentially, the working temperature of the hose (and thus the heating of the pump) must be known and controlled, and it depends on the three following parameters:

- > Temperature of pumped product
- > Number of rotations of the pump
- > Discharge pressure



# ALH

## Supplemental Instructions for ATEX Certified Materials

### For pumps II 2G T4

Use of a PT100 temperature sensor only in a gas atmosphere.

The permanent control of the maximum surface temperature of the pump housing makes it possible to control the heating of the pump effectively.

In the event of dysfunction of the pump (excessive rotation, too high temperature of pumped product, unsuitable shimming of the shoes...), the temperature sensor will detect any passing over the critical temperature of the body and will stop the pump before the surface temperatures of the pump exceed the limit corresponding to the classification of temperature (T) of the pump.

The threshold of release of the temperature sensor will have to be adjusted from 0°C (32°F) to 75°C (165°F) more or less 5°C (41°F), with a 10°C (50°F) hysteresis.

### For the certified pumps II 3G T4, II 2D and II 3D :

#### For dust zones, D becomes IP6X

According to the specific requirements for ATEX materials group II category 3, the use of such materials in an exposable atmosphere is adapted only under normal working conditions of the known material.

Thus, the end-user must make sure that the pump is used under normal working conditions, and that the particular working limits indicated in this manual are respected.

### 3 - Protection of the transmission part

The reducer and the motor which motorize the pump must be used within the limits of working defined by the manufacturers of these materials. Going beyond these limits is likely to generate a risk of ignition of the atmosphere surrounding the material.

The ALBIN PUMP installations are in particular designed so that the normal working conditions of the pump do not generate an overload of the motor or the reducer.

So that the function limits of these components are not exceeded, even in case of dysfunction of the pump, the motor will have to be protected from the overcurrent, in accordance with the code of practice.



# ALH

## Supplemental Instructions for ATEX Certified Materials

### 4 - Particular dispositions when using a frequency inverter

The ALBIN peristaltic pumps have variable limits of working according to the discharge pressure, number of rotations of the pump and temperature of the pumped product. These working limits are mainly imposed by the heating of the hose, on which the lifespan is strongly dependent.

Within the framework of an application required to change the speed of the pump, the three following points will have to be checked:

- > Temperature of pumped product
- > Number of rotations of the pump
- > Discharge pressure

The maximum values of use will be fixed at the determination of the pump whose copy is in the appendix.

### 5 - Dry running the pumps

The ALBIN peristaltic pumps can function in the absence of liquid in the pump, without causing heating of the pump higher than the classified of temperature T, in particular for the period of starting-up of the pump.

In fact, dry running the pump with blocked inlets or outlets generates too high a demand on the pump hose, and can generate high internal temperatures because of the compression and decompression of the air locked up between the pump and the blocked opening.

This type of dysfunction is not controllable by a safety device (of sensor type) because the pump is dry and the mechanical constraints generated on the pump are low. Starting up the pump must thus be done after having checked that the inlet and outlet are not blocked.

Nevertheless, dry running is not a normal function of the pump and if it doesn't directly constitute a risk of ignition, it leads to premature wear and tear of the hose. This type of function must be limited as much as possible.

### 6 - Replacement of parts

The parts should be replaced only by original ALBIN parts which correspond to the configuration of origin of the pump. If necessary, the characteristics of the pump are modified and the ATEX certification of the pump is not applicable any more.

With each hose replacement, the adjustment of compression of the hose must be controlled and adapted to the instructions of adjustment registered in the handbook. The technicians who intervene on ATEX material must be ATEX trained and approved.



# ALH

## Supplemental Instructions for ATEX Certified Materials

### 7 - Solvents incompatible with the pump's seals

The user must make sure that the seals and the hose with which the pump is equipped are compatible with the pumped product and the products used in the cleaning of the pump.

### 8 - Possible leakages of pumped liquid

The possible leakages of liquid by the pump's seals do not generate a risk of ignition as long as the explosive atmosphere surrounding the material corresponds to the type of atmosphere for which it was planned.

Please verify the atmosphere in contact with the pump, materials located near the pump, and liquids being pumped are not likely to create an explosive effect for which the material was not envisaged.

The rupture of the hose, which is a wearing part, can involve important leakage of pumped liquid. A hose detector makes it possible to detect these leakages and will stop the pump if necessary.

### 9 - Checking of the lubricant level in the pump

An insufficient lubricant level in the pump can generate surface temperatures higher than the recommended limit of temperature (T) of the pump. Stop the pump and check the lubricant level every 1000 working hours.



# ALH

## Supplemental Instructions for ATEX Certified Materials

### 10 - Drive the pump

The maximum speed of rotation of the pumps must be respected (see certification of the pumps).

At the start or after any modification of the pumping installation, the speed of rotation of the pump must be controlled and must be lower than the maximum speed indicated in the instructions.

#### 10. 1 - Alignment of the pump and the drive (only for the ALHS pumps)

To carry out the alignment and the coupling, use a perfectly straight ruler to control offsetting and thickness gauges for angular misalignment.

It is important to control alignment with each stage of the installation as indicated below in order to make sure that none of these stages generate constraints on the group or the pump :

- after fixing the pump on the foundations
- after fixing the piping
- after the pump has functioned at a normal temperature of use

**IMPORTANT:** one should not rely on the flexible coupling to compensate for a misalignment.

#### 10. 2 - Flexible coupling

Certified ATEX flexible coupling must be used. These couplings must have a level of protection equivalent or higher than that of the pumping installation.

For the instructions of maintenance of certified ATEX flexible coupling of the ALBIN pumping installations, please refer to the technical note of the coupling.

#### 10. 3 - Electric installation of the motor or the motor reducer of the pump

Check the agreement between the indications of the motor gauge and the supply voltage.

For the connection of the motor to the electrical supply network, follow the indications of the manual supplied with the motor. Follow the assembly diagram of wiring, make sure the wires are adapted to the power consumption and make sure the contacts are tight.

The motors must be protected by suitable circuit breakers and fuses.  
Make sure the earth connections are properly made.

**Dry run the pump to make sure that the connections are correct and that the direction of rotation corresponds well with the suction and the discharge of the installation.**



# ALH

## Supplemental Instructions for ATEX Certified Materials

### 10.4 - Ground connection of pump

A bonding strip lug can be seen on the frames of ALH type pumps and on the pump housing and bearing case of the ALHS type pumps.

### 10.5 - ATEX characteristics of the motor or the motor reducer of the pump

The motor or motor reducer must have ATEX characteristics adapted to recognized use (group gas IIB, class of temperature T4) and must be explosion-proof.

### 11 - ATEX characteristics of the pumping installation

A pumping installation can be composed of materials (motor, reducer, sensors...) from which ATEX characteristics are different from those of the pump.

In this case, the group will have ATEX characteristics corresponding to ATEX characteristics of the component with the lowest level of protection.

### 12 - Pumping vat of retention

At a constant arrival of liquid in a vat of retention in an ATEX zone, the uninterrupted start-up can generate a classification in zone 0.

The case can only arise when the pump is used in the starting position. It is then imperative that the suction pipe always has liquid present so as not to create explosive conditions in the presence of fuel and combustible agents. Thus, the adjustment of the low point of the tank will have to be higher than the opening of the suction pipe.

That will always result in the presence of liquid and not of gas and liquid.

### 13 - Marking of the pump

The marking of the ALBIN PUMPS is of type:

ALBIN:

TYPE ALH                      or ALHS  
II 2 G T4 or                  II 3 G T4

N° series:

Year:

The marking of the ALBIN GROUPS is of type:

ALBIN:

Group ALH                      or ALHS  
II 2 G T4 or                  II 3 G T4

N° series:

Year:

In the case of a pumping group, ATEX certified materials will retain their original markings.



# ALH

## Security Form

### 11 | SECURITY FORM

In compliance with Health & Safety Regulations you, the user are required to declare the substances that have been in contact with the product(s) you are returning to ALBIN PUMP or any of its subsidiaries or distributors. Failure to do so will cause delays in servicing the item or in issuing a response. Therefore, please complete this form to ensure that we have the information before receipt of the item(s) being returned.

**A FURTHER COPY MUST BE ATTACHED TO THE OUTSIDE OF THE PACKAGING CONTAINING THE ITEM(S).**

You, the user, are responsible for cleaning and decontaminating the item(s) before returning them. Please complete a separate decontamination certificate for each item returned.

#### 1.0 COMPANY

Company name .....

Address .....

City .....

Postal code .....

Country .....

Telephone .....

Fax number .....

#### 2.0 PUMP

2.1 Serial number .....

2.2 Has the pump been used ?      YES      NO

If yes, please complete all the following paragraphs. If no, please complete paragraph 5 only

#### 3.0 Details of substances pumped

##### 3.1 Chemical Names

a) \_\_\_\_\_ b) \_\_\_\_\_ c) \_\_\_\_\_

##### 3.2 Precautions to be taken in handling these substances

a) \_\_\_\_\_ b) \_\_\_\_\_ c) \_\_\_\_\_

##### 3.3 Action to be taken in the event of human contact

a) \_\_\_\_\_ b) \_\_\_\_\_ c) \_\_\_\_\_

##### 3.4 Cleaning fluid to be used if residue of chemical is found during servicing

4.0 I hereby confirm that the only substances(s) that the equipment specified has pumped or come into contact with are those named, that the information given is correct, and the carrier has been informed if the consignment is of a hazardous nature.

#### 5.0 Signatory authorized

Signed \_\_\_\_\_

Name \_\_\_\_\_

Position \_\_\_\_\_

Date \_\_\_\_\_

*Remarks: to assist us in our servicing please describe any fault condition you have witnessed.*



# ALH

## Statement of CE Compliance

### 12 | STATEMENT OF CE COMPLIANCE

#### SECTION 1.0

Description of the pump:

Producer:

ALBIN PUMP

Z.I. du Meyrol

6, Avenue du Meyrol

F-26200 MONTELIMAR

FRANCE

TEL : +33.4.75.90.92.92

Type:

ALH05 - ALH10 - ALH15 - ALH20 - ALH25 - ALH32 - ALH40 - ALHX40 - ALH50 - ALH65 -  
ALHX80 - ALH80 - ALH100 - ALH125

Serial N°:

Description : Volumetric pump, hose pump

#### SECTION 2.0

Applicable directives:

Machinery directives:

2006/42/EC

#### SECTION 3.0

Label:



#### SECTION 4.0

##### Statement:

We declare under our responsibility that the equipment defined in section 1.0 satisfies in all the directives of the European Community specified in section 2.0 and in the French work legislation.

Thomas Mapelli

Date: XX XX XXXX





# ALH

## Safety and Control Measures to Respect Imperatively

### SAFETY AND CONTROL MEASURES TO RESPECT IMPERATIVELY

#### 1 - Mechanical risk

Ensure that all protections (cover, sight glass, ventilator hood, coupling protection) are in place before operating the pump. Disconnect the electricity supply before any mechanical intervention, except during a hose replacement. Hose replacement must be done with the pump cover closed. While replacing a hose, wear protective gloves and clothes and keep hands away from the brackets, suction and discharge flanges.

During the pump maintenance, check that the lifting points are correctly used.

The frame of the pump must be firmly fastened to the ground.

#### 2 - Electrical risk

Ensure that the electrical installation is conforming to the standards required in the country of use especially regarding earth and thermal protection.

#### 3 - Operational risk

Check the compatibility of the products to be pumped with:

- The peristaltic pump principle.
- The hose material.
- The inserts material.
- The shoe material.

ALBIN PUMP cannot guaranty the hose lifetime or the product loss due to a hose burst. It is the operator's responsibility to prevent pumped liquid loss with additional hose rupture detectors and or automatic shutdown valves. Check §2.4 conditions of guarantee for further information.

Ensure that the pump is compatible with the required process. Ensure that the pressure applied on the suction side is compatible with the pump. The rupture of the hose and its consequences must be taken in account:

- The pump casing can be filled with the pumped product.
- If the suction line is on load, this one can empty into the pump casing and leak out of the pump.
- If the discharge line is under pressure, the pumped product may be forced back into the pump casing and leak out of the pump.

A leakage detector as well as automatic shutdown valves are recommended in order to prevent such consequences. While draining the pump following a hose rupture, take note of the risk of pollution caused by the pumped product.

The pump, being volumetric, may suffer dangerously high pressure by even partial blockage of the discharge line. Ensure that all protections have been made regarding this aspect.

Before each use, check the direction of rotation of the pump. While placing the pump under vacuum, mount window screws using an airtight glue to avoid air leakage.

Albin Pump ALH Instruction Manual ■ Albinpump.com ■ albinpump@irco.com 63

Distributed by:

[www.albinpump.com](http://www.albinpump.com)

[albinpump@irco.com](mailto:albinpump@irco.com)



### About Ingersoll Rand Inc.

Albin Pump is a brand of Ingersoll Rand and part of the Precision and Science Technologies (PST) business segment. PST consists of a portfolio of complementary, mission critical brands such as Milton Roy®, ARO®, LMI®, Albin Pump, Thomas®, Welch®, Haskel®, Dosatron®, YZ®, Williams®, MP® and Oberdorfer®.

At PST, we deliver solutions for precision dosing and transfer of high value fluids in various markets such as medical, food and beverage, water and hydrogen. For more information, visit [www.IRco.com](http://www.IRco.com).

We are committed to using environmentally conscious print practices

©2021 Ingersoll Rand  
PN 97999-1953  
REV: D